

NCAN-1 User's Manual

2025 Edition



Titan Electronics Inc.
Web: www.titan.tw

Contents

1.	INTRODUCTION	5
1.1	Key Features	6
1.2	Specifications.....	7
2.	PANEL LAYOUT OF NCAN-1.....	9
3.	CONNECTING THE HARDWARE.....	10
3.1	Step 1 – Connecting to the Network	10
3.2	Step 2 – Connecting the Power	10
3.3	Step 3 – Connecting to a CAN Device	10
3.4	CAN Bus Pin-out for DB9 connector	11
3.5	Enabling the +5V 100mA power for external devices	11
3.6	Termination Resistors	11
3.7	Hardware Reset Button.....	11
3.8	Changing CAN Port Operation Mode in NCAN-1.....	12
3.9	LED Indicators.....	14
4.	CONFIGURING NCAN-1 FOR THE FIRST TIME	15
4.1	Configuring Static IP Address	15
4.2	Opening the Web Console Interface of NCAN-1	16
4.3	Setting NCAN-1 to Work in DHCP Networks	17
5.	SETTING THE PROPER OPERATION MODE.....	18
5.1	Driver Mode.....	19
5.2	RFC2217 Server Mode.....	20
5.3	RFC2217 Client Mode	21
5.4	Pair Connection Mode	22
5.5	TCP Raw Server Mode.....	23
5.6	TCP Raw Client Mode.....	24
5.7	UDP Mode	25
6.	WEB CONSOLE CONFIGURATION INTERFACE.....	27
6.1	Port 1 Settings	28
6.2	System Settings.....	30
6.3	Firmware Update	32
6.4	Change Password.....	33
6.5	Accessible IP Settings.....	35
6.6	Reboot.....	37
7.	NCOM VIRTUAL SERIAL PORT MANAGER AND DRIVER INSTALLATION	38
7.1	NCOM Virtual Serial Port Manager and Virtual Serial Port Driver	38
7.2	Installing NCOM Virtual Serial Port Manager.....	39
8.	RUNNING NCOM VIRTUAL SERIAL PORT MANAGER.....	43
8.1	NCOM Virtual Serial Port Manager Functions.....	44
8.2	Manually Add Virtual Serial Port for NCAN.....	45

8.3	Manually Edit Existing Virtual Serial COM Ports for NCAN	47
8.4	Manually Remove Existing Virtual Serial COM Ports for NCAN	48
8.5	Refreshing Virtual Serial Port Information	49
8.6	Automatically Search for NCAN CAN to Ethernet Gateway	50
8.6.1	Selecting an NCOM Device to Read Parameters	52
8.6.2	Installing Virtual Serial Port Driver for NCAN CAN to Ethernet Gateway	53
8.6.3	Manually Search for NCAN CAN to Ethernet Gateway	55
8.6.4	Opening the Web Console Interface	56
8.6.5	Rebooting NCAN CAN to Ethernet Gateway	57
8.6.6	Restoring to Factory Defaults	58
8.6.7	Firmware Update Tool	59
8.7	Configuring NCAN CAN to Ethernet Gateway	61
8.7.1	Selecting an NCAN CAN to Ethernet Gateway to Configure Parameters	63
8.7.2	Device Status	64
8.7.3	COM Port Status	68
8.7.4	Device Control	73
8.7.5	Importing/Exporting Configuration Settings	80
9.	NCOM VIRTUAL SERIAL PORT MANAGER AND DRIVER UNINSTALLATION	84
9.1	Uninstalling NCOM Virtual Serial Port Manager and Virtual COM Port Driver	84
10.	FUNCTION DESCRIPTION	86
10.1	LED Indicators	86
10.2	ASCII Command Set	87
10.2.1	Command list	88
10.2.2	Transmitting an Extended Remote Request CAN Frame	93
11.	TOOLS	100
11.1	CANHacker	100
11.2	Titan CAN Test Program	107
11.3	Using Cyclades-Serial-Client with NCAN devices on Linux	116
11.4	CANopen	118
11.5	python-can	122
11.6	APPLICATION PROGRAMMING INTERFACE	123
11.6.1	CAN_Open	124
11.6.2	CAN_Close	126
11.6.3	CAN_Write	127
11.6.4	CAN_Read	128
11.6.5	CAN_Flush	129
11.6.6	CAN_Status	130
11.6.7	CAN_Version	132
11.7	Using the API in C#	136
11.8	Using the API in Visual Basic .NET	137

11.9	Using the API in Visual Basic 6.0.....	139
11.10	Using the API in Python.....	140
11.11	Using the API in LabVIEW.....	141
11.11.1	CAN_Main.vi.....	141
11.11.2	CAN_Open.vi.....	142
11.11.3	CAN_Close.vi.....	143
11.11.4	CAN_Write.vi.....	144
11.11.5	CAN_Read.vi.....	145

The computer programs provided with the hardware are supplied under a license. The software provided should be used only with the NCOM series hardware designed and manufactured by TITAN Electronics Inc.

Trademarks

TITAN, NCOM and the logos are registered trademarks of TITAN Electronics Inc. in Taiwan. Microsoft, Windows, Windows XP, Windows Vista, Windows Server, Windows 7, Windows 8, Windows 10 are trademarks of Microsoft Corporation. All other trademarks and brands are property of their respective owners.

Copyright

Copyright © TITAN Electronics Inc. 2023. All right reserved. Reproduction of the manual and software without permission is prohibited.

Disclaimer

TITAN Electronics Inc. provides this document and computer programs “as is” without warranty of any kind, either expressed or implied, including, but not limited to, its particular purpose. TITAN Electronics Inc. reserves the right to make improvements and changes to this user manual, or to the products, or the computer programs described in this manual, at any time.

Information provided in this manual is intended to be accurate and reliable. However, TITAN Electronics Inc. assumes no responsibility for its use, or for any infringements on the rights of third parties that may result from its use.

This product might include unintentional technical or typographical errors. Changes are periodically made to the information herein to correct such errors, and these changes are incorporated into new editions of the publication.

1. INTRODUCTION

References to NCAN in this document represent all NCAN CAN to Ethernet Gateway, unless stated otherwise.

NCAN is a network-based CAN to Ethernet Gateway. It is designed to control your serial devices located virtually anywhere through a TCP/IP or UDP/IP network connection. The serial device server can map TCP/IP connections and UDP broadcasts to a virtual serial port. Applications include accessing a faraway device for functions such as remote control and data transmission. NCAN serves as a transparent virtual serial port without limitations on operating systems and distances. The virtual serial port redirection uses the protocol known as RFC2217.

NCAN supports several operation modes, including Driver mode, RFC2217 Server/Client mode, Pair Connection mode, TCP Server/Client mode and UDP mode. It also supports Windows virtual serial port driver, allowing you to add two virtual serial ports in your Windows system to work over a TCP/IP network. The virtual serial port functions as a native Windows COM port and is compatible with Windows serial communication applications. It is installed in the Device Manager of the operating system.

Serial port operation mode can be easily changed in NCAN via software. This can be done using our Windows utility software or the web console interface.

NCAN CAN to Ethernet Gateway supports automatic IP configuration protocol (DHCP) and fixed static IP configuration via the handy web browser console. NCAN provides a utility software for Windows, called NCOM Virtual Serial Port Manager. This program can detect, manage and configure CAN to Ethernet Gateway in your network.

This manual covers three different models of two-port serial device server:

NCAN-1	One channel CAN to Ethernet Gateway
NCAN-1 PoE Ethernet	One channel CAN to Ethernet Gateway with Power over Ethernet
NCAN-1-ISO	One channel ISO CAN to Ethernet Gateway
NCAN-1-ISO PoE Ethernet	One channel ISO CAN to Ethernet Gateway with Power over Ethernet

1.1 Key Features

The NCAN-1 CAN to Ethernet Gateway has the following features:

- Adds one virtual CAN ports via network connection
- Supports network protocols such as TCP and UDP client/server
- CAN bus speed up to 1Mbits
- Provides DC +5V 100mA power for external devices
- Supports CAN 2.0A and CAN 2.0B protocols
- Supported CAN modes
 - Standard mode: normal operation on CAN bus
 - Listen mode: passive receiving of CAN frames
 - Echo mode: transmitter also receives sent frames (for testing purposes)
- Operation mode can be easily changed via our Windows utility software or the web console interface
- Firmware upgradable for future firmware revisions
- Supports virtual CAN port driver for Windows OS (Windows XP up to Windows 11)
- NCAN supports Driver Mode ,RFC2217 Server Mode, RFC2217 Client Mode, Pair Connection Mode, TCP Raw Server Mode, TCP Raw Client Mode and UDP Mode
- Supports pair connection mode for connecting two CAN to Ethernet Gateway over a network without a PC
- Supports multiclient with four clients
- UDP Mode supports Buffer Length and Timeout setting
- Easy-to-use Windows utility software for easy configuration and installation
- 10/100Mbps Ethernet with auto-detection
- Configuration via web console interface or utility software
- Windows utility software automatically finds NCAN CAN to Ethernet Gateway on the network
- Supports “reset” button for system reset and restoring to default settings
- LEDs indicating Ethernet port’s link and speed statuses
- LEDs indicate initialization and CAN bus status
- Virtual serial port drivers for Windows 11, 10, 8.1, 8, 7, Vista, 2003, XP
- Built-in +/-16kV ESD protection for all serial signals

1.2 Specifications

LAN	
Ethernet	10/100Mbps
Connector	RJ-45 connector
Protection	Built-in 1.5kV magnetic isolation

NCAN-1 CAN Interface	
No. of Ports	One
Connector	DB9 male connectors
CAN Bus Speed	5kbits to 1Mbits for CAN data transmit & receive
Signals	CAN_H, CAN_L, CAN_GND, CAN_V+
CAN Bus Controller	Bosch C_CAN module
LED	CAN bus data activity, CAN bus error
CAN Bus Mode	Standard mode: normal operation on CAN bus Listen mode: passive receiving of CAN frames Echo mode: transmitter also receives sent frames (for testing purposes)
Protection	+/-16 KV ESD protection for CAN signals

NCAN-1 PoE CAN Interface	
No. of Ports	One
Connector	DB9 male connectors
CAN Bus Speed	5kbits to 1Mbits for CAN data transmit & receive
Signals	CAN_H, CAN_L, CAN_GND, CAN_V+
CAN Bus Controller	Bosch C_CAN module
LED	CAN bus data activity, CAN bus error
CAN Bus Mode	Standard mode: normal operation on CAN bus Listen mode: passive receiving of CAN frames Echo mode: transmitter also receives sent frames (for testing purposes)
Protection	+/-16 KV ESD protection for CAN signals
Option	Power over Ethernet

NCAN-1-ISO CAN Interface	
No. of Ports	One
Connector	DB9 male connectors
CAN Bus Speed	5kbits to 1Mbits for CAN data transmit & receive
Signals	CAN_H, CAN_L, CAN_GND, CAN_V+
CAN Bus Controller	Bosch C_CAN module
LED	CAN bus data activity, CAN bus error
CAN Bus Mode	Standard mode: normal operation on CAN bus Listen mode: passive receiving of CAN frames Echo mode: transmitter also receives sent frames (for testing purposes)
Protection	+/-16 KV ESD protection for CAN signals 2500V galvanic isolation on CAN bus

NCAN-1-ISO PoE CAN Interface	
No. of Ports	One
Connector	DB9 male connectors
CAN Bus Speed	5kbits to 1Mbits for CAN data transmit & receive
Signals	CAN_H, CAN_L, CAN_GND, CAN_V+
CAN Bus Controller	Bosch C_CAN module
LED	CAN bus data activity, CAN bus error
CAN Bus Mode	Standard mode: normal operation on CAN bus Listen mode: passive receiving of CAN frames Echo mode: transmitter also receives sent frames (for testing purposes)
Protection	+/-16 KV ESD protection for CAN signals 2500V galvanic isolation on CAN bus
Option	Power over Ethernet


Software Features	
API Library	Supports C/C++, C#, VB.NET and LabVIEW
Utility	Management tool for Windows OS
OS Driver Support	Windows XP to Windows 11 OS Windows Server 2003 to 2022
Monitoring Tools	Supported by CANHacker, Titan CAN test program BUSMASTER

Power Requirement	
Power Input	9VDC to 48VDC
Power Consumption	400mA@12VDC

Environment	
Operating Temperature	0°C to 55°C (32°F to 131°F)
Storage Temperature	-20°C to 75°C (-4°F to 167°F)
Humidity	5% to 95% RH
Safety Approvals	CE, FCC

Mechanical	
Casing	SECC sheet metal (1mm)
Dimensions	95 × 71 × 22 mm (L × W × H) 100 × 91 × 22 mm with DB-9 connector and ears (L × W × H)
Weight	220g

2. PANEL LAYOUT OF NCAN-1

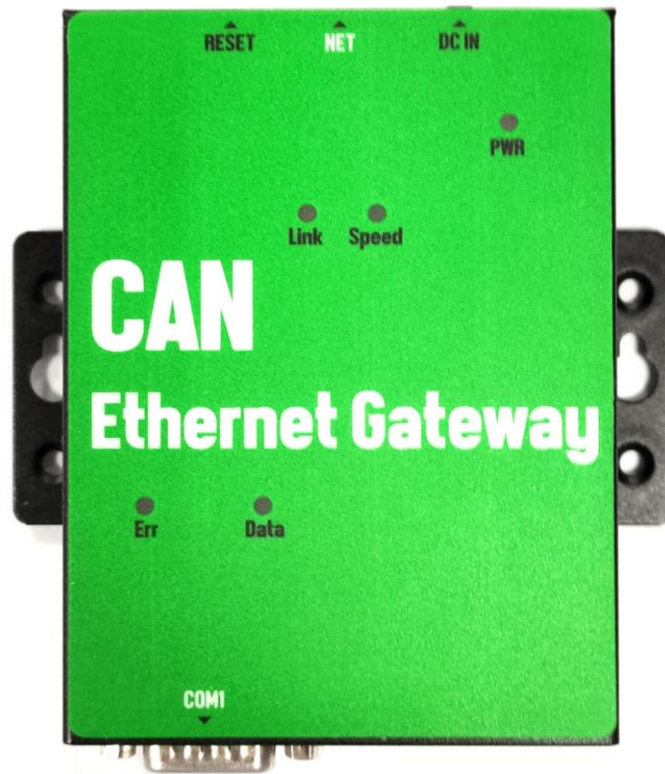


Note: The layouts of NCAN-1 PoE, NCAN-1-ISO and NCAN-1-ISO PoE is the same as the ones for NCAN-1.

3. CONNECTING THE HARDWARE

Before connecting the NCAN CAN to Ethernet Gateway for the first time, you may want to follow these instructions for testing purposes. We will describe how to connect to the network, power, your CAN devices, and state the functions of the LED indicators.

3.1 Step 1 – Connecting to the Network

First, connect an Ethernet cable to NCAN’s Ethernet port. Once the Ethernet cable is connected, connect the other end of the cable to your network. This can be a free Ethernet port on your DSL router, Ethernet hub/switch, or 802.11n router/base station. If you do not have a network, you can connect NCAN directly to the Ethernet port on your computer.

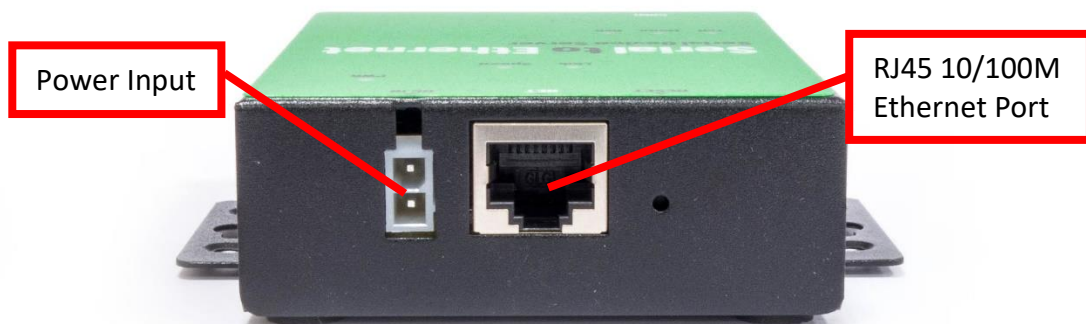


3.2 Step 2 – Connecting the Power

Connect the included power supply to NCAN’s power input connector. Once the NCAN is powered, the “PWR” LED turns ON. After a few seconds, the “PWR” LED will flash two times to indicate that the NCAN CAN to Ethernet Gateway is ready.

3.3 Step 3 – Connecting to a CAN Device

Connect the CAN data cable between NCAN and the CAN device. The NCAN-1’s CAN port provides CAN BUS 2.0A and CAN BUS 2.0B. The port uses a standard male DB9 pin assignment.

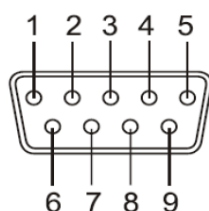

DB9 Male connector pin numbers

3.4 CAN Bus Pin-out for DB9 connector

Pin Number	Signals	Description
1	CAN_V+	Provides +DC 5V 100mA power (optional)
2	CAN_L	CAN_L bus line (dominant level is low)
3	CAN_GND	Signal ground
4	-	Reserved
5	-	Reserved
6	CAN_GND	Signal ground
7	CAN_H	CAN_H bus line (dominant level is high)
8	-	Reserved
9	CAN_V+	Provides +DC 5V 100mA power (optional)

3.5 Enabling the +5V 100mA power for external devices

Inside the unit, there is a 2-pin header block (JP2) which are jumpers for enabling 5V 100mA power for external devices.

JP3 Jumper	Function
ON	Enable DB9 pins 1 and 9 to provide a 5V 100mA power for external devices
OFF	Disable the 5V 100mA power

3.6 Termination Resistors

The CAN adapter does not provide CAN bus termination resistors. A CAN bus network requires 120Ω termination resistors at each end. Generally, this must be done in the cabling. Since this depends on the installation of connections, please check your CAN bus cable specification for proper impedance matching.

3.7 Hardware Reset Button

NCAN-1 has a hardware reset button for resetting the device. When the hardware reset button is pressed for a short duration, NCAN's power will be reset.

The hardware reset button can be used to restore all options to factory default states by pressing it until the "PWR" LED flashes.



3.8 Changing CAN Port Operation Mode in NCAN-1

CAN port operation mode of NCAN-1 can be easily changed via software. This can be done using our Windows utility software or the web console interface.

The web console interface is used to configure the CAN to Ethernet Gateway. Open any web browser and enter the device's IP address in the address bar to access the firmware's "HOME" page.

Under the firmware's "HOME" page, select "CAN SETTINGS" under "Port 1 Settings" and "Port 2 Settings". Under "Mode", select the proper serial port operation mode, check the "Make these the default settings" box and click "Submit" to set your device into the proper serial port operation mode.

TITAN
http://www.titan.tw/

- HOME
- PORT 1 SETTINGS**
 - CAN SETTINGS
 - NETWORK SETTINGS
- SYSTEM SETTINGS
- FIRMWARE UPDATE
- CHANGE PASSWORD
- ACCESSIBLE IP SETTINGS
- REBOOT

Status

Server Name: CAN_20102601
Product Name: NCAN-1 model
Serial Number: 20102601
Firmware Revision: 1.20
IP Address: 192.168.31.151
MAC Address: 00-04-D9-80-B6-CA
Uptime: 0 days 00:00:29

Port 1 CAN Settings
The Settings Only For Pair Connection Mode:

The current settings for port 1 may be changed using the form below. To make the new settings apply each time the NCOM is reset, ensure that "Make these the default settings" is checked before pressing the "Apply Changes" button. If this control is not checked, the changes are applied to the port but the existing defaults are used whenever the module is next reset.


Mode:	Current: Close	Updated: Close
Bit Rate:	6000k Bit/s	100K Bit/s
Acceptance Mask:	0x00000000	0x00000000
Acceptance Filter:	0x00000000	0x00000000
TimeStamp:	Off	Off

Make these the default settings.

Copyright © 2015-2016 TITAN Electronics Inc. All Rights Reserved.

The port operation mode can also be configured with our Windows utility software, NCOM Virtual Serial Port Manager.

After running NCOM Virtual Serial Port Manager, click on “Configuration” to enter the control menu page. Select an attached device to configure the virtual serial port parameters. You will find “Device Status”, “Port Status”, “Device Control” and “Configuration Import/Export” on the main window of NCOM Configuration.

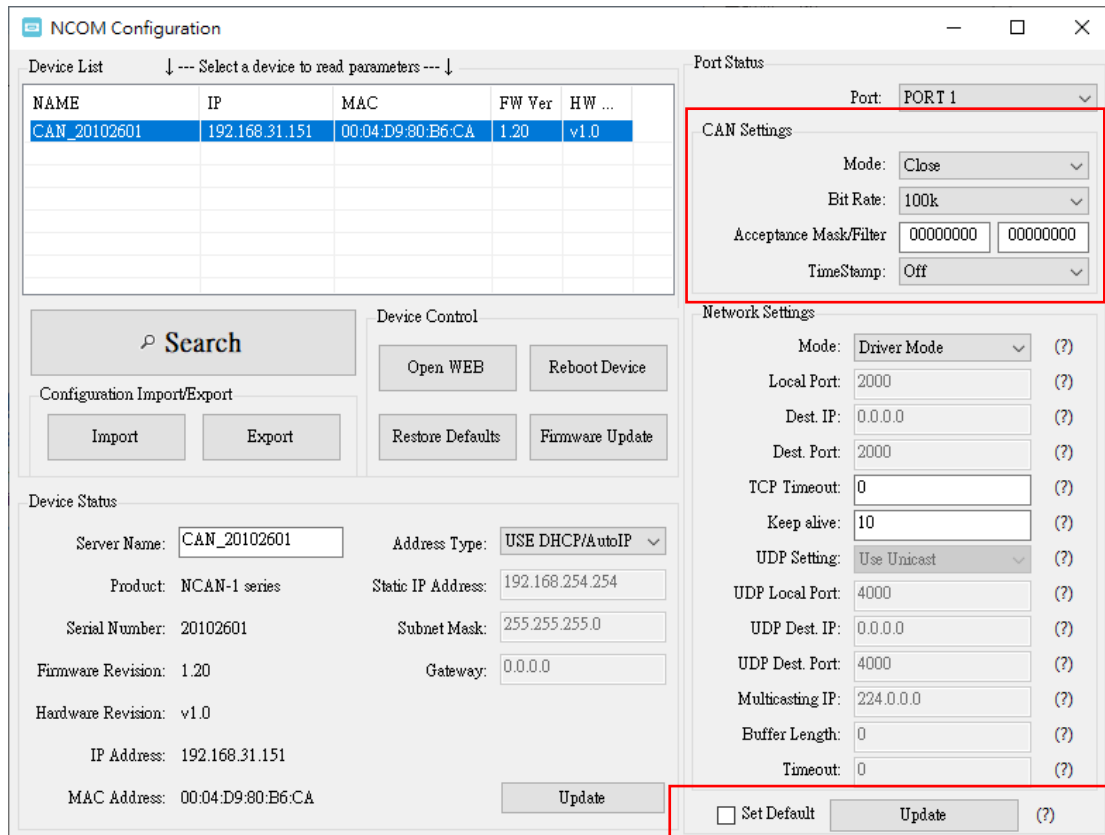

Under the “Port Status” window, select “Port 1”. Under “Mode”, select the proper port operation mode, then check “Set Default” and click “Update” to set your NCAN-1 in the proper serial port operation mode.

3.9 LED Indicators

The NCAN-1 has 5 LED indicators, as described in the following table:

LED Name	LED Color	LED Function
PWR	Red	Steady on: Power is on and functioning normally. Steady off: Power is off. Flashes two times to indicate the device is ready.
Link	Yellow	Steady on: The Ethernet link has established. Steady off: Ethernet cable is disconnected. Blinking: Ethernet data transmission is occurring.
Speed	Green	Steady on: The device is connected to a 100M Ethernet connection. Steady off: The device is connected to a 10M Ethernet connection.
data	Green	Blinking: The CAN bus is transmitting or receiving data.
Err	Red	Blinking: The CAN bus have error status.


4. CONFIGURING NCAN-1 FOR THE FIRST TIME

4.1 Configuring Static IP Address

When setting up your NCAN-1 for the first time, it is important to configure the IP address in order to operate in your network. The NCAN-1 products are configured with the following default private IP address:

Default private IP address: 192.168.254.254

You need to set up your client computer to static IP address manually. Please go to “Internet Protocol Version 4 (TCP/IPv4)” under “Local Area Connection Properties” to change the IP address to a static IP address. (This can be found from Start → Settings → Control Panel → Network and Internet → Network and Sharing Center → Change Adapter Settings → Local Area Connection → Properties).

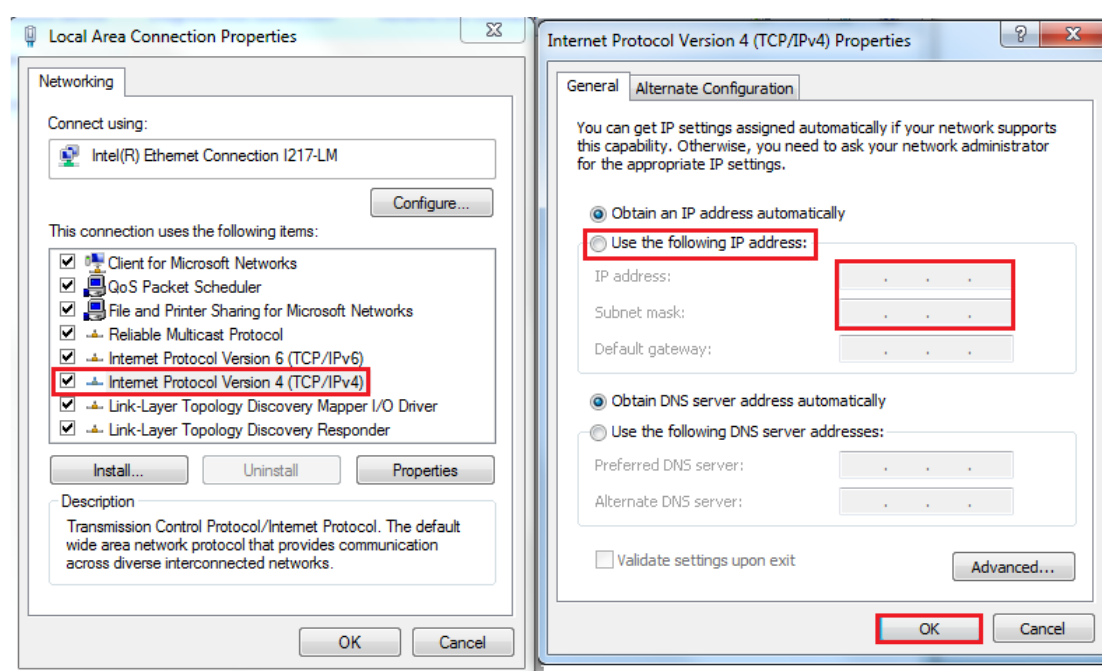


Under “Internet Protocol Version 4 (TCP/IPv4)”, select “Use the following IP address:” and enter the static IP address 192.168.254.XXX (such as 192.168.254.253) and Subnet mask (such as 255.255.255.0) then click “OK” to set your client computer to static IP address.

After setting your client computer to a static IP address and connecting to NCAN-1, you can configure NCAN-1 via its web console interface.

4.2 Opening the Web Console Interface of NCAN-1

NCAN-1 offers a web console interface to configure the CAN to Ethernet Gateway. Open any web browser and enter ip address in the address bar to access the “HOME” page of NCAN-1.

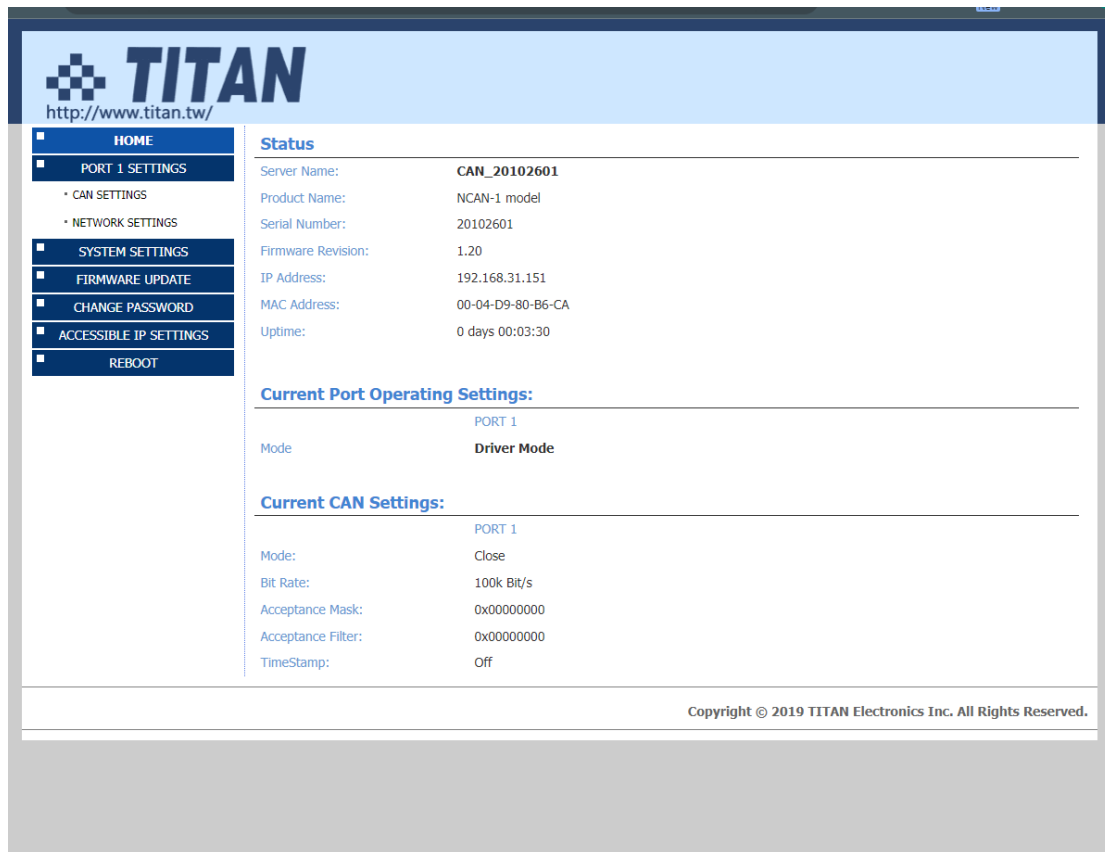

The screenshot displays the TITAN web console interface. At the top left, the TITAN logo and the URL <http://www.titan.tw/> are visible. A navigation menu on the left includes options like HOME, PORT 1 SETTINGS, SYSTEM SETTINGS, and REBOOT. The main content area is divided into sections: Status, Current Port Operating Settings, and Current CAN Settings. The Status section lists server information such as Server Name (CAN_20102601), Product Name (NCAN-1 model), Serial Number (20102601), Firmware Revision (1.20), IP Address (192.168.31.151), MAC Address (00-04-D9-80-B6-CA), and Uptime (0 days 00:03:30). The Current Port Operating Settings section shows Mode (Driver Mode) for PORT 1. The Current CAN Settings section lists Mode (Close), Bit Rate (100k Bit/s), Acceptance Mask (0x00000000), Acceptance Filter (0x00000000), and TimeStamp (Off). A copyright notice at the bottom reads: Copyright © 2019 TITAN Electronics Inc. All Rights Reserved.

Status	
Server Name:	CAN_20102601
Product Name:	NCAN-1 model
Serial Number:	20102601
Firmware Revision:	1.20
IP Address:	192.168.31.151
MAC Address:	00-04-D9-80-B6-CA
Uptime:	0 days 00:03:30


Current Port Operating Settings:	
PORT 1	
Mode:	Driver Mode

Current CAN Settings:	
PORT 1	
Mode:	Close
Bit Rate:	100k Bit/s
Acceptance Mask:	0x00000000
Acceptance Filter:	0x00000000
TimeStamp:	Off

4.3 Setting NCAN-1 to Work in DHCP Networks

Many networks are DHCP networks, which assign IP addresses for client computers and NCAN-1 automatically, in which case you would need to set the NCAN-1's IP address to DHCP/AutoIP mode.

Under the "HOME" page of NCAN-1's firmware, select "SYSTEM SETTINGS". Under "Address Type:" select "DHCP/AutoIP" and click "Update Settings". After clicking "OK", NCAN-1 will be set to DHCP mode.

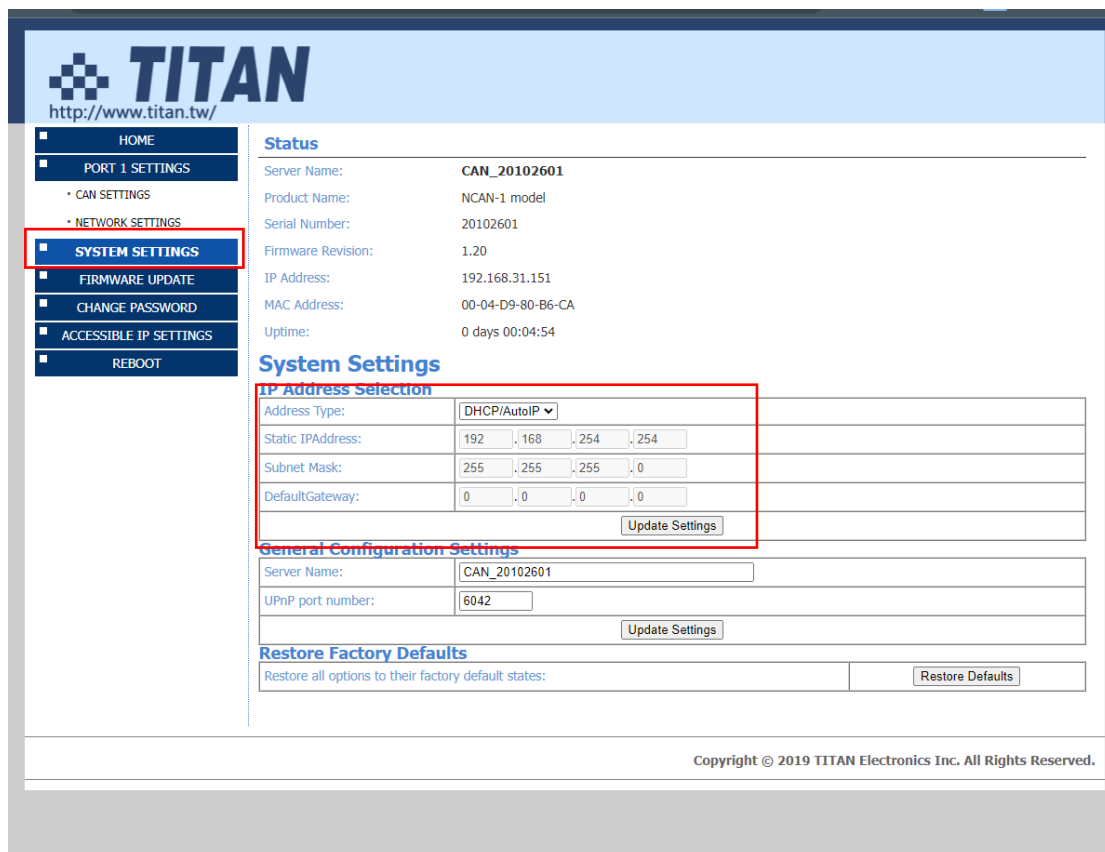

The screenshot displays the TITAN web interface for the NCAN-1 device. The left sidebar contains a navigation menu with the following items: HOME, PORT 1 SETTINGS, CAN SETTINGS, NETWORK SETTINGS, **SYSTEM SETTINGS** (highlighted with a red box), FIRMWARE UPDATE, CHANGE PASSWORD, ACCESSIBLE IP SETTINGS, and REBOOT. The main content area is titled "System Settings" and includes a "Status" section with the following information:

Server Name:	CAN_20102601
Product Name:	NCAN-1 model
Serial Number:	20102601
Firmware Revision:	1.20
IP Address:	192.168.31.151
MAC Address:	00-04-D9-80-B6-CA
Uptime:	0 days 00:04:54

Below the status section is the "System Settings" configuration area, which is also highlighted with a red box. It contains the "IP Address Selection" section with the following fields:

Address Type:	DHCP/AutoIP			
Static IP Address:	192	168	254	254
Subnet Mask:	255	255	255	0
Default Gateway:	0	0	0	0

Below the IP Address Selection section is the "General Configuration Settings" section with the following fields:


Server Name:	CAN_20102601
UPnP port number:	6042

At the bottom of the settings area is the "Restore Factory Defaults" section with a "Restore Defaults" button. The footer of the page contains the copyright notice: "Copyright © 2019 TITAN Electronics Inc. All Rights Reserved."

5. SETTING THE PROPER OPERATION MODE

NCAN-1 provides various operation modes, including Driver Mode, RFC2217 Server Mode, RFC2217 Client Mode, Pair Connection Master Mode, Pair Connection Slave Mode, TCP Raw Server Mode, TCP Raw Client Mode and UDP Mode. You need to choose the proper operation mode to control your serial devices located virtually anywhere through a network connection.


Under the “HOME” page of NCAN-1’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select the proper operation mode, check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 in the proper operation mode.

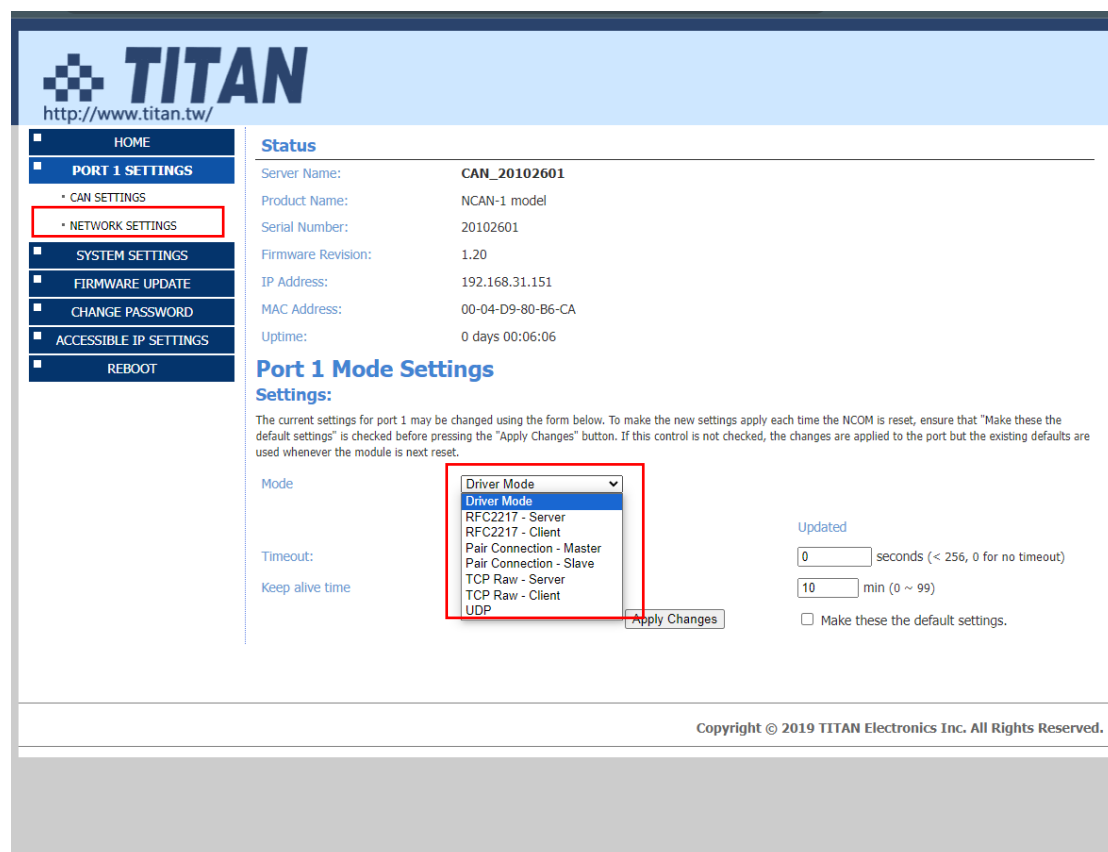

The screenshot displays the TITAN firmware web interface. The top navigation bar includes 'HOME', 'PORT 1 SETTINGS', 'CAN SETTINGS', 'NETWORK SETTINGS' (highlighted with a red box), 'SYSTEM SETTINGS', 'FIRMWARE UPDATE', 'CHANGE PASSWORD', 'ACCESSIBLE IP SETTINGS', and 'REBOOT'. The main content area shows the 'Status' section with fields for Server Name (CAN_20102601), Product Name (NCAN-1 model), Serial Number (20102601), Firmware Revision (1.20), IP Address (192.168.31.151), MAC Address (00-04-D9-80-B6-CA), and Uptime (0 days 00:06:06). Below this is the 'Port 1 Mode Settings' section, which includes a 'Mode' dropdown menu (open to show options: Driver Mode, RFC2217 - Server, RFC2217 - Client, Pair Connection - Master, Pair Connection - Slave, TCP Raw - Server, TCP Raw - Client, UDP), a 'Timeout' field (0 seconds), a 'Keep alive time' field (10 min), and an 'Apply Changes' button (highlighted with a red box). A checkbox for 'Make these the default settings' is also present. The footer contains the copyright notice: 'Copyright © 2019 TITAN Electronics Inc. All Rights Reserved.'

5.1 Driver Mode

Driver mode uses a virtual serial redirection driver installed on Windows systems. The virtual serial redirection driver establishes a transparent connection between host computers and serial devices. This allows users to communicate using serial hardware and serial communication software, with the virtual serial port acting as a native Windows COM port compatible with Windows serial communication applications.

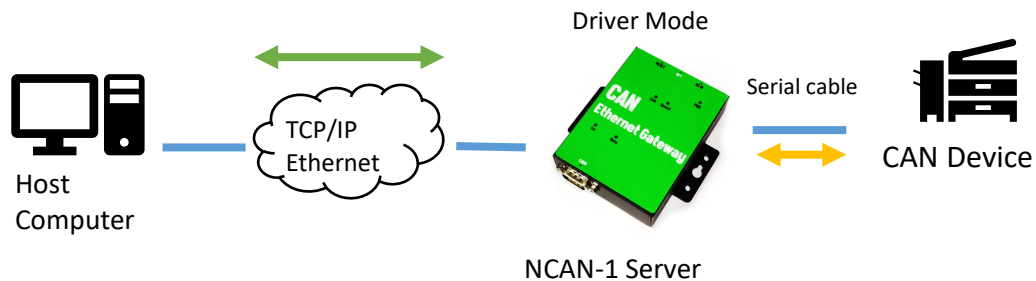


Under the “HOME” page of NCAN-1’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “Driver Mode” and check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 into Driver Mode.

Mode	<input type="text" value="Driver Mode"/>	
	Current	Updated
Timeout:	0 seconds	<input type="text" value="0"/> seconds (< 256, 0 for no timeout)
Keep alive time	10 min	<input type="text" value="10"/> min (0 ~ 99)
	<input type="text" value="Apply Changes"/>	<input type="checkbox"/> Make these the default settings.

5.2 RFC2217 Server Mode

RFC2217 Server Mode is similar to Driver Mode, which also uses a virtual serial redirection driver to establish a transparent connection between host computers and serial devices. The RFC2217 Mode defines general COM port control options based on the standard Telnet protocol, which allows users to use anything that supports RFC2217 protocol's virtual serial redirection driver (such as com0com + com2tcp for Windows OS and microcom for Linux OS). The virtual serial port functions as a native COM port.

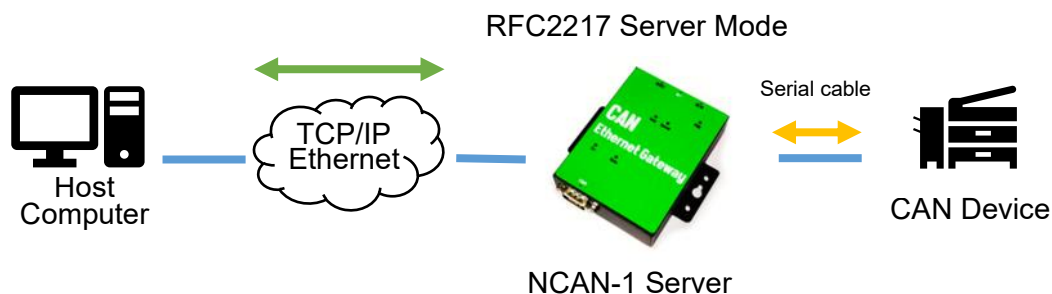


Under the “HOME” page of NCAN-1’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “RFC2217-Server” and check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 into RFC2217 Server Mode.

Mode	RFC2217 - Server	
	Current	Updated
Local Telnet Port Number:	2000	2000
Telnet Timeout:	0 seconds	0 seconds (< 256, 0 for no timeout)
Keep alive time	10 min	10 min (0 ~ 99)
	Apply Changes	<input type="checkbox"/> Make these the default settings.

5.3 RFC2217 Client Mode

In RFC2217 Client Mode, NCAN-1 can establish a TCP connection with a pre-determined host computer or a CAN to Ethernet Gateway working in RFC2217 Server Mode. You need to define the IP address (telnet server's IP) to establish a TCP connection with a pre-determined host computer or a CAN to Ethernet Gateway.

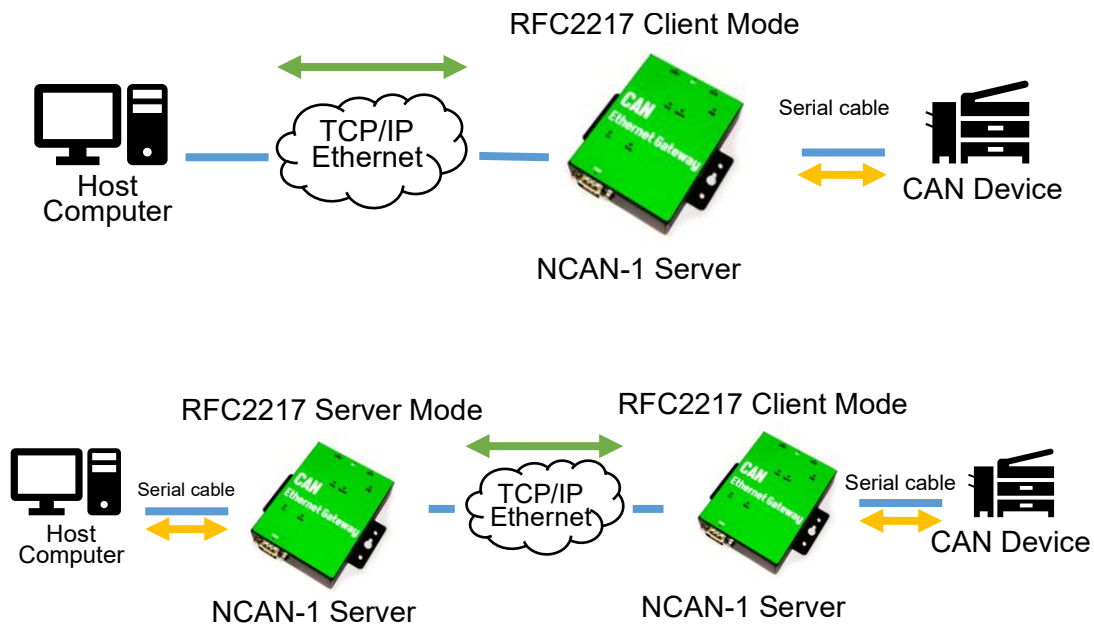


Under the “HOME” page of NCAN-1’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “RFC2217-Client” and type “Telnet Server’s IP” and “Port” respectively (e.g. 192.168.1.147 Port: 2000) to establish a TCP connection with a pre-determined host computer or a CAN to Ethernet Gateway. Check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 into RFC2217 Client Mode.

	Current	Updated
Mode	RFC2217 - Client	
Local Telnet Port Number:	2000	2000
Telnet Server IP:	N/A Port:N/A	0 . 0 . 0 . 0 Port: 2000
Keep alive time	10 min	10 min (0 ~ 99)
	<input type="button" value="Apply Changes"/>	<input type="checkbox"/> Make these the default settings.

5.4 Pair Connection Mode

Pair Connection Mode uses two NCAN CAN to Ethernet Gateway in tandem, with one NCOM device in Pair Connection Master Mode and the other in Pair Connection Slave Mode. Two NCAN CAN to Ethernet Gateway are then connected to each other through Ethernet. Both may either be connected to the same LAN or over a WAN (i.e. through one or more routers). Pair Connection Mode transparently transfers serial data without distance limitation.

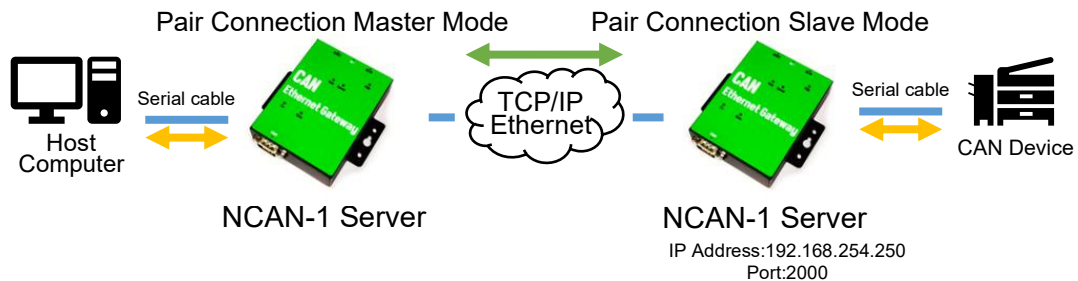


When setting two NCAN-1 devices in Pair Connection Mode, you need to set the “Destination IP Address” of the master NCAN CAN to Ethernet Gateway as the IP address of the slave NCAN CAN to Ethernet Gateway.

Under the “HOME” page of NCAN’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “Pair Connection - Master” and type “Destination IP address” and “Port” of the slave CAN to Ethernet Gateway respectively (e.g. 192.168.254.250 Port: 2000) to connect to a CAN to Ethernet Gateway in Pair Connection Slave Mode. Check the “Make these the default settings” box and click “Apply Changes” to set two NCAN devices in Pair Connection Mode.

Mode	Pair Connection - Master	
	Current	Updated
Local Port Number:	2000	2000
Destination IP Address:	N/A Port:N/A	192 . 168 . 254 . 250 Port: 2000
Keep alive time	10 min	10 min (0 ~ 99)
	Apply Changes	<input type="checkbox"/> Make these the default settings.

5.5 TCP Raw Server Mode

In TCP Raw Server Mode, NCAN-1 is configured with a unique IP & Port combination on a TCP/IP network. It waits passively to be contacted by a host computer. After a host computer establishes a transparent connection, it then proceeds with data transmission.

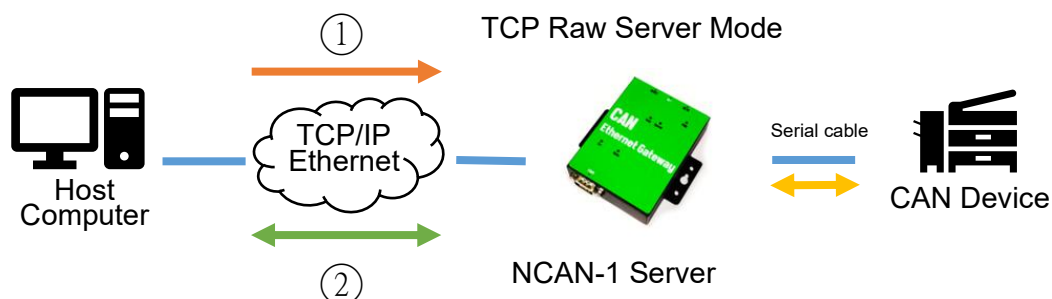

In the figure, the data transmission proceeds as follows:


1. The host computer requests a connection from NCAN-1 configured for TCP Raw Server Mode.
2. Once the connection is established, data can be transmitted in both directions – from the host computer to NCAN-1 and from NCAN-1 to the host computer.

Under the “HOME” page of NCAN-1’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “TCP Raw - Server” and check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 into TCP Raw - Server Mode.

Mode	TCP Raw - Server	
	Current	Updated
Local Telnet Port Number:	2000	2000
Telnet Timeout:	0 seconds	0 seconds (< 256, 0 for no timeout)
Keep alive time	10 min	10 min (0 ~ 99)
	<input type="button" value="Apply Changes"/>	<input type="checkbox"/> Make these the default settings.

5.6 TCP Raw Client Mode

In TCP Raw Client Mode, NCAN-1 can establish a TCP connection with pre-determined host computers when serial data arrives.

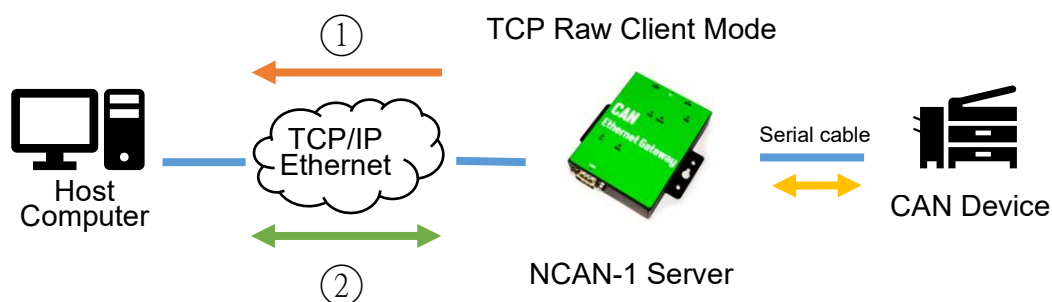

In the figure, the data transmission proceeds as follows:


1. NCAN-1 configured for TCP Raw Client Mode requests a connection from the host computer.
2. Once the connection is established, data can be transmitted in both directions – from the host computer to NCAN-1 and from NCAN-1 to the host computer.

Under the “HOME” page of NCAN-1 firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “TCP Raw - Client” and type “Telnet Server’s IP” and “Port” respectively (e.g. 192.168.1.147 Port: 2000) to establish a TCP connection with a pre-determined host computer or a CAN to Ethernet Gateway in TCP Raw Server Mode. Check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 into TCP Raw Client Mode.

Mode	TCP Raw - Client	
	Current	Updated
Local Telnet Port Number:	2000	2000
Telnet Server IP:	N/A Port: N/A	192 . 168 . 1 . 147 Port: 2000
Keep alive time	10 min	10 min (0 ~ 99)
	Apply Changes	<input type="checkbox"/> Make these the default settings.

5.7 UDP Mode

The UDP mode is a faster and more efficient mode. In UDP mode, you can unicast or multicast data from the serial device to one or multiple host computers or receive data from one or multiple host computers. The UDP mode is ideal for applications such as message display.

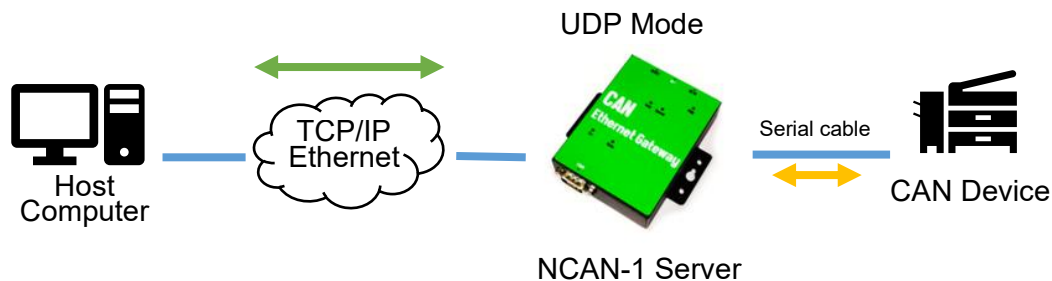

In the figure, UDP mode directly proceeds with data transmission with no connection required.


Under the “HOME” page of NCAN-1’s firmware, select “NETWORK SETTINGS” to find the “Port 1 Mode Settings” window. Under “Mode”, select “UDP” and choose “Use Unicast” or “Use Multicast” under “Multicast Setting”. When selecting “Use Unicast”, you need to type a “Destination IP Address” (such as 192.168.1.147) to establish a UDP connection with a pre-determined host computer or serial device in UDP unicasting mode. When selecting “Use Multicast”, you need to type “Multicasting IP Address” (such as 224.0.0.0) for UDP multicasting group. Check the “Make these the default settings” box and click “Apply Changes” to set your NCAN-1 into UDP Mode.

	Current	Updated
Mode	UDP	
Multicast Setting:	<input checked="" type="radio"/> Use Unicast	<input type="radio"/> Use Multicast
Local Listen Port Number:	4000	4000
Destination Port Number:	4000	4000
Destination IP Address:	0.0.0.0	192 . 168 . 1 . 147
Multicasting IP Address:	N/A	224 . 0 . 0 . 0
Buffer Length:	0 bytes	0 bytes (< 256, 0 for no setting)
Timeout:	0 ms	0 ms (< 1000, 0 for no timeout)
	<input type="button" value="Apply Changes"/>	<input type="checkbox"/> Make these the default settings.

Mode	<input type="text" value="UDP"/>	
	Current	Updated
Multicast Setting:	<input type="radio"/> Use Unicast	<input checked="" type="radio"/> Use Multicast
Local Listen Port Number:	4000	<input type="text" value="4000"/>
Destination Port Number:	4000	<input type="text" value="4000"/>
Destination IP Address:	0.0.0.0	<input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="147"/>
Multicasting IP Address:	N/A	<input type="text" value="224"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/>
Buffer Length:	0 bytes	<input type="text" value="0"/> bytes (< 256, 0 for no setting)
Timeout:	0 ms	<input type="text" value="0"/> ms (< 1000, 0 for no timeout)
	<input type="button" value="Apply Changes"/>	<input type="checkbox"/> Make these the default settings.

6. WEB CONSOLE CONFIGURATION INTERFACE

The web console interface allows configuration of NCAN-1. These settings include “PORT 1 SETTINGS” and “PORT 2 SETTINGS” (“CAN SETTINGS” & “NETWORK SETTINGS”), “SYSTEM SETTINGS”, “FIRMWARE UPDATE”, “CHANGE PASSWORD”, “ACCESSIBLE IP SETTINGS” and “REBOOT”.

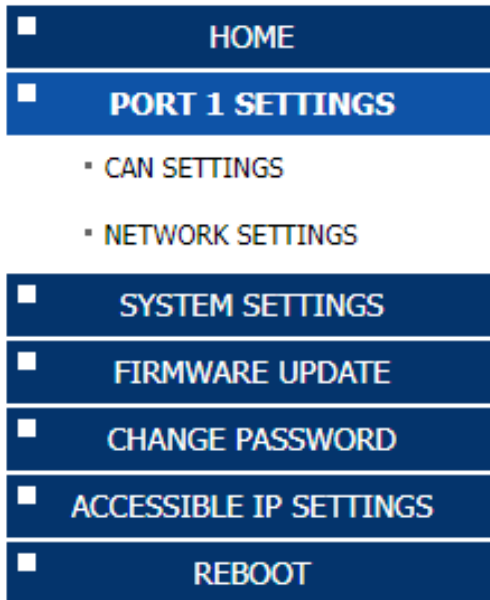

To access the web console interface to configure the device, open any web browser and enter NCAN-1's IP address in the address bar to access the “HOME” page of NCAN-1's firmware.

6.1 Port 1 Settings

The “PORT 1 SETTINGS” include “CAN SETTINGS” and “NETWORK SETTINGS”.

Click “CAN SETTINGS” to display the current CAN bus settings for NCAN-1. To modify the CAN bus settings for a particular port, select appropriate options located on the right side of “Port 1 CAN Settings”.

You can modify the following serial parameters for your NCAN-1 CAN to Ethernet Gateway:

CAN Parameters	Setting	Default Values
Mode	Close, Normal Mode, Listen Only, Loopback	Close
Bit Rate	10K to 1000K bit/s	100Kbit/s
Acceptance Mask	0x00000000~0x1FFFFFFF	0x00000000
Acceptance Filter	0x00000000~0x1FFFFFFF	0x00000000
TimeStamp	Off, On	Off

After you modify the CAN parameters for your NCAN-1, please check the “Make these the default settings” and click “Submit” to update the CAN parameters for your device.

Click “NETWORK SETTINGS” to display the current network settings for NCAN-1. To modify the operation mode, refer to Chapter 5 for more detailed information. You can also modify the network parameters of NCAN-1. To modify the network parameter settings, select appropriate options located on the right side of “Port 1 Mode Settings”. Options include “Local Telnet Port Number”, “Telnet Timeout”, and “Keep alive time”.

After you modify the network parameters for your NCAN-1, please check the “Make these the default settings” and click “Apply Changes” to update the network parameters for your device.

6.2 System Settings

The “SYSTEM SETTINGS” for NCAN-1 includes “IP Address Selection”, “General Configuration Settings” and “Restore Factory Defaults”.

System Settings	
IP Address Selection	
Address Type:	DHCP/AutoIP ▾
Static IPAddress:	192 . 168 . 254 . 254
Subnet Mask:	255 . 255 . 255 . 0
DefaultGateway:	0 . 0 . 0 . 0
<input type="button" value="Update Settings"/>	
General Configuration Settings	
Server Name:	CAN_123456790
UPnP port number:	6042
<input type="button" value="Update Settings"/>	
Restore Factory Defaults	
Restore all options to their factory default states: <input type="button" value="Restore Defaults"/>	

Click “Address Type”, located under “IP Address Selection”, to select IP address type (DHCP/AutoIP or Static IP) for NCAN-1. When you select “Static IP”, you need to enter the static IP address (such as 192.168.254.254) and Subnet Mask (such as 255.255.255.0) then click “Update Settings” to set your device to static IP address.

IP Address Selection	
Address Type:	Static IP ▾
Static IPAddress:	192 . 168 . 254 . 254
Subnet Mask:	255 . 255 . 255 . 0
DefaultGateway:	0 . 0 . 0 . 0
<input type="button" value="Update Settings"/>	

Note: The NCAN-1’s default IP address is 192.168.254.254

If you are working in a DHCP network, you need to select “DHCP/AutoIP” and click “Update Settings” to assign IP address for the NCAN-1 automatically.

You can change NCAN CAN to Ethernet Gateway’s name by modifying the “Server Name” under “General Configuration Settings”. You need to enter a new name (such as NCAN-1) and click “Update Settings” to set your CAN to Ethernet Gateway to a new name.

The NCAN-1’s firmware provides a function to restore settings to factory defaults. You can do so by clicking “Restore Defaults” under “Restore Factory Defaults”. After clicking “OK”, NCAN-1 will restore all options to factory default states.

Following are the values of default states:

Network Parameters	Default Values
Mode	Driver Mode
Timeout	0 seconds
Keep alive time	10 minutes
Address Type	Static IP
Static IP address	192.168.254.254
Subnet Mask	255.255.255.0

CAN Bus Parameters	Default Values
Mode	Close
Bit Rate	100Kbit/s
Acceptance Mask	0x00000000
Acceptance Filter	0x00000000
TimeStamp	Off

6.3 Firmware Update

please refer to [8.7.4.5](#) for instructions on how to launch the firmware update tool program to upgrade NCAN-1's firmware.

6.4 Change Password

Input the “Old Login Password”, “New Login Password” and “Confirm New Login Password” to change the login password. After clicking “Set New Password” the NCAN-1 will have password protection.

TITAN
http://www.titan.tw/

- HOME
- PORT 1 SETTINGS
 - CAN SETTINGS
 - NETWORK SETTINGS
- SYSTEM SETTINGS
- FIRMWARE UPDATE
- CHANGE PASSWORD**
- ACCESSIBLE IP SETTINGS
- REBOOT

Change Password

Password

Old Login Password:

New Login Password:

Confirm New Login Password:

When password protection is enabled, you need to input the “Password” then click “Login” to access NCAN-1’s firmware to configure the device.

Status

Server Name:	CAN_20102601
Product Name:	NCAN-1 model
Serial Number:	20102601
Firmware Revision:	1.20
IP Address:	192.168.31.151
MAC Address:	00-04-D9-80-B6-CA
Uptime:	0 days 00:24:44

Login

Password:

If you **forget the password**, the **ONLY** way to configure NCAN-1 is by using the reset button to restore factory defaults (press the hardware reset button until the “PWR” LED flashes). The factory default settings have password protection disabled, allowing you to log in without a password.

6.5 Accessible IP Settings

The NCAN-1's firmware provides accessible IP settings. It uses an IP address based filtering method to control accessible IP addresses.

Accessible IP settings allow you to pass or block remote host IP addresses to prevent unauthorized access. Access to NCAN-1 is controlled by IP address. If a host's IP address is in the accessible IP table, then the host will be allowed to access the device. You can allow one of the following rules by setting the accessible IP table parameter.

1. Only one host with a specific IP address can access NCAN-1.

Check the "Enable" checkbox then enter IP address and "255.255.255.255" for Netmask.

IP Address List

No	Enable	IPAddress	Netmask
1	<input checked="" type="checkbox"/>	192.168.1.122	255.255.255.255

In this example, only the host with an IP address of 192.168.1.122 can access the device.

2. Hosts on a specific subnet can access NCAN-1.

Check the "Enable" checkbox then enter IP address and "255.255.255.0" for Netmask.

IP Address List

No	Enable	IPAddress	Netmask
1	<input checked="" type="checkbox"/>	192.168.1.0	255.255.255.0

In this example, only hosts with an IP address from 192.168.1.1 to 192.168.1.254 can access the device.

IP Address List

No	Enable	IPAddress	Netmask
1	<input checked="" type="checkbox"/>	192.168.0.0	255.255.0.0

In this example, only hosts with an IP address from 192.168.0.1 to 192.168.255.254 can access the device.

3. Any host can access NCAN-1.

Disable this function by unchecking “Enable”.

IP Address List

No	Enable	IPAddress	Netmask
1	<input type="checkbox"/>	0.0.0.0	0.0.0.0
2	<input type="checkbox"/>	0.0.0.0	0.0.0.0
3	<input type="checkbox"/>	0.0.0.0	0.0.0.0
4	<input type="checkbox"/>	0.0.0.0	0.0.0.0
5	<input type="checkbox"/>	0.0.0.0	0.0.0.0
6	<input type="checkbox"/>	0.0.0.0	0.0.0.0

After you enter “IP address” and “Netmask” to set accessible IP for your NCAN-1 CAN to Ethernet Gateway, please check the “Make these the default settings” and click “Update Settings” to update the accessible IP settings table for NCAN-1.

TITAN
http://www.titan.tw/

Accessible IP Settings
 Make these the default settings.

IP Address List


No	Enable	IPAddress	Netmask
1	<input checked="" type="checkbox"/>	192.168.1.0	255.255.255.0
2	<input type="checkbox"/>	0.0.0.0	0.0.0.0
3	<input type="checkbox"/>	0.0.0.0	0.0.0.0
4	<input type="checkbox"/>	0.0.0.0	0.0.0.0
5	<input type="checkbox"/>	0.0.0.0	0.0.0.0
6	<input type="checkbox"/>	0.0.0.0	0.0.0.0

Copyright © 2019 TITAN Electronics Inc. All Rights Reserved.

You can click “Reset” to allow any host to access NCAN-1. The default accessible IP setting is to allow all hosts to access.

6.6 Reboot

You can click “Reboot” to reboot your NCAN-1 CAN to Ethernet Gateway.

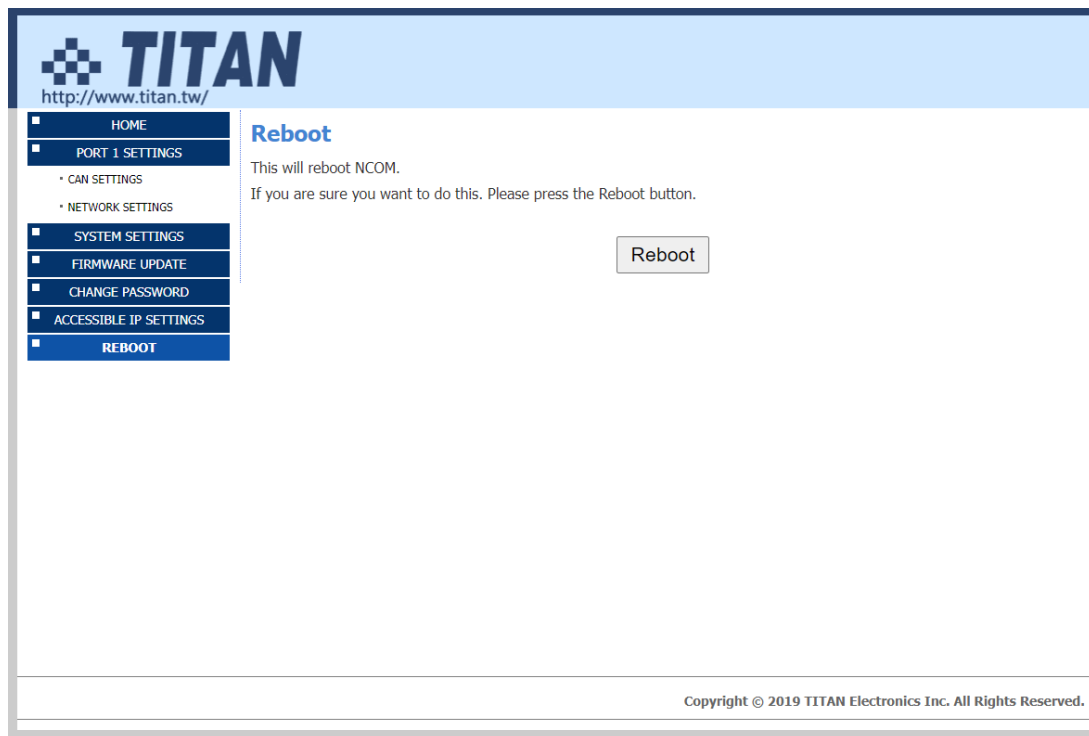

The screenshot displays the TITAN web interface. At the top left, the TITAN logo is shown with the URL <http://www.titan.tw/>. A navigation menu on the left includes: HOME, PORT 1 SETTINGS (with sub-items CAN SETTINGS and NETWORK SETTINGS), SYSTEM SETTINGS, FIRMWARE UPDATE, CHANGE PASSWORD, ACCESSIBLE IP SETTINGS, and REBOOT. The main content area is titled "Reboot" and contains the following text: "This will reboot NCOM. If you are sure you want to do this. Please press the Reboot button." A "Reboot" button is positioned to the right of this text. At the bottom right of the page, the copyright notice "Copyright © 2019 TITAN Electronics Inc. All Rights Reserved." is visible.


7. NCOM VIRTUAL SERIAL PORT MANAGER AND DRIVER INSTALLATION

7.1 NCOM Virtual Serial Port Manager and Virtual Serial Port Driver

Note: The virtual serial port driver is bundled with NCOM Virtual Serial Port Manager and is automatically installed when you install NCOM Virtual Serial Port Manager!



The NCOM Virtual Serial Port Manager is an advanced software-based solution that allows you to communicate with CAN to Ethernet Gateway over networks easily. Thus, any serial device connected to your NCOM CAN to Ethernet Gateway could be accessed from anywhere in the world (via internet or LAN) as if it were attached directly to the remote PC.

When the attached serial port device sends communication data, it is transmitted over TCP/IP network and back from the network to your serial device. NCOM Virtual Serial Port Manager has options to configure NCAN-1 with the options “Add” (add virtual serial port), “Edit” (edit virtual serial port parameters), “Remove” (remove virtual serial port), “Refresh” (refresh virtual serial port), “Search” (search all attached NCAN CAN to Ethernet Gateway), “Configuration” (configure virtual serial port parameters) and “Exit” (exit NCOM Virtual Serial Port Manager).


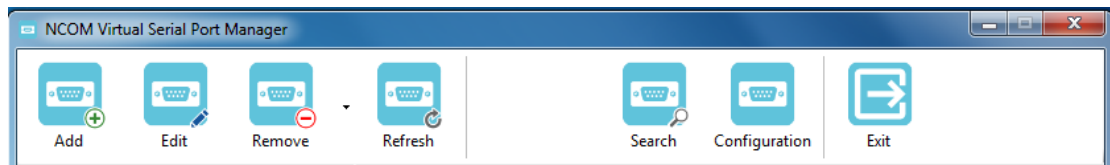


7.2 Installing NCOM Virtual Serial Port Manager


1. Insert the software CD into your CD-ROM or DVD-ROM drive.
2. Open files in the CD and double click "NCOM_setup" to install NCOM Virtual Serial Port Manager.
3. When the confirmation for "User Account Control" appears, click "Yes" and the "Setup - NCOM Virtual Serial Port Manager" message appears. Click X

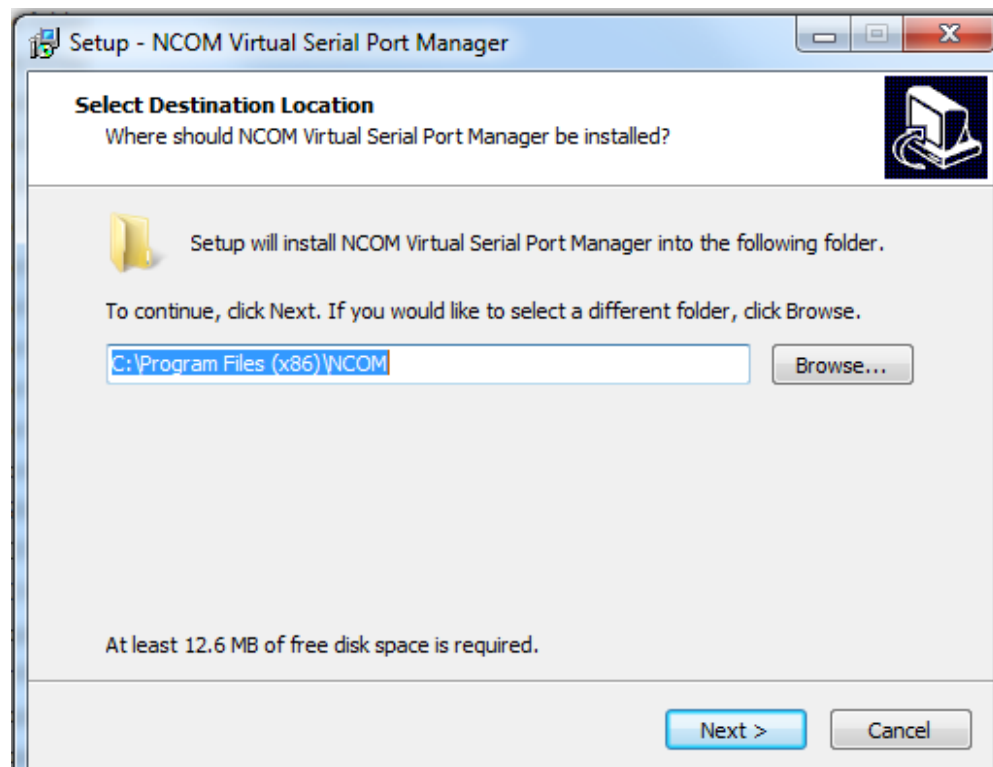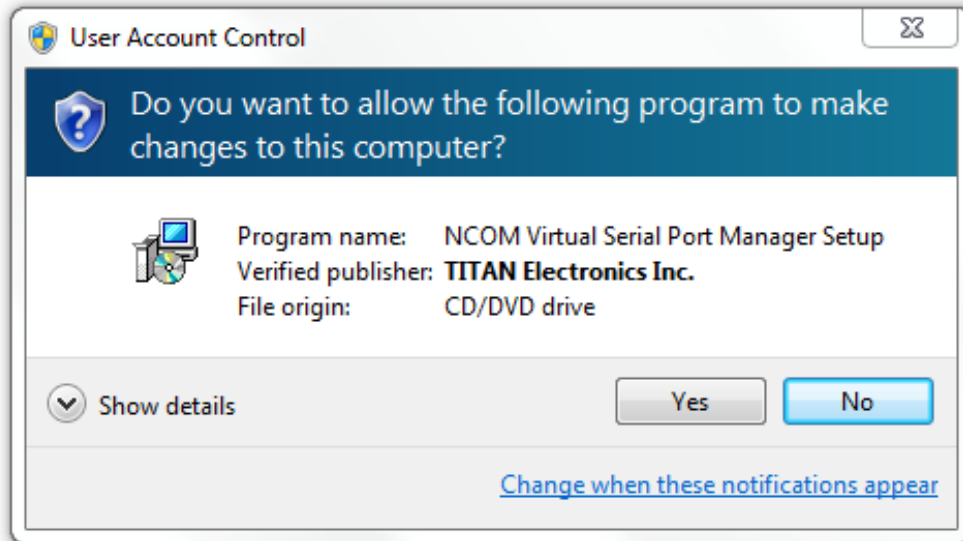


4. After you click “Next”, you will see following information. Click on “Next” and the “Ready to Install” message appears. Click “Install” to install NCOM Virtual Serial Port Manager.

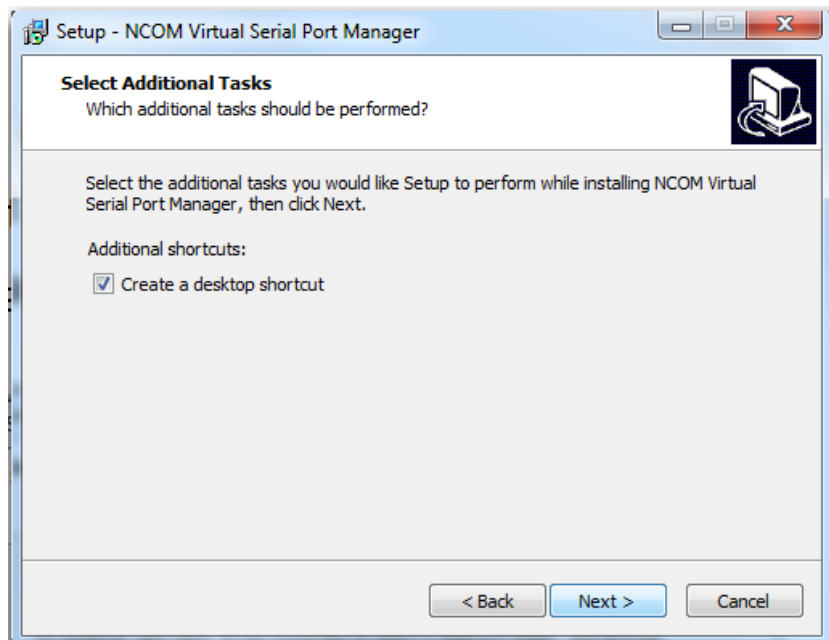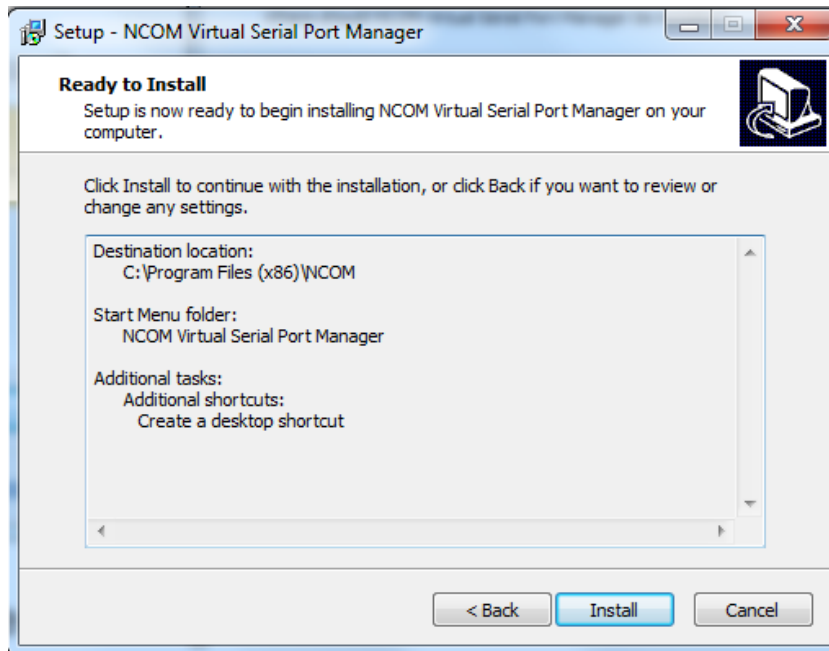


5. After you click “Install” to install NCOM Virtual Serial Port Manager and virtual serial port driver for NCAN CAN to Ethernet Gateway, you will see the following information.

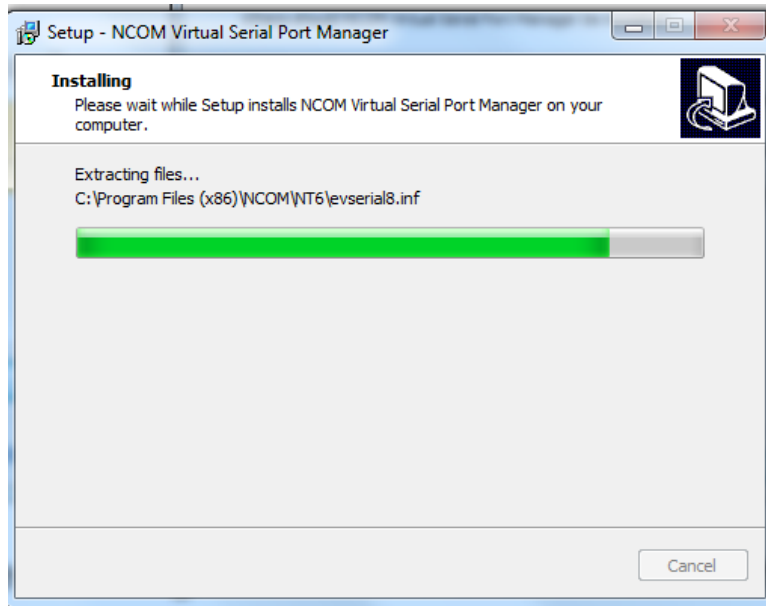


6. When the message “Completing the NCOM Virtual Serial Port Manager Setup Wizard” appears, click “Finish” to finish the installation and exit setup program.

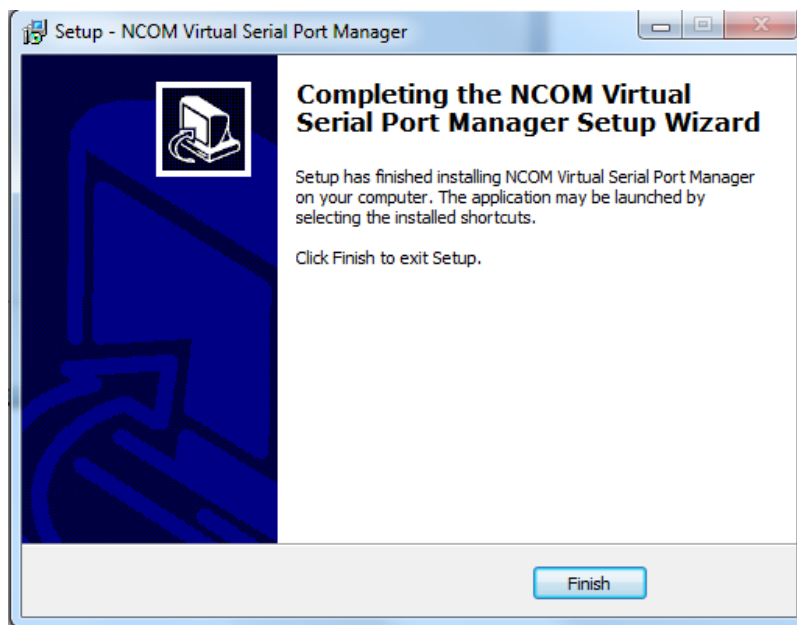

7. Double click the shortcut icon of “NCOM Virtual Serial Port Manager” on the desktop to launch NCOM Virtual Serial Port Manager.

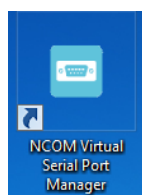


8. You will see the main window of NCOM Virtual Serial Port Manager.

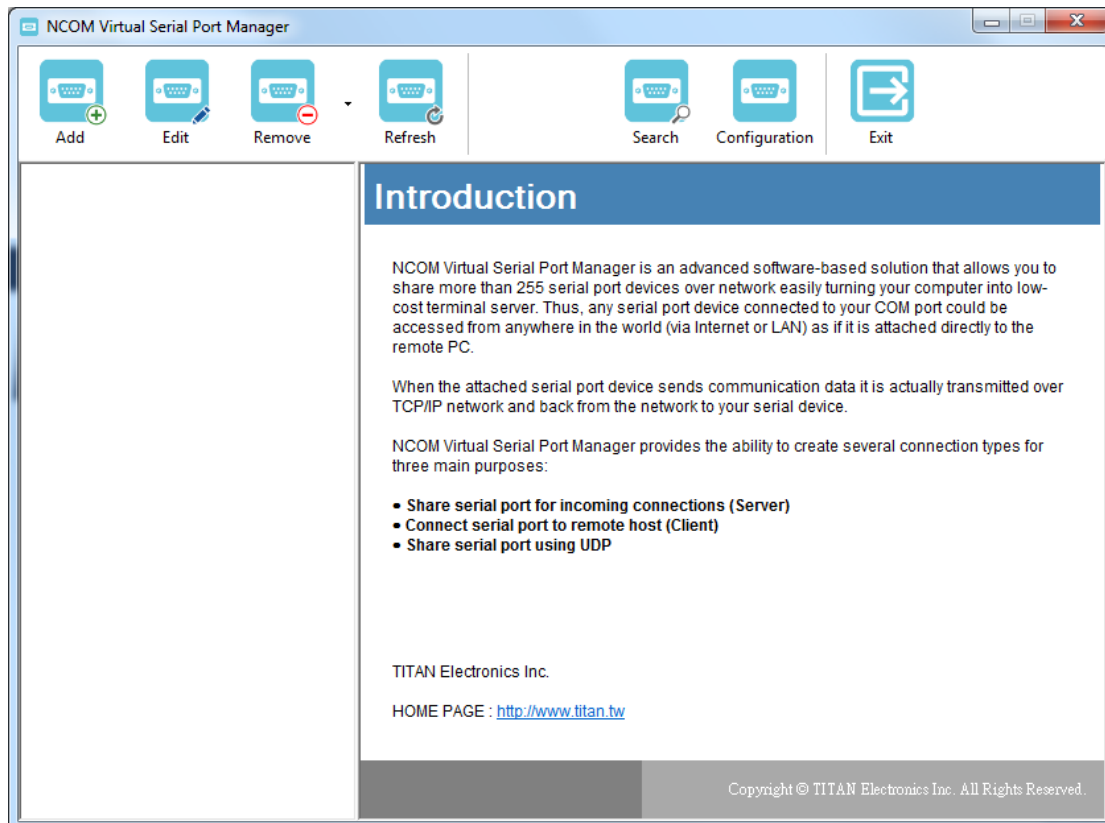


8. RUNNING NCOM VIRTUAL SERIAL PORT MANAGER

After installing NCAN-1 hardware and NCOM Virtual Serial Port Manager, double click the shortcut icon of “NCOM Virtual Serial Port Manager” on the Desktop to start NCOM Virtual Serial Port Manager.

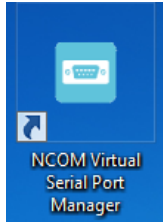

8.1 NCOM Virtual Serial Port Manager Functions

NCOM Virtual Serial Port Manager has options to configure NCAN-1 with the options “Add” (add virtual serial port), “Edit” (edit virtual serial port parameters), “Remove” (remove virtual serial port), “Refresh” (refresh virtual serial port), “Search” (search all attached NCAN CAN to Ethernet Gateway), “Configuration” (configure virtual serial port parameters) and “Exit” (exit NCOM Virtual Serial Port Manager).

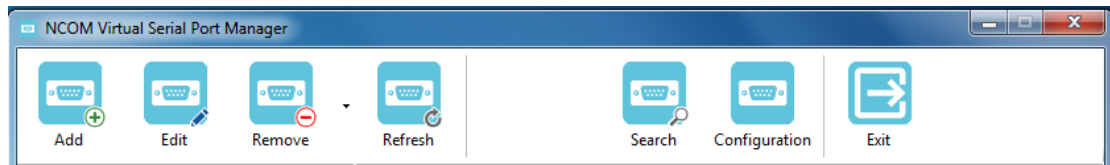


8.2 Manually Add Virtual Serial Port for NCAN

After opening NCOM Virtual Serial Port Manager, click “Add” to open the “Add connection” window.



Under “Add connection”, select an available COM port (e.g. COM2. Note that NCOM Virtual Serial Port Manager will show your next available COM port) and type your NCOM device’s IP address and port in “IP Address” and “Remote Port” respectively (e.g. IP Address: 192.168.254.254 Port: 2000). After setting the COM port, IP address and remote port, click “OK” to add a new virtual serial port.

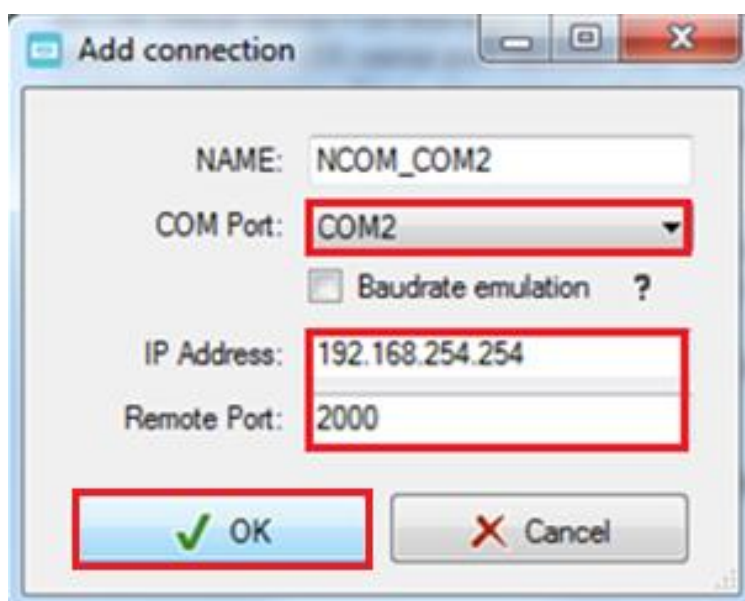

After adding a new virtual serial port for NCAN CAN to Ethernet Gateway, you will find information about the virtual serial port in the main window of NCOM Virtual Serial Port Manager.

NCOM Virtual Serial Port Manager

Add
 Edit
 Remove
 Refresh
 Search
 Configuration
 Exit

NCOM_COM2

- COM2 Virtual Created
- Connected to 0 from 1
- Sent: 0.0 KB / Received: 0.0 KB

Information

COM port information

Port Name: **COM2** Port Type: **Virtual**

Port Status: **Created** Current Settings: -

Bytes Sent: **0.0 KB** Bytes Received: **0.0 KB**

Baudrate Emulation: **No**


Network information

Protocol: **TELMET**


Remote host	Status	Sent	Received	Active
192.168.254.254:2000	Disconnected	0	0	00:00:00

8.3 Manually Edit Existing Virtual Serial COM Ports for NCAN

To edit existing virtual serial COM port for NCAN CAN to Ethernet Gateway, select the existing virtual serial COM port and click “Edit” to open the “Add connection” window.

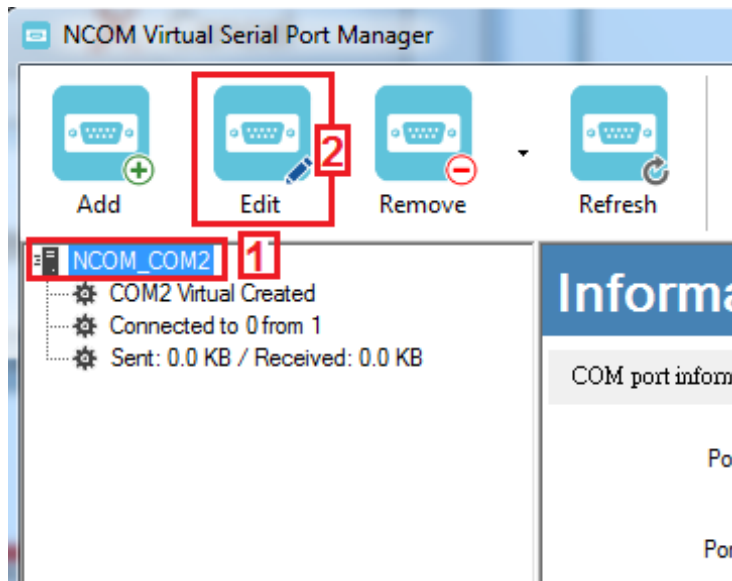


Under “Add connection”, you can change the COM port number with the “COM Port” option (e.g. changing from COM2 to COM3) or change the IP address and remote port with the “IP Address” and “Remote Port” options respectively. After you change the settings, click “OK” to confirm the changes of the virtual serial port for NCAN CAN to Ethernet Gateway.

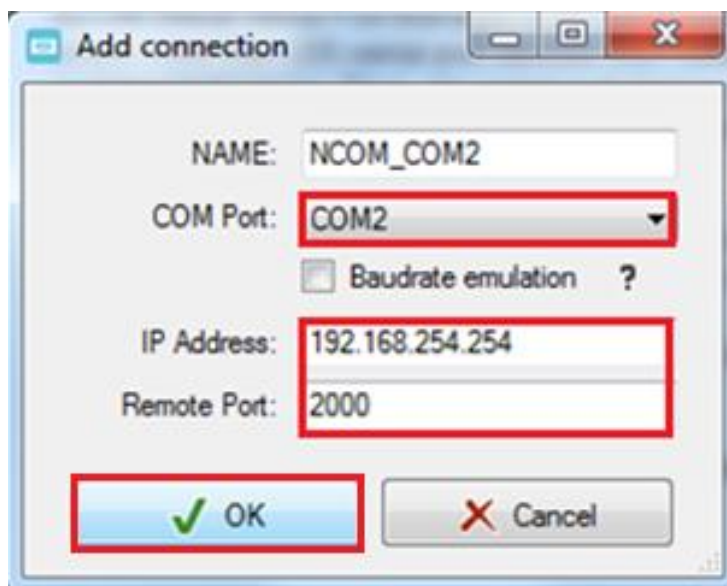


8.4 Manually Remove Existing Virtual Serial COM Ports for NCAN

To remove an existing virtual serial port for NCAN CAN to Ethernet Gateway, select an existing virtual serial port and click “Remove”.

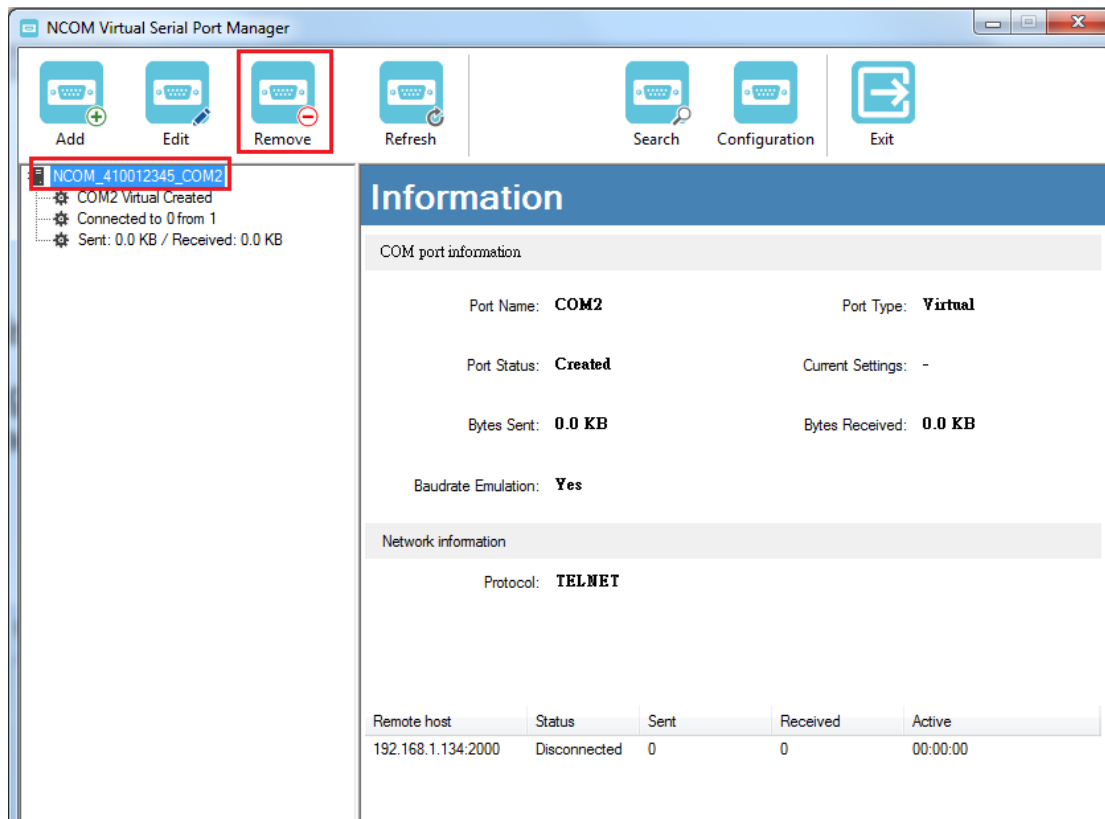


After clicking “Remove”, a confirmation message will appear asking “Are you sure you want to delete NCOM_XXXXXXXXX_COMX connection?”. Confirm by clicking on “Yes”.

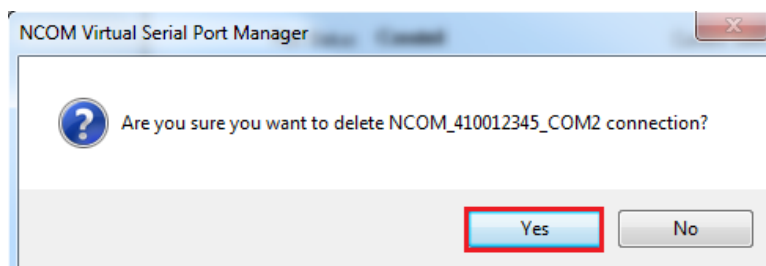

8.5 Refreshing Virtual Serial Port Information

The virtual serial port information on the main window of NCOM Virtual Serial Port Manager may be incorrect or absent in some cases. In case this happens, you can click “Refresh” to recover the virtual serial port information.

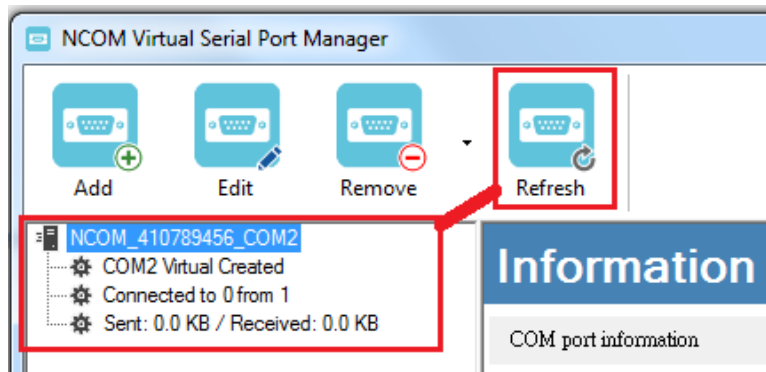


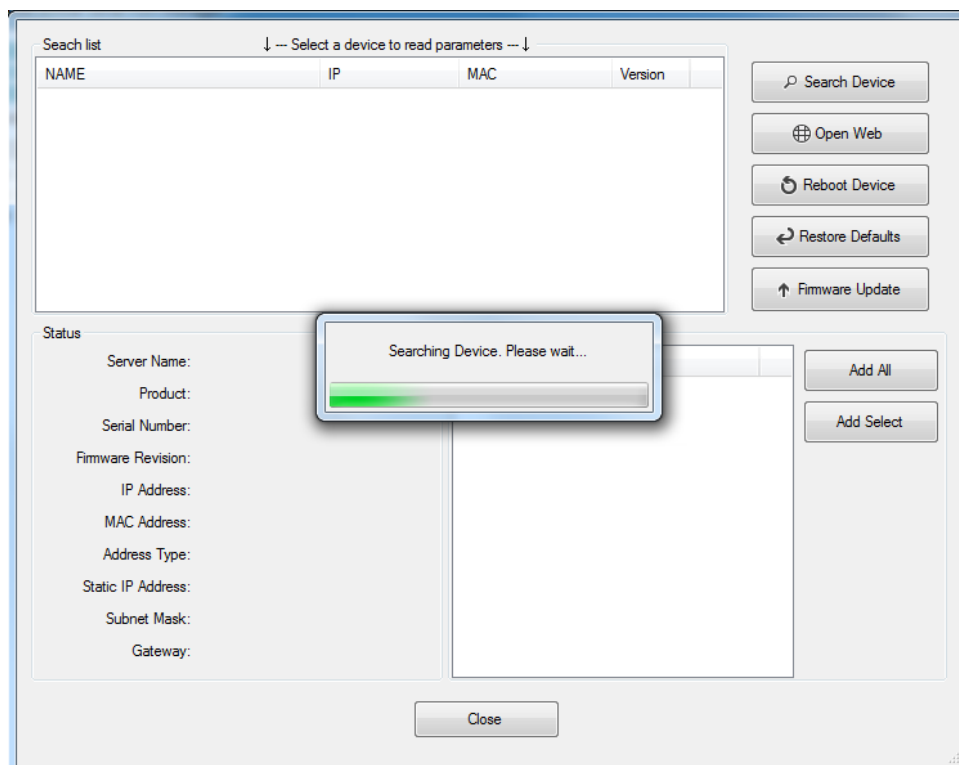
8.6 Automatically Search for NCAN CAN to Ethernet Gateway

NCOM Virtual Serial Port Manager provides a search function, which can search all attached NCAN CAN to Ethernet Gateway and can also automatically install virtual serial port driver for NCAN CAN to Ethernet Gateway. You may also open the web console interface to configure NCOM, reboot NCAN CAN to Ethernet Gateway, restore factory defaults and execute firmware update from here.

“**Search**” (search all attached NCAN CAN to Ethernet Gateway automatically).



Clicking on “Search ” takes you to the control menu page shown below:



After a few seconds, the NCOM Virtual Serial Port Manager will search and display all attached NCAN CAN to Ethernet Gateway automatically.

Search list ↓ --- Select a device to read parameters --- ↓

NAME	IP	MAC	FW Ver...	HW Ver...
CAN_20102601	192.168.31.151	00:04:D9:80:B6:CA	1.20	v1.0

Status

Server Name: **CAN_20102601**
 Product: NCAN-1 series
 Serial Number: 20102601
 Firmware Revision: 1.20
 IP Address: 192.168.31.151
 MAC Address: 00:04:D9:80:B6:CA
 Address Type: USE DHCP/AutoIP
 Static IP Address: 192.168.254.254
 Subnet Mask: 255.255.255.0
 Gateway: 0.0.0.0

COM Port Information

#	Port	State
<input type="checkbox"/>	Port 1	CAN

8.6.1 Selecting an NCOM Device to Read Parameters

After you select an attached NCOM device to configure the virtual serial port parameters, you will find the NCOM device information on the main window of NCOM Virtual Serial Port Manager. The information includes “Server Name”, “Product”, “Serial Number”, “Firmware Revision”, “IP Address”, “MAC Address”, “Address Type”, “Static IP Address”, “Subnet Mask” and “Gateway”.

The screenshot displays the NCOM Virtual Serial Port Manager interface. At the top, there is a search list with a dropdown menu that says "Select a device to read parameters". Below this is a table with columns: NAME, IP, MAC, FW Ver..., and HW Ver... The table contains one entry: CAN_20102601, 192.168.31.151, 00:04:D9:80:B6:CA, 1.20, v1.0. To the right of the table are several buttons: Search Device, Open Web, Reboot Device, Restore Defaults, and Firmware Update. Below the search list is a "Status" panel, which is highlighted with a red border. This panel displays the following information: Server Name: CAN_20102601, Product: NCAN-1 series, Serial Number: 20102601, Firmware Revision: 1.20, IP Address: 192.168.31.151, MAC Address: 00:04:D9:80:B6:CA, Address Type: USE DHCP/AutoIP, Static IP Address: 192.168.254.254, Subnet Mask: 255.255.255.0, and Gateway: 0.0.0.0. To the right of the status panel is a "COM Port Information" section with a table containing one row: #, Port, State. The row shows Port 1 with State CAN. There are "Add All" and "Add Select" buttons next to this table. At the bottom center of the interface is a "Close" button.

NAME	IP	MAC	FW Ver...	HW Ver...
CAN_20102601	192.168.31.151	00:04:D9:80:B6:CA	1.20	v1.0


Status

Server Name: **CAN_20102601**
Product: NCAN-1 series
Serial Number: 20102601
Firmware Revision: 1.20
IP Address: 192.168.31.151
MAC Address: 00:04:D9:80:B6:CA
Address Type: USE DHCP/AutoIP
Static IP Address: 192.168.254.254
Subnet Mask: 255.255.255.0
Gateway: 0.0.0.0

#	Port	State
<input type="checkbox"/>	Port 1	CAN


8.6.2 Installing Virtual Serial Port Driver for NCAN CAN to Ethernet Gateway

The search function can also create virtual COM ports and install virtual serial port drivers automatically. After selecting an attached NCAN CAN to Ethernet Gateway from the control menu, click **“Add All”** button to install virtual serial port drivers automatically. After installation you will find two **“Create NCAN_XXXXXXXX_COMX”** messages and the virtual serial ports created for the attached NCOM device.

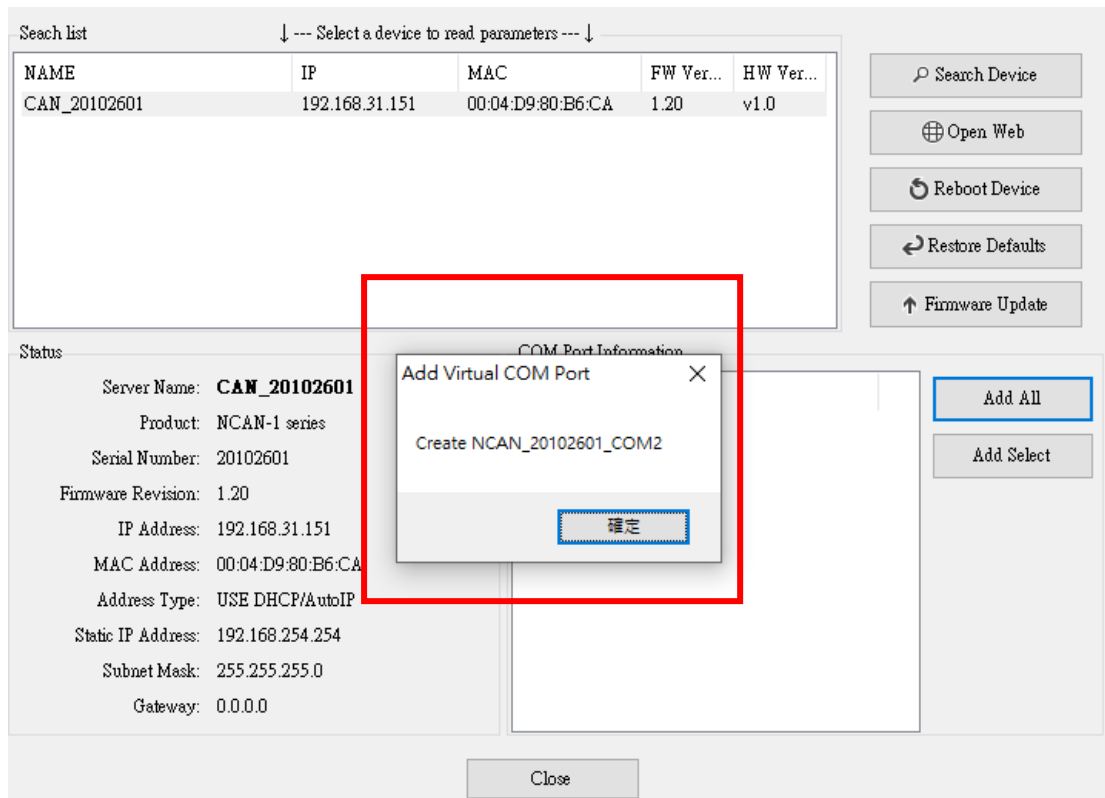


Click **“OK”** to finish creating virtual serial ports for your NCAN CAN to Ethernet Gateway.

In the “Search” window, there are five control buttons: “**Search Device**”, “**Open Web**”, “**Reboot Device**”, “**Restore Defaults**” and “**Firmware Update**”.

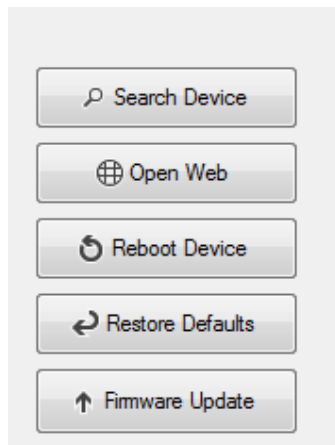

8.6.3 Manually Search for NCAN CAN to Ethernet Gateway

The “**Search Device**” button searches for all attached NCAN CAN to Ethernet Gateway. If a new NCAN CAN to Ethernet Gateway is attached to the network system, you can click “**Search Device**” to find new NCAN CAN to Ethernet Gateway.

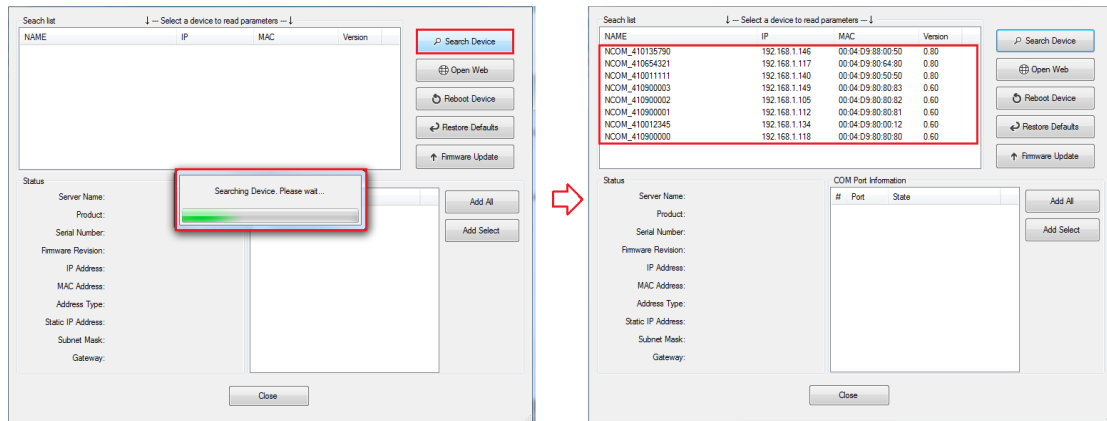

8.6.4 Opening the Web Console Interface

The “**Open Web**” button opens the web console interface to configure NCAN. After selecting an attached NCAN CAN to Ethernet Gateway, click “Open Web” to open the web console interface for that particular NCAN CAN to Ethernet Gateway.

The screenshot displays a web console interface with the following components:

- Search list:** A dropdown menu with the text "Select a device to read parameters".
- Table:** A table with columns: NAME, IP, MAC, FW Ver..., and HW Ver... The first row is highlighted in blue.
- Buttons:** A vertical stack of buttons on the right: Search Device, Open Web (highlighted with a red box), Reboot Device, Restore Defaults, and Firmware Update.
- Status:** A section on the left containing the following information:
 - Server Name: **CAN_20102601**
 - Product: NCAN-1 series
 - Serial Number: 20102601
 - Firmware Revision: 1.20
 - IP Address: 192.168.31.151
 - MAC Address: 00:04:D9:80:B6:CA
 - Address Type: USE DHCP/AutoIP
 - Static IP Address: 192.168.254.254
 - Subnet Mask: 255.255.255.0
 - Gateway: 0.0.0.0
- COM Port Information:** A table with columns: #, Port, and State. It contains one entry: Port 1, CAN.
- Buttons:** Add All and Add Select buttons are located to the right of the COM Port Information table.
- Close:** A button at the bottom center of the interface.

8.6.5 Rebooting NCOM CAN to Ethernet Gateway

The “**Reboot Device**” button reboots/resets your NCOM CAN to Ethernet Gateway. After selecting an attached NCOM CAN to Ethernet Gateway, click “Reboot Device” and a message will ask “Are you sure you want to reboot device?” Click “Yes” to reboot/reset your NCOM CAN to Ethernet Gateway.

The screenshot displays the NCOM Virtual Serial Port Manager interface. At the top, there is a search list with columns for NAME, IP, MAC, and Version. The device NCOM_410900002 is selected and highlighted with a red box. To the right of the search list are buttons for Search Device, Open Web, Reboot Device (highlighted with a red box), Restore Defaults, and Firmware Update. Below the search list is a Status panel for the selected device, showing details such as Server Name, Product, Serial Number, Firmware Revision, IP Address, MAC Address, Address Type, Static IP Address, Subnet Mask, and Gateway. To the right of the Status panel is a COM Port Information table with two ports, both in RS-232 MODE. A confirmation dialog box titled "NCOM Virtual Serial Port Manager" is overlaid on the interface, asking "Are you sure you want to reboot device?" with "Yes" and "No" buttons. The "Yes" button is highlighted with a red box. A "Close" button is located at the bottom center of the interface.

NAME	IP	MAC	Version
NCOM_410011111	192.168.1.138	00:04:D9:80:50:50	0.80
NCOM_410900002	192.168.1.102	00:04:D9:80:80:82	0.80
NCOM_410900003	192.168.1.144	00:04:D9:80:80:83	0.80
NCOM_410017888	192.168.1.139	00:04:D9:80:87:59	0.80
NCOM_410012345	192.168.1.132	00:04:D9:80:00:12	0.80
NCOM_10103452	192.168.1.171	00:04:D9:81:73:44	1.0
NCOM_410789456	192.168.1.10	00:04:D9:80:78:87	0.70
NCOM_410011236	192.168.1.169	00:04:D9:80:05:63	0.20

#	Port	State
<input type="checkbox"/>	Port 1	RS-232 MODE
<input type="checkbox"/>	Port 2	RS-232 MODE

Server Name: **NCOM_410900002**
Product: NCOM-213-M
Serial Number: 410900002
Firmware Revision: 0.80
IP Address: 192.168.1.102
MAC Address: 00:04:D9:80:80:82
Address Type: USE DHCP
Static IP Address: 192.168.254.254
Subnet Mask: 255.255.255.0
Gateway: 0.0.0.0

COM Port Information

Are you sure you want to reboot device?

Yes No

Close

8.6.6 Restoring to Factory Defaults

The “**Restore Defaults**” button restores the firmware to factory defaults. When you select an attached NCOM CAN to Ethernet Gateway, you can restore all options to factory default states by clicking the “Restore Defaults” button; After clicking “Restore Defaults”, a message will ask “Are you sure you want to restore device to default?”. Confirm by clicking “Yes” and the NCOM CAN to Ethernet Gateway will restore all options to factory defaults.

The screenshot displays the NCOM Virtual Serial Port Manager interface. At the top, there is a search list with columns for NAME, IP, MAC, and Version. The device NCOM_410900002 is selected and highlighted in red. To the right of the search list are several buttons: Search Device, Open Web, Reboot Device, Restore Defaults (highlighted in red), and Firmware Update. Below the search list, the Status section shows details for the selected device, including Server Name (NCOM_410900002), Product (NCOM-213;-M), Serial Number (410900002), Firmware Revision (0.80), IP Address (192.168.1.102), MAC Address (00:04:D9:80:80:82), Address Type (USE D), Static IP Address (192.168.1.102), Subnet Mask (255.255.255.0), and Gateway (0.0.0.0). The COM Port Information section shows two ports, both in RS-232 MODE. A dialog box titled "NCOM Virtual Serial Port Manager" is overlaid on the interface, asking "Are you sure you want to restore device to default?" with "Yes" and "No" buttons. The "Yes" button is highlighted in red. A "Close" button is located at the bottom of the interface.

NAME	IP	MAC	Version
NCOM_410011111	192.168.1.138	00:04:D9:80:50:50	0.80
NCOM_410900002	192.168.1.102	00:04:D9:80:80:82	0.80
NCOM_410900003	192.168.1.144	00:04:D9:80:80:83	0.80
NCOM_410017888	192.168.1.139	00:04:D9:80:87:59	0.80
NCOM_410012345	192.168.1.132	00:04:D9:80:00:12	0.80
NCOM_10103452	192.168.1.171	00:04:D9:81:73:44	1.0
NCOM_410789456	192.168.1.10	00:04:D9:80:78:87	0.70
NCOM_410011236	192.168.1.169	00:04:D9:80:05:63	0.20

Status

Server Name: **NCOM_410900002**

Product: NCOM-213;-M

Serial Number: 410900002

Firmware Revision: 0.80

IP Address: 192.168.1.102

MAC Address: 00:04:D9:80:80:82

Address Type: USE D

Static IP Address: 192.168.1.102

Subnet Mask: 255.255.255.0

Gateway: 0.0.0.0

COM Port Information


#	Port	State
<input type="checkbox"/>	Port 1	RS-232 MODE
<input type="checkbox"/>	Port 2	RS-232 MODE

Are you sure you want to restore device to default?


Yes No

8.6.7 Firmware Update Tool


The “**Firmware Update**” button opens the firmware update tool to upgrade NCAN-1 firmware contents via Ethernet port.

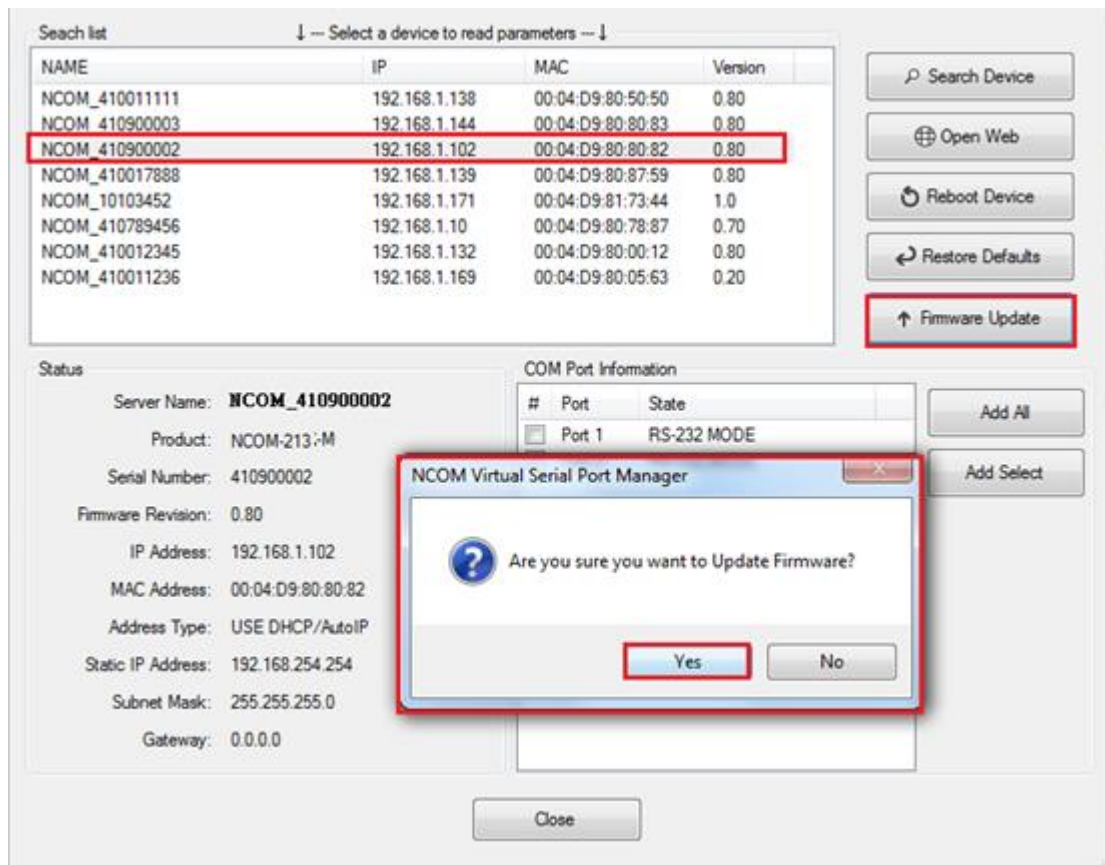


When you click “Firmware Update”, a message will ask “Are you sure you want to update firmware?” Confirm by clicking “Yes” and the message “Input new firmware file” will appear.

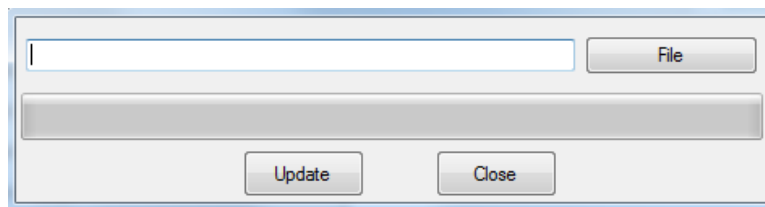



Use the “File” button to browse to the new firmware file and click on “Update” to start upgrading NCAN-1’s device firmware.

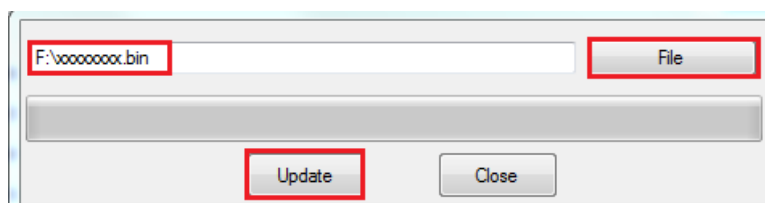

While upgrading, you will find the following message.

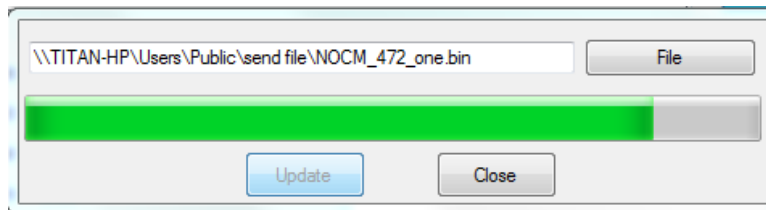

After successfully upgrading the firmware contents, there will be a message stating "Update Success!!".

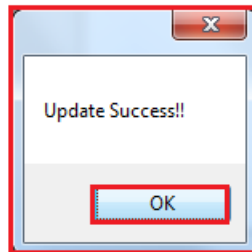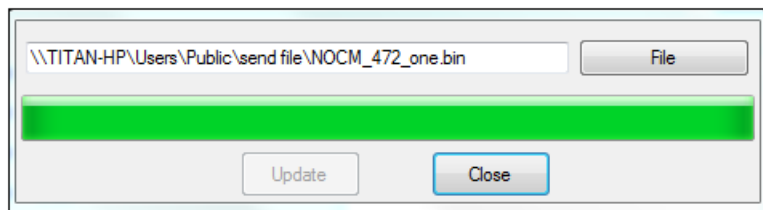

Click on "OK" to finish the firmware update procedure.

8.7 Configuring NCAN CAN to Ethernet Gateway

NCOM Virtual Serial Port Manager has a configuration function which can configure all attached NCAN CAN to Ethernet Gateway. It can also import/export configuration files for NCAN CAN to Ethernet Gateway, open web console interface to configure NCAN CAN to Ethernet Gateway, reboot NCAN CAN to Ethernet Gateway, restore factory defaults and execute firmware update.

“**Configuration**” (configure all attached NCAN CAN to Ethernet Gateway).



Clicking on “Configuration Configuration” takes you to the control menu page shown below:

The screenshot shows the NCOM Configuration web interface. It features a 'Device List' table with columns for NAME, IP, MAC, FW Ver, and HW ... The table contains one entry: CAN_123456790, 192.168.31.98, 00:04:D9:80:01:03, 1.20, v1.0. Below the table are sections for 'Search', 'Configuration Import/Export' (Import, Export), and 'Device Control' (Open WEB, Reboot Device, Restore Defaults, Firmware Update). The 'Device Status' section includes fields for Server Name, Product, Serial Number, Firmware Revision, Hardware Revision, IP Address, and MAC Address, along with Address Type, Static IP Address, Subnet Mask, and Gateway, and an Update button. The 'Port Status' section includes a Port dropdown, Serial Settings (Mode, Baud Rate, Data Bits/Parity/Stop Bits, Flow Control), and Network Settings (Mode, Local Port, Dest. IP, Dest. Port, TCP Timeout, Keep alive, UDP Setting, UDP Local Port, UDP Dest. IP, UDP Dest. Port, Multicasting IP), and a Set Default checkbox and Update button.

NAME	IP	MAC	FW Ver	HW ...
CAN_123456790	192.168.31.98	00:04:D9:80:01:03	1.20	v1.0

After a few seconds, NCOM Virtual Serial Port Manager will search all attached NCOM CAN to Ethernet Gateway automatically, and you will find “Device List” information for all NCOM CAN to Ethernet Gateway.

The screenshot displays the NCOM Configuration window. At the top, there is a 'Device List' table with a red border around its first row. Below the table are sections for 'Device Control', 'Device Status', 'Serial Settings', and 'Network Settings'. The 'Device Status' section includes fields for Server Name, Product, Serial Number, Firmware Revision, Hardware Revision, IP Address, and MAC Address, along with an 'Update' button. The 'Serial Settings' section includes fields for Port, Mode, Baud Rate, Data Bits/Parity/Stop Bits, and Flow Control. The 'Network Settings' section includes fields for Mode, Local Port, Dest. IP, Dest. Port, TCP Timeout, Keep alive, UDP Setting, UDP Local Port, UDP Dest. IP, UDP Dest. Port, and Multicasting IP, along with a 'Set Default' checkbox and an 'Update' button.

NAME	IP	MAC	FW Ver	HW ...
CAN_123456790	192.168.31.98	00:04:D9:80:01:03	1.20	v1.0

8.7.1 Selecting an NCAN CAN to Ethernet Gateway to Configure Parameters

When you select an attached NCAN CAN to Ethernet Gateway to configure the virtual serial port parameters, you will find “Device Status”, “Port Status”, “Device Control” and “Configuration Import/Export” on the main window of NCOM Configuration.

The screenshot displays the NCOM Configuration window with several key sections highlighted by red boxes:

- Device List:** A table with columns for NAME, IP, MAC, FW Ver, and HW ... The first row contains: CAN_123456790, 192.168.31.98, 00:04:D9:80:01:03, 1.20, v1.0.
- Device Control:** A panel containing four buttons: Open WEB, Reboot Device, Restore Defaults, and Firmware Update.
- Device Status:** A panel with input fields for Server Name, Address Type, Product, Static IP Address, Serial Number, Subnet Mask, Firmware Revision, Gateway, Hardware Revision, IP Address, and MAC Address, along with an Update button.
- Port Status:** A panel with a Port dropdown menu, Serial Settings (Mode, Baud Rate, Data Bits/Parity/Stop Bits, Flow Control), and Network Settings (Mode, Local Port, Dest. IP, Dest. Port, TCP Timeout, Keep alive, UDP Setting, UDP Local Port, UDP Dest. IP, UDP Dest. Port, Multicasting IP).

Other visible elements include a Search bar, Configuration Import/Export buttons (Import, Export), and a Set Default checkbox at the bottom right.

8.7.2 Device Status

The “Device Status” section indicates the following information: “Server Name”, “Product”, “Serial Number”, “Firmware Revision”, “IP Address”, “MAC Address”, “Address Type”, “Static IP Address”, “Subnet Mask” and “Gateway”.

The screenshot shows the NCOM Configuration software interface. The 'Device List' table is as follows:

NAME	IP	MAC	FW Ver	HW ...
CAN_20102601	192.168.31.151	00-04-D9-80-B6-CA	1.20	v1.0

The 'Device Status' section, highlighted with a red border, contains the following fields:


- Server Name: CAN_20102601
- Product: NCAN-1 series
- Serial Number: 20102601
- Firmware Revision: 1.20
- Hardware Revision: v1.0
- IP Address: 192.168.31.151
- MAC Address: 00:04:D9:80:B6:CA
- Address Type: USE DHCP/AutoIP
- Static IP Address: 192.168.254.254
- Subnet Mask: 255.255.255.0
- Gateway: 0.0.0.0

Other sections include 'Port Status' (Port: PORT 1), 'CAN Settings' (Mode: Close, Bit Rate: 100k, Acceptance Mask/Filter: 00000000, TimeStamp: Off), and 'Network Settings' (Mode: Driver Mode, Local Port: 2000, Dest IP: 0.0.0.0, Dest Port: 2000, TCP Timeout: 0, Keep alive: 10, UDP Setting: Use Unicast, UDP Local Port: 4000, UDP Dest IP: 0.0.0.0, UDP Dest Port: 4000, Multicasting IP: 224.0.0.0, Buffer Length: 0, Timeout: 0).


In “Device Status”, you can modify “Server Name”, “Address Type”, “Static IP Address”, “Subnet Mask” and “Gateway” depending on your application.

To change the CAN to Ethernet Gateway name, modify the “Server Name” under “Device Status”. You need to enter a new name (such as NCAN-1) and click “Update” to set your CAN to Ethernet Gateway to a new name.


After clicking “Update” a confirmation message will ask “Are you sure you want to change server name?” Confirm by clicking “Yes”.

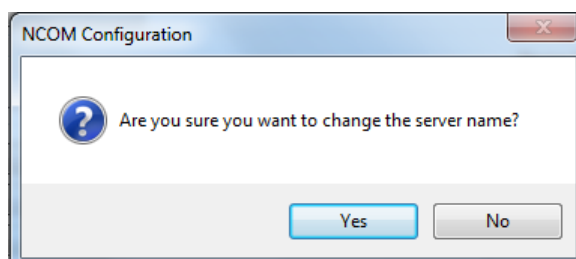

After NCAN-1 successfully changes to a new name, a message will indicate “Success!”. Click on “OK” to finish the procedure.


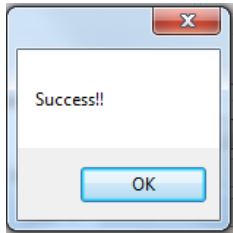


NCAN-1 CAN to Ethernet Gateway is configured with a default private IP address (static IP address): **192.168.254.254**.

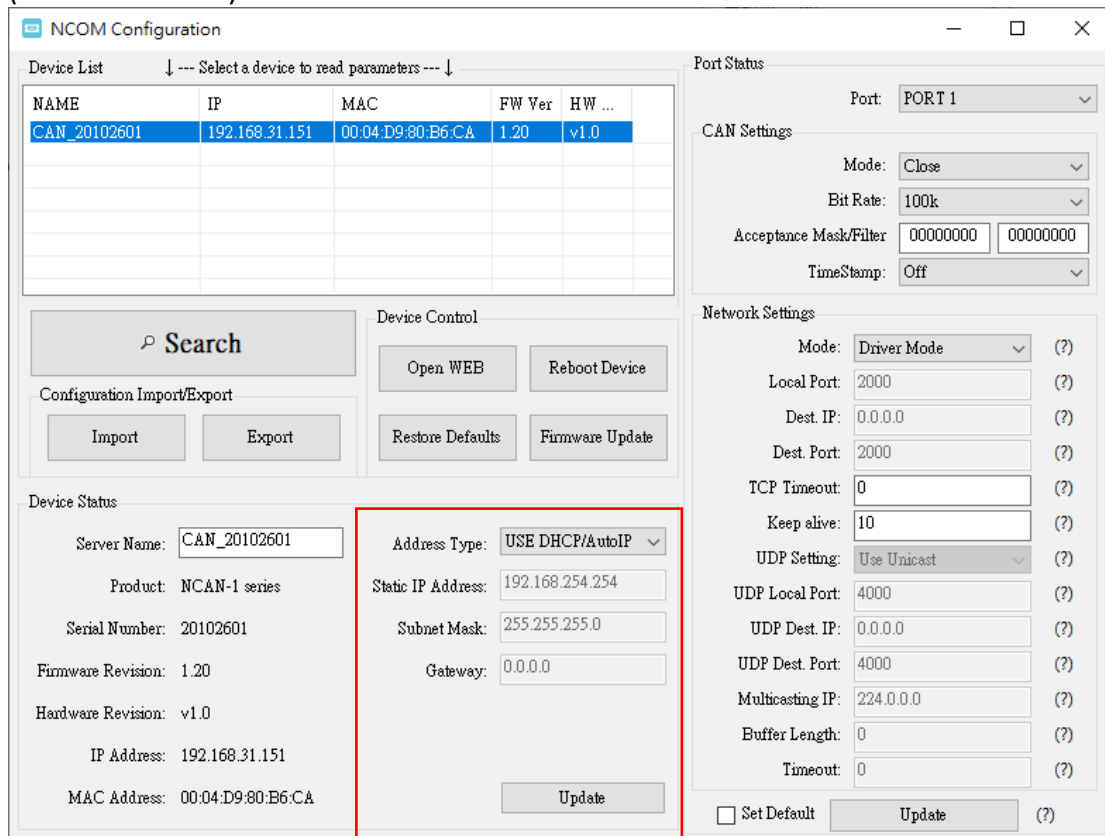


Many networks work in a DHCP network, which assigns IP addresses for client computers and NCAN-1 automatically. In this case, you need to set NCAN-1’s IP address to DHCP/AutoIP mode.

Under “Device Status” of NCOM Configuration, select “USE DHCP/AutoIP” under “Address Type:” and click “Update”. A message will ask “Are you sure you want to change Static IP to DHCP/AUTOIP?”, confirm by clicking “Yes” and NCAN-1 will be set to DHCP/AutoIP mode.

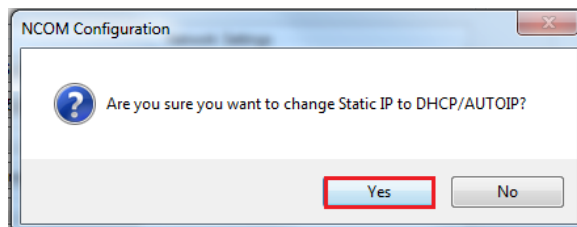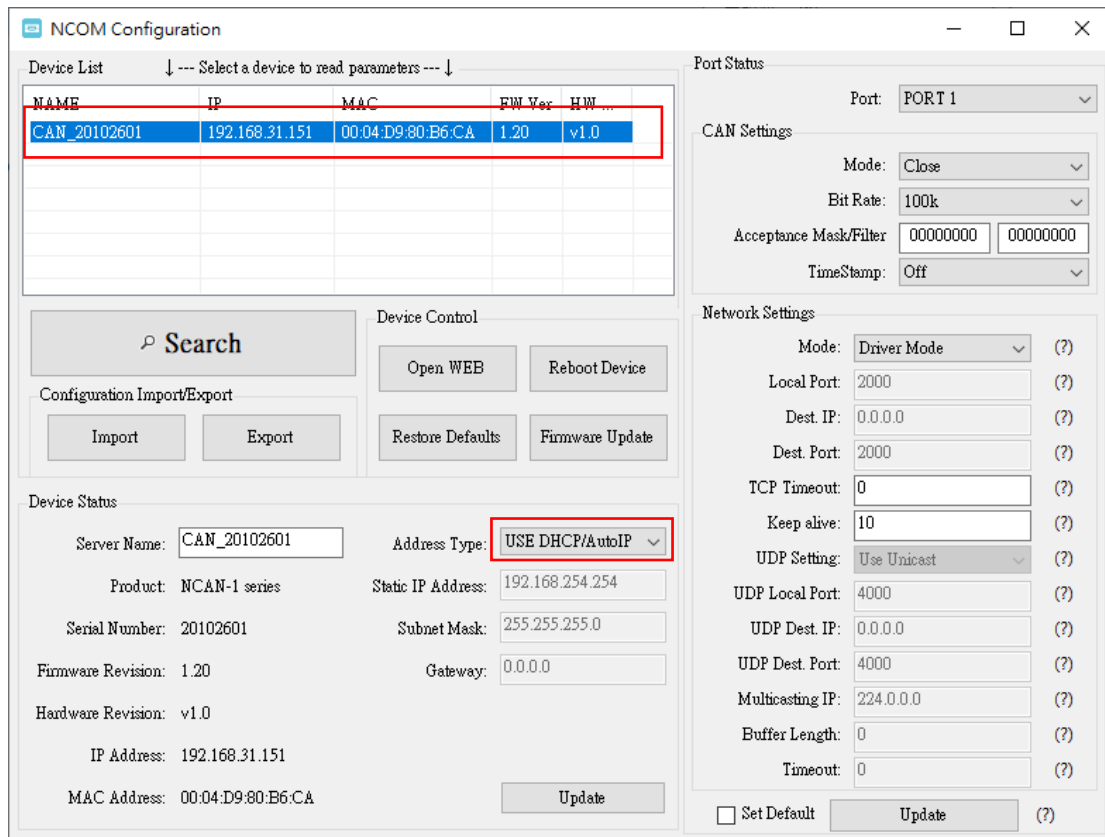

After successfully setting NCAN-1 to DHCP/AutoIP mode, a message will indicate "Success!!". Click on "OK" to finish changing the IP address type.

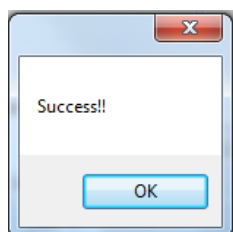

When NCAN-1 is working in a static network environment, you need to set NCAN-1 to a fixed IP address mode.

Under "Device Status" of NCOM Configuration, select "USE Static IP" under "Address Type:" and enter a new static IP address (such as 192.168.0.1), subnet mask (such as 255.255.255.0) and gateway (such as 0.0.0.0). Afterwards, click "Update" to set NCOM to a new static IP address for static network environments.

After clicking “Update”, a confirmation message saying “Are you sure you want to change new Static IP?” will appear. Confirm by clicking “Yes” and NCAN-1 will be set to a new static IP address.

8.7.3 COM Port Status

The “Port Status” section indicate the following information: “Port X”, “CAN Settings” and “Network Settings”.

The screenshot displays the NCOM Configuration web interface. The 'Port Status' section is highlighted with a red border and contains the following settings:

- Port: PORT 1
- CAN Settings:
 - Mode: Close
 - Bit Rate: 100k
 - Acceptance Mask/Filter: 00000000 00000000
 - Time Stamp: Off
- Network Settings:
 - Mode: Driver Mode (?)
 - Local Port: 2000 (?)
 - Dest. IP: 0.0.0.0 (?)
 - Dest. Port: 2000 (?)
 - TCP Timeout: 0 (?)
 - Keep alive: 10 (?)
 - UDP Setting: Use Unicast (?)
 - UDP Local Port: 4000 (?)
 - UDP Dest. IP: 0.0.0.0 (?)
 - UDP Dest. Port: 4000 (?)
 - Multicasting IP: 224.0.0.0 (?)
 - Buffer Length: 0 (?)
 - Timeout: 0 (?)

At the bottom of the Port Status section, there are two buttons: Set Default and Update (?).


The rest of the interface includes a 'Device List' table with columns for NAME, IP, MAC, FW Ver, and HW ...; a 'Device Control' section with buttons for Open WEB, Reboot Device, Restore Defaults, and Firmware Update; and a 'Device Status' section with fields for Server Name, Address Type, Static IP Address, Subnet Mask, Gateway, Product, Serial Number, Firmware Revision, Hardware Revision, IP Address, and MAC Address, along with an Update button.

8.7.3.1 Changing CAN Parameters

To change serial parameters under “Serial Settings” for a virtual serial port, click “Port1/Port2” under “COM Port Status”. You can modify the following serial parameters:


CAN Parameter	Setting	Default Values
Mode	Close, Normal Mode, Listen Only, Loopback	Close
Bit Rate	10K to 1000K bit/s	100Kbit/s
Acceptance Mask	0x00000000~0x1FFFFFFF	0x00000000
Acceptance Filter	0x00000000~0x1FFFFFFF	0x00000000
TimeStamp	Off, On	Off

After changing the serial parameters, click “Update” to activate the new serial parameters. When the serial parameters are changed successfully, a message will indicate “Update Success!!”.

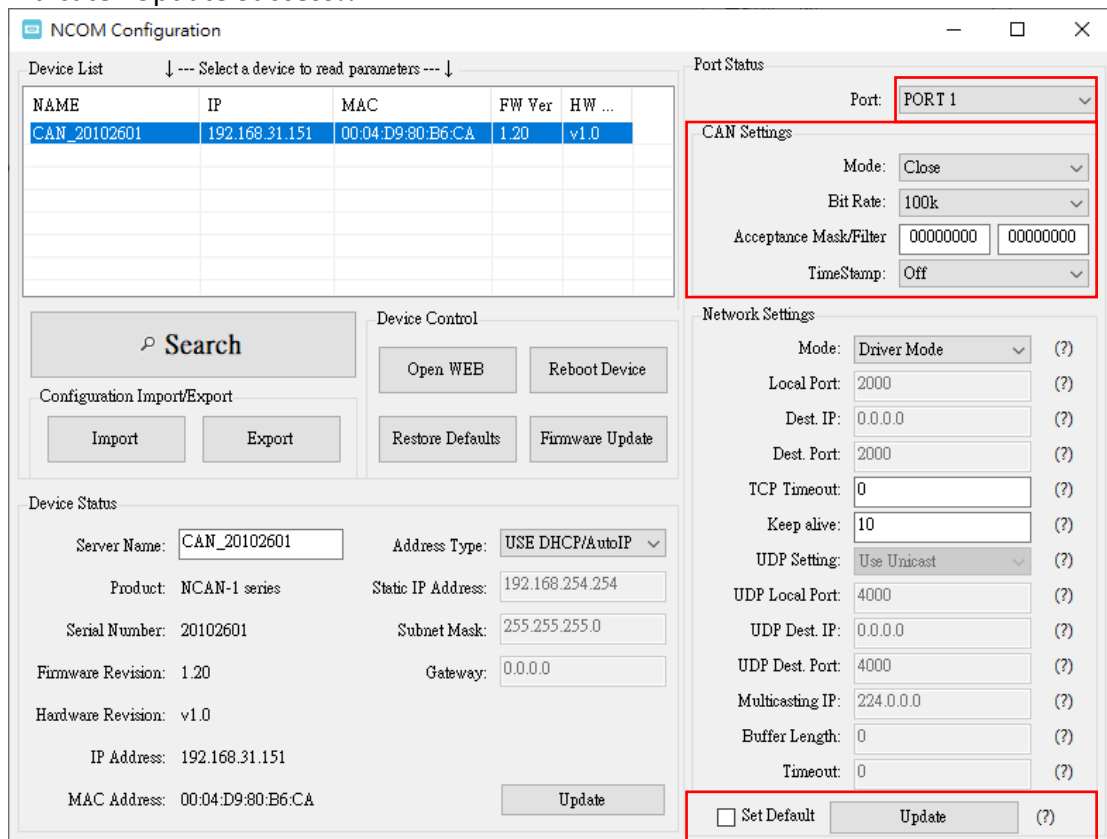

Click on “OK” to finish changing the serial parameters.

If you want to save these CAN parameters as defaults, you need to check “Set Default” and click on “Update”. When the new serial parameters are saved, a message will indicate “Update Success!!”.

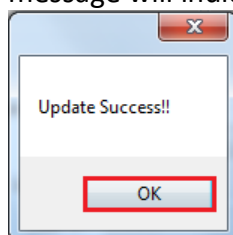


Click on “OK” to finish modifying serial parameters and saving new serial parameters.


8.7.3.2 Changing Network Operation Mode

To change the network operation mode of a virtual serial port, click “Port 1” under “COM Port Status”. Under “Network Settings”, you may choose “Driver Mode”, “RFC2217 - Server”, “RFC2217 - Client”, “TCP Raw - Server”, “TCP Raw - Client”, “Pair Connection Master Mode”, “Pair Connection Slave Mode” and “UDP” depending on your application.

After selecting an operation mode, click “Update” to set your NCAN-1 into the proper operation mode.

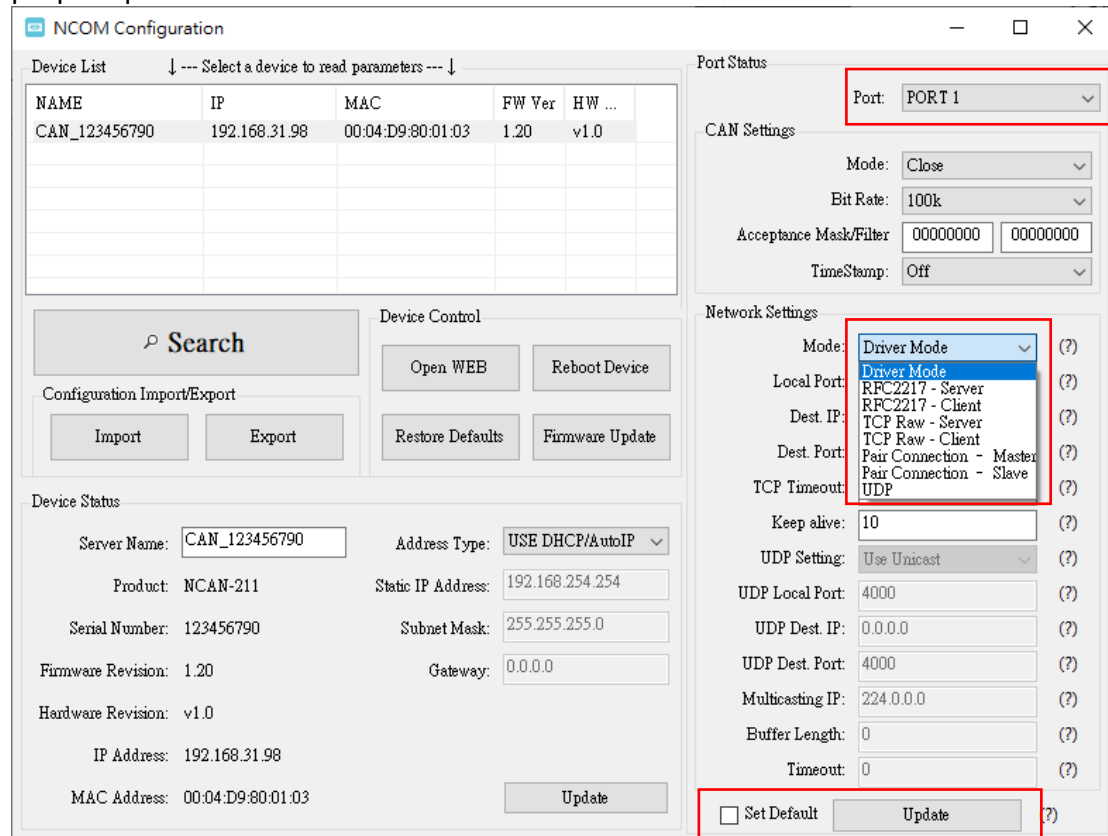


After clicking “Update” to set your NCAN-1’s operation mode, a message will indicate “Update Success!!”.

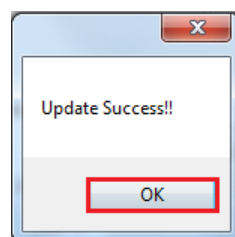

Click on “OK” to finish change operation mode procedure.

If you want to save the new operation mode as defaults, you need to check on “Set Default” and click on “Update”. When the new operation mode is saved, a message will indicate “Update Success!!”.

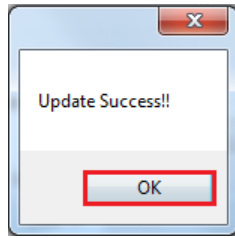

Click on “OK” to finish changing and saving a new operation mode.

To modify the network settings for a chosen operation mode, please refer to Chapter 5 for detailed information. You can also modify the network parameter settings for your NCAN-1 CAN to Ethernet Gateway.

Following are the default values of network parameters:

Network Parameters	Default Values
Mode	Driver Mode
Timeout	0 seconds
Keep alive time	10 minutes
Address Type	Static IP
Static IP address	192.168.254.254
Subnet Mask	255.255.255.0

8.7.4 Device Control

The “Device Control” section contains the “Search Device”, “Open Web”, “Reboot Device”, “Restore Defaults” and “Firmware Update” functions.

The screenshot displays the NCOM Configuration interface. At the top left, there is a "Device List" table with columns for NAME, IP, MAC, FW Ver, and HW ... The first row is highlighted in blue and contains the values: CAN_20102601, 192.168.31.151, 00:04:D9:80:B6:CA, 1.20, and v1.0. Below the table, there is a "Search" button and "Configuration Import/Export" buttons for "Import" and "Export".



The "Device Control" section is highlighted with a red box and contains four buttons: "Open WEB", "Reboot Device", "Restore Defaults", and "Firmware Update".

Below the Device Control section is the "Device Status" section, which includes fields for Server Name (CAN_20102601), Address Type (USE DHCP/AutoIP), Product (NCAN-1 series), Static IP Address (192.168.254.254), Serial Number (20102601), Subnet Mask (255.255.255.0), Firmware Revision (1.20), Gateway (0.0.0.0), Hardware Revision (v1.0), IP Address (192.168.31.151), and MAC Address (00:04:D9:80:B6:CA). An "Update" button is located at the bottom right of this section.

On the right side of the window, there are sections for "Port Status" (Port: PORT 1), "CAN Settings" (Mode: Close, Bit Rate: 100k, Acceptance Mask/Filter: 00000000, TimeStamp: Off), and "Network Settings" (Mode: Driver Mode, Local Port: 2000, Dest. IP: 0.0.0.0, Dest. Port: 2000, TCP Timeout: 0, Keep alive: 10, UDP Setting: Use Unicast, UDP Local Port: 4000, UDP Dest. IP: 0.0.0.0, UDP Dest. Port: 4000, Multicasting IP: 224.0.0.0, Buffer Length: 0, Timeout: 0). At the bottom right of the Network Settings section, there are "Set Default" and "Update" buttons.

8.7.4.1 Manually Search for NCAN CAN to Ethernet Gateway

The “Search” button searches for all attached NCAN CAN to Ethernet Gateway. If a new NCOM device is attached to the network system, you can click “Search Device” to find new NCAN CAN to Ethernet Gateway.

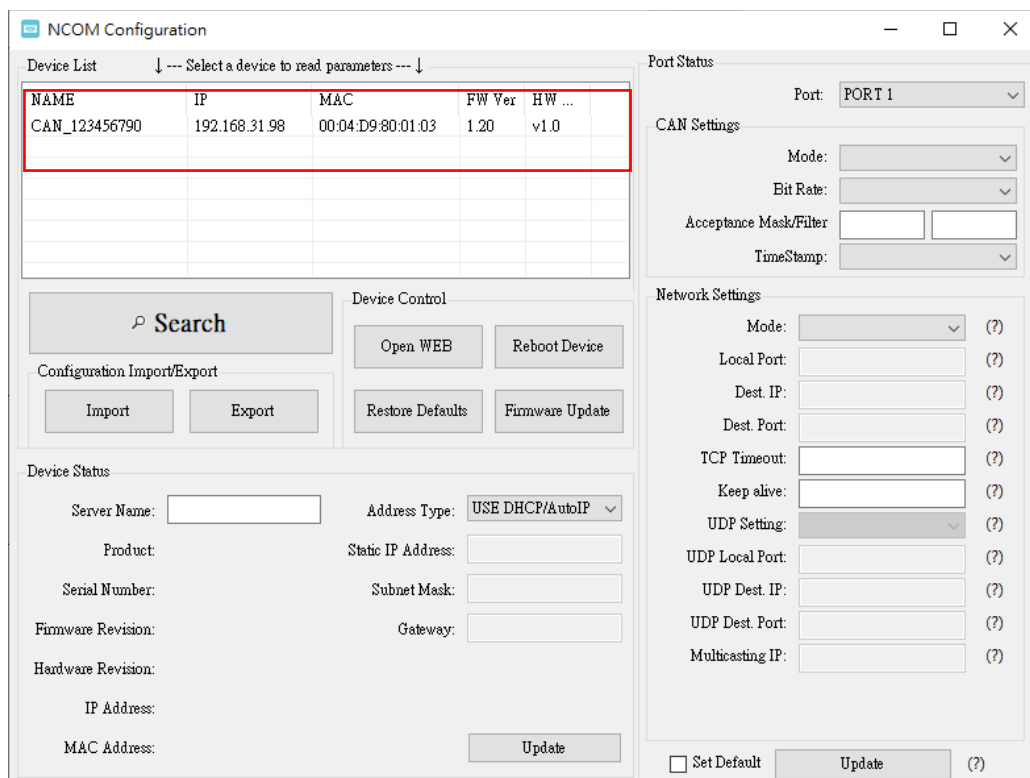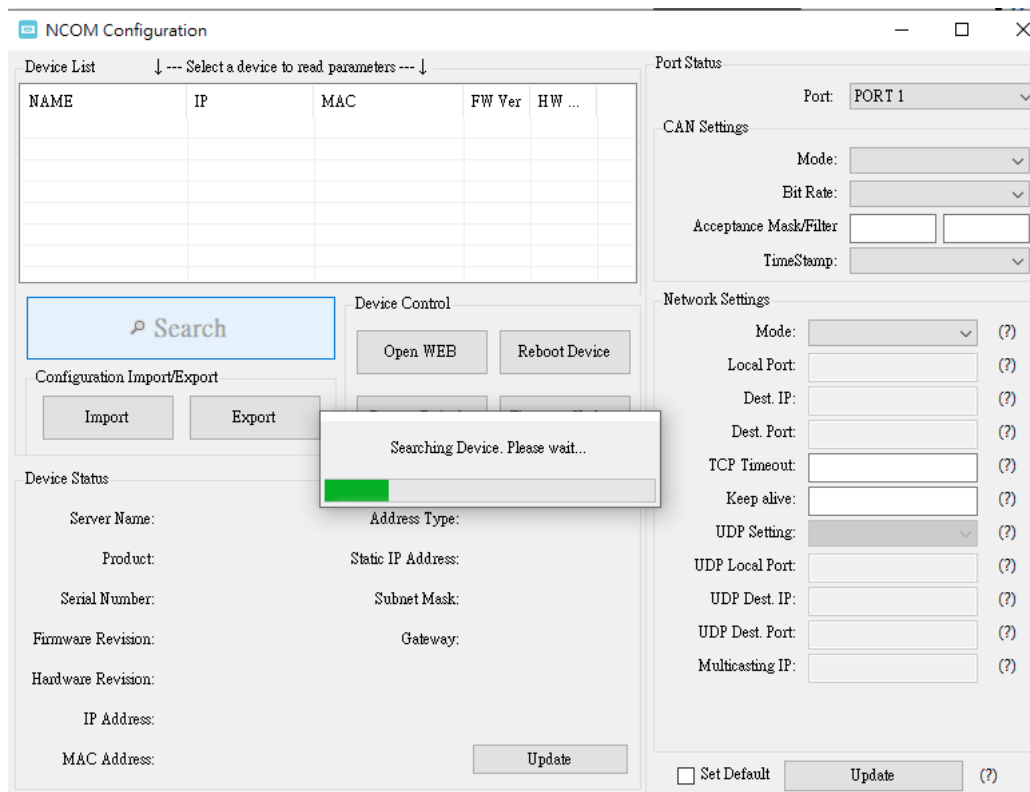

8.7.4.2 Opening the Web Console Interface

The “Open Web” button can be used to open the web console interface to configure NCOM. After selecting an attached NCOM device, click “Open Web” to open web console interface for that particular NCOM device.

The screenshot displays the NCOM Configuration web interface. At the top left, there is a 'Device List' table with columns for NAME, IP, MAC, FW Ver, and HW. The first row, 'CAN_20102601', is highlighted in blue and enclosed in a red box. Below the table is a 'Device Control' section with an 'Open WEB' button also highlighted in red. To the right of the 'Open WEB' button are buttons for 'Reboot Device', 'Restore Defaults', and 'Firmware Update'. Below the 'Device Control' section is a 'Device Status' section with various fields for server name, product, serial number, firmware/hardware revisions, IP address, and MAC address. On the right side of the interface, there are sections for 'Port Status', 'CAN Settings', and 'Network Settings', each with various configuration options and dropdown menus.

NAME	IP	MAC	FW Ver	HW ...
CAN_20102601	192.168.31.151	00:04:D9:80:B6:CA	1.20	v1.0

Device Control

Open WEB Reboot Device

Restore Defaults Firmware Update

Device Status

Server Name: CAN_20102601 Address Type: USE DHCP/AutoIP

Product: NCAN-1 series Static IP Address: 192.168.254.254

Serial Number: 20102601 Subnet Mask: 255.255.255.0

Firmware Revision: 1.20 Gateway: 0.0.0.0

Hardware Revision: v1.0

IP Address: 192.168.31.151

MAC Address: 00:04:D9:80:B6:CA Update

Port Status

Port: PORT 1

CAN Settings

Mode: Close

Bit Rate: 100k

Acceptance Mask/Filter: 00000000 00000000

TimeStamp: Off

Network Settings

Mode: Driver Mode (?)

Local Port: 2000 (?)

Dest. IP: 0.0.0.0 (?)

Dest. Port: 2000 (?)

TCP Timeout: 0 (?)

Keep alive: 10 (?)

UDP Setting: Use Unicast (?)

UDP Local Port: 4000 (?)

UDP Dest. IP: 0.0.0.0 (?)

UDP Dest. Port: 4000 (?)

Multicasting IP: 224.0.0.0 (?)

Buffer Length: 0 (?)

Timeout: 0 (?)

Set Default Update (?)

8.7.4.3 Rebooting NCAN CAN to Ethernet Gateway


The “Reboot Device” button reboots/resets your NCOM device when you need to. After selecting an attached NCOM device, click “Reboot Device” and a message will ask “Are you sure you want to reboot device?”. Click “Yes” to reboot/reset your NCOM device.

The screenshot displays the NCOM Configuration web interface. At the top, there is a 'Device List' table with columns for NAME, IP, MAC, FW Ver, and HW. The first row is highlighted in blue and contains the following data: NAME: CAN_20102601, IP: 192.168.31.151, MAC: 00:04:D9:80:B6:CA, FW Ver: 1.20, HW: v1.0. Below the table, there is a 'Device Control' section with several buttons: 'Open WEB', 'Reboot Device' (highlighted with a red box), 'Restore Defaults', and 'Firmware Update'. To the right of the 'Device Control' section is a 'Device Status' section with fields for Server Name, Product, Serial Number, Firmware Revision, Hardware Revision, IP Address, and MAC Address, along with an 'Update' button. On the far right, there are sections for 'Port Status', 'CAN Settings', and 'Network Settings', each with various configuration options and buttons.


NAME	IP	MAC	FW Ver	HW ...
CAN_20102601	192.168.31.151	00:04:D9:80:B6:CA	1.20	v1.0

8.7.4.4 Restoring to Factory Defaults

The “Restore Defaults” button restores the firmware to factory defaults. When you select an attached NCOM device, you can restore all options to factory default states by clicking the “Restore Defaults” button; After clicking “Restore Defaults”, a message will ask “Are you sure you want to restore device to default?”. Confirm by clicking “Yes” and the NCOM device will restore all options to factory defaults.


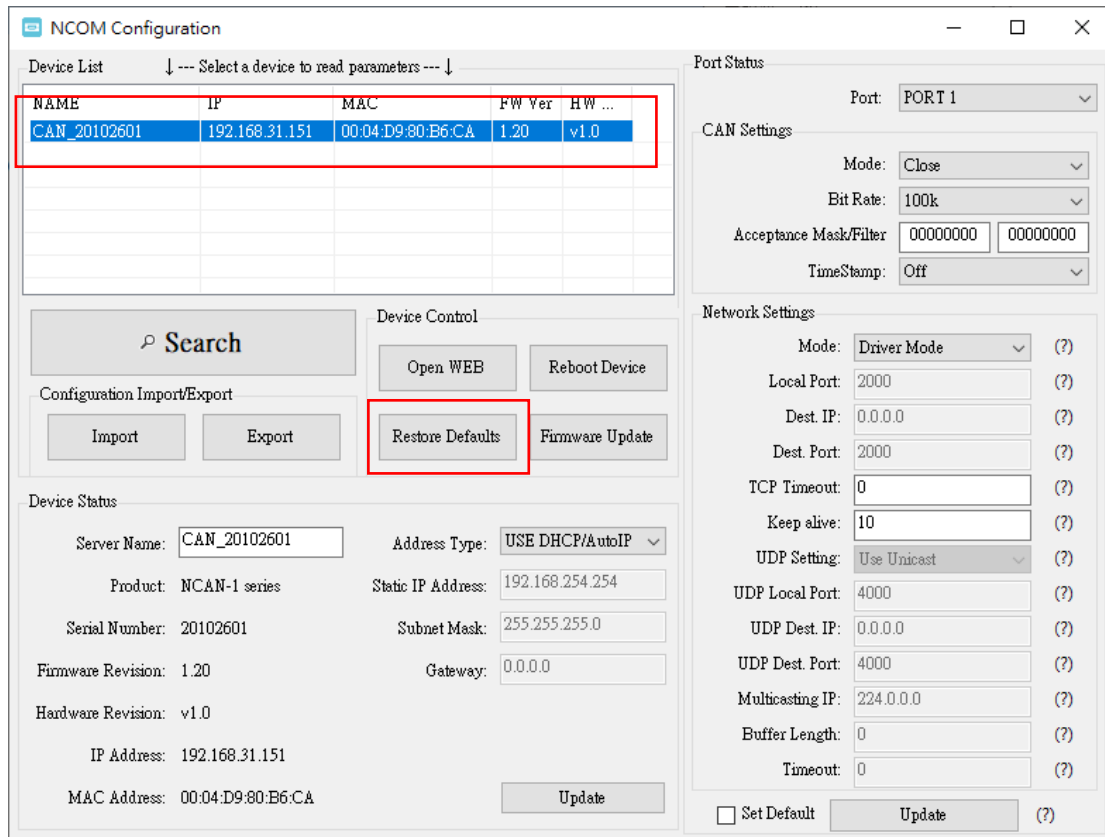


After the NCOM device restores all options to factory default states, a message will indicate “Please refresh device list to read updated parameters!”. Click on “OK” to finish restoring device to factory defaults.

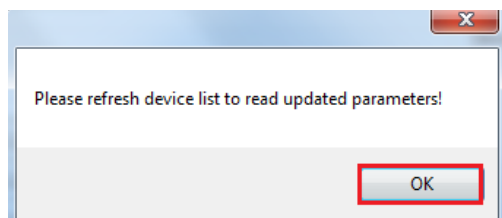


8.7.4.5 Firmware Update Tool


The “Firmware Update” button opens the firmware update tool to upgrade NCAN-1 firmware contents via Ethernet port. Before you click “Firmware Update”, please go to the web console interface of NCAN device firmware. Enable firmware update interface via Ethernet port to upgrade NCAN-1.

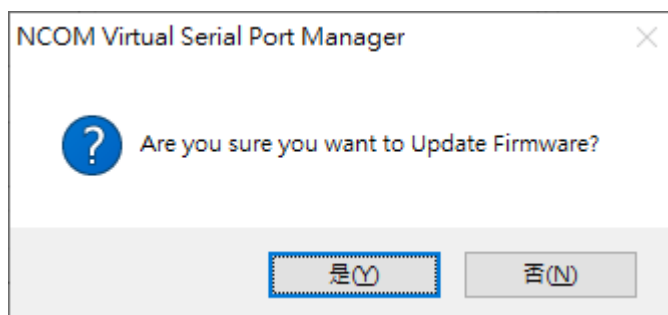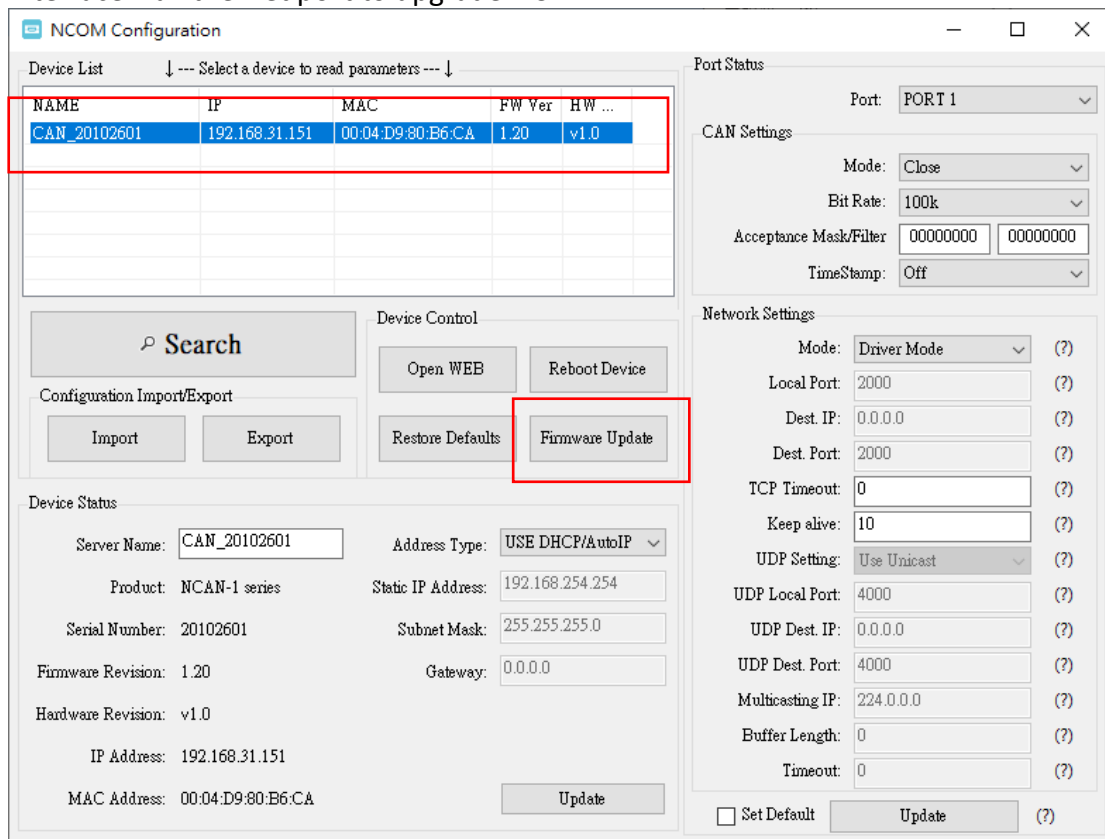


When you click “Firmware Update”, a message will ask “Are you sure you want to update firmware?”. Confirm by clicking “Yes” and the message “Input new firmware file” will appear.

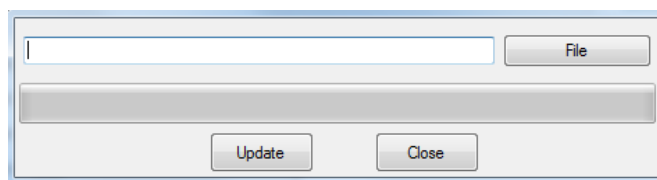


Use the “File” button to browse to the new firmware file and click on “Update” to start upgrading NCAN-1’s device firmware.

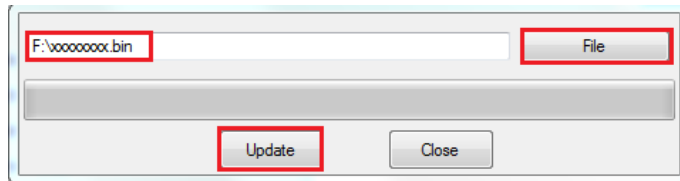

While upgrading, you will find the following message.

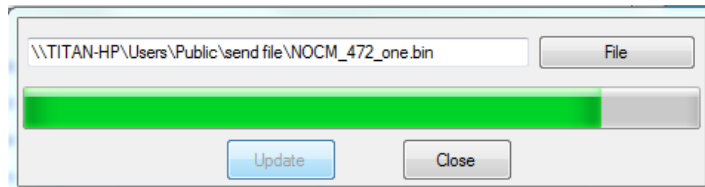

After successfully upgrading the firmware contents, there will be a message stating “Update Success!!”.

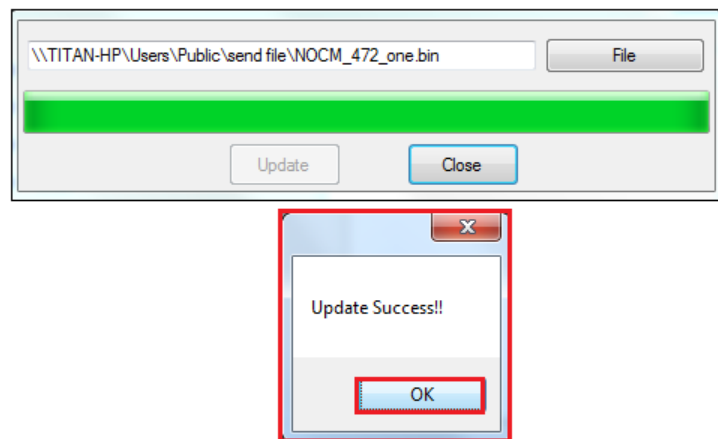

Click on “OK” to finish the firmware update procedure.

8.7.5 Importing/Exporting Configuration Settings

The “Configuration Import/Export” function allows you to back up and recover your NCOM device configuration settings.

8.7.5.1 Exporting Configuration Settings

Select an attached NCOM device then click the “Export” button.

The screenshot displays the NCOM Configuration web interface. At the top left, there is a 'Device List' table with columns for NAME, IP, MAC, FW Ver, and HW. The first row, 'CAN_20102601', is highlighted in blue and enclosed in a red box. Below the table is a 'Search' button and a 'Configuration Import/Export' section with 'Import' and 'Export' buttons, where the 'Export' button is also highlighted in red. To the right of the 'Export' button is the 'Device Control' section with buttons for 'Open WEB', 'Reboot Device', 'Restore Defaults', and 'Firmware Update'. Below these is the 'Device Status' section with fields for Server Name, Product, Serial Number, Firmware Revision, Hardware Revision, IP Address, and MAC Address, along with an 'Update' button. On the right side of the interface, there are sections for 'Port Status', 'CAN Settings', and 'Network Settings', each with various configuration options and buttons.

NAME	IP	MAC	FW Ver	HW ...
CAN_20102601	192.168.31.151	00:04:D9:80:B6:CA	1.20	v1.0

Configuration Import/Export

Import Export

Device Status

Server Name: CAN_20102601
Product: NCAN-1 series
Serial Number: 20102601
Firmware Revision: 1.20
Hardware Revision: v1.0
IP Address: 192.168.31.151
MAC Address: 00:04:D9:80:B6:CA

Device Control

Open WEB Reboot Device
Restore Defaults Firmware Update

Update

Port Status

Port: PORT 1

CAN Settings


Mode: Close
Bit Rate: 100k
Acceptance Mask/Filter: 00000000 00000000
TimeStamp: Off

Network Settings

Mode: Driver Mode (?)
Local Port: 2000 (?)
Dest. IP: 0.0.0.0 (?)
Dest. Port: 2000 (?)
TCP Timeout: 0 (?)
Keep alive: 10 (?)
UDP Setting: Use Unicast (?)
UDP Local Port: 4000 (?)
UDP Dest. IP: 0.0.0.0 (?)
UDP Dest. Port: 4000 (?)
Multicasting IP: 224.0.0.0 (?)
Buffer Length: 0 (?)
Timeout: 0 (?)


Set Default Update (?)

After you click “Export” you will find a “Save a configuration file” page. Click on “Save” to store the NCAN device configuration data to a NCAN_XXXXXXXX.xml file.

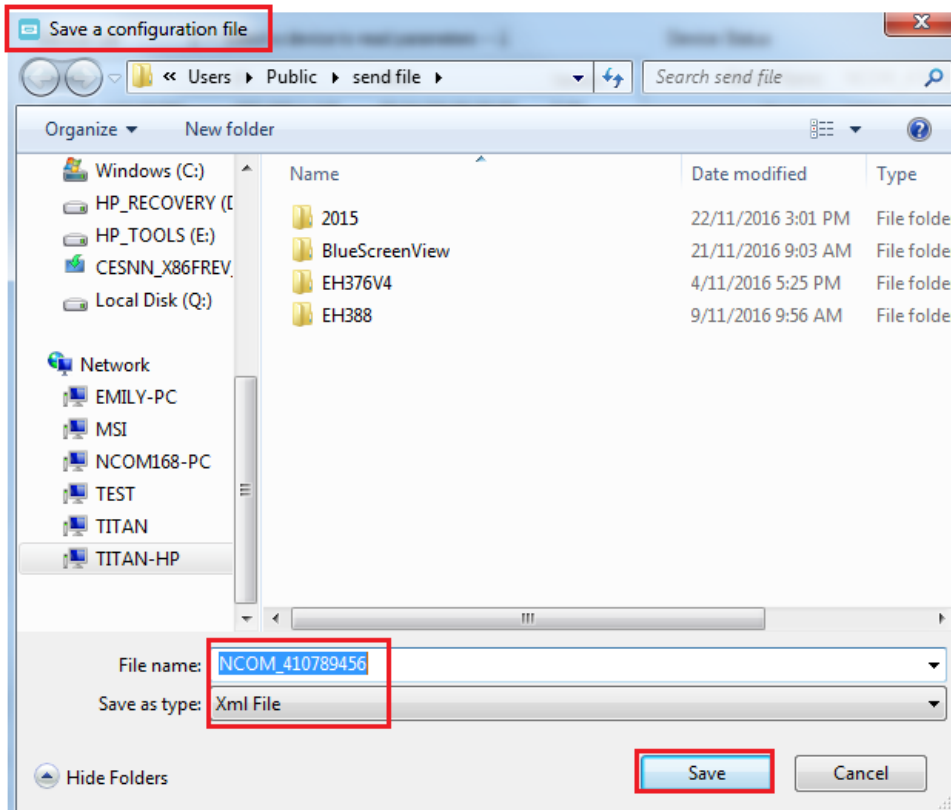


8.7.5.2 Importing Configuration Settings


Select an attached NCOM device then click the “Import” button.

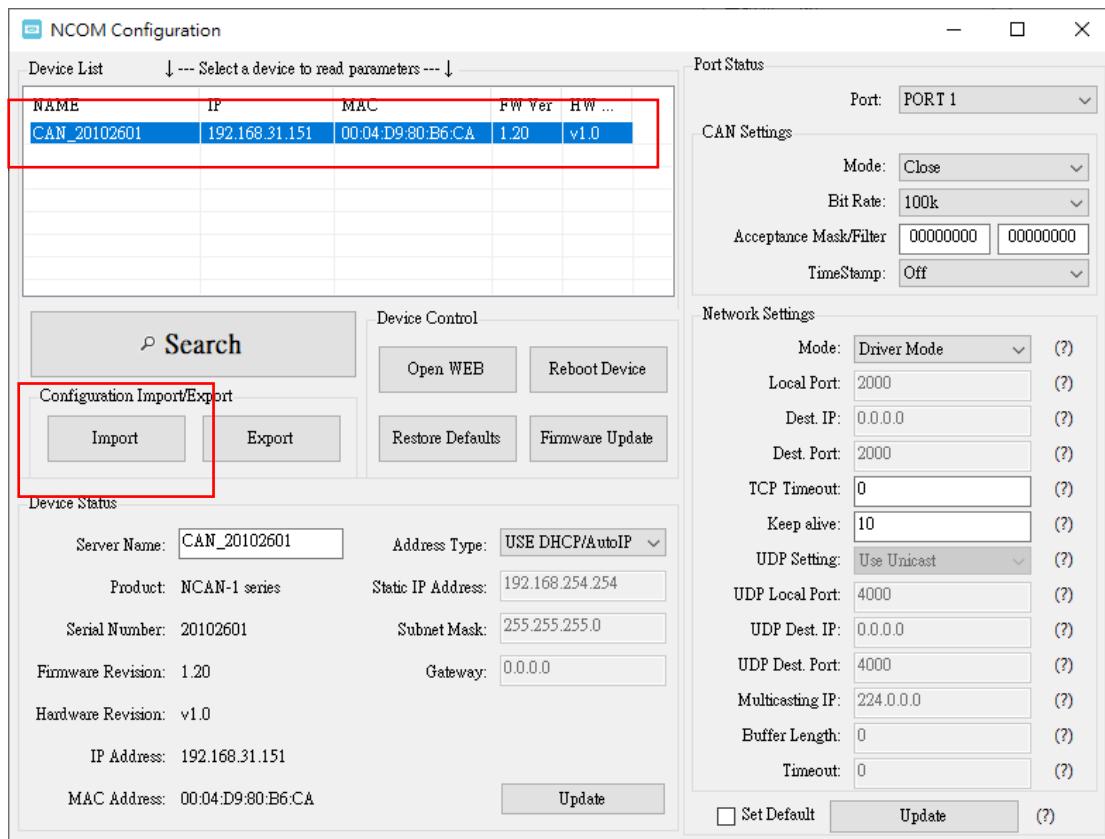

After you click “Import” you will find an “Open” page, select a NCOM configuration file and click “Open” to start uploading configuration data into NCOM.

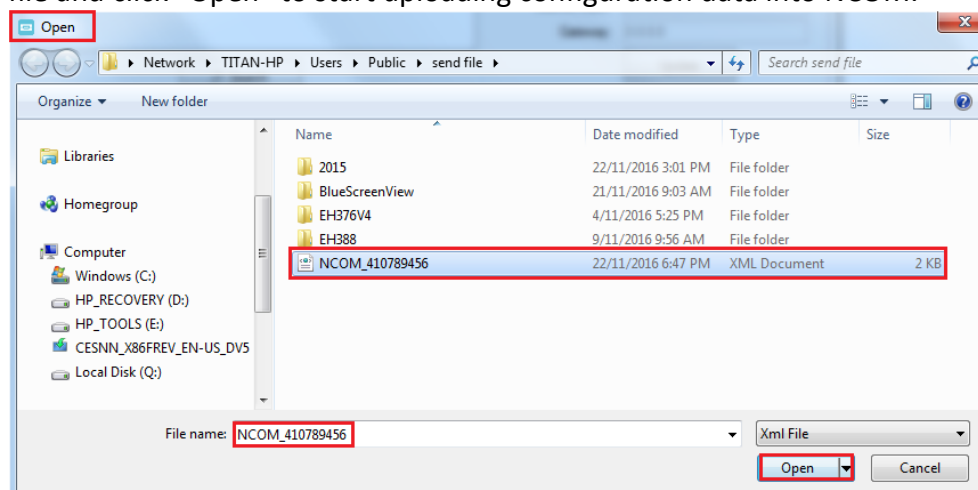


After all configuration data is uploaded into NCOM device, a message will indicate “Import Success!“. Click on “OK” to finish importing configuration data.

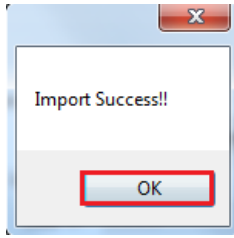


9. NCOM VIRTUAL SERIAL PORT MANAGER AND DRIVER UNINSTALLATION

9.1 Uninstalling NCOM Virtual Serial Port Manager and Virtual COM Port Driver


To uninstall NCOM Virtual Serial Port Manager and virtual serial port driver, click the "Start" button and navigate to "Control Panel". Choose "Uninstall a program" under "Programs".

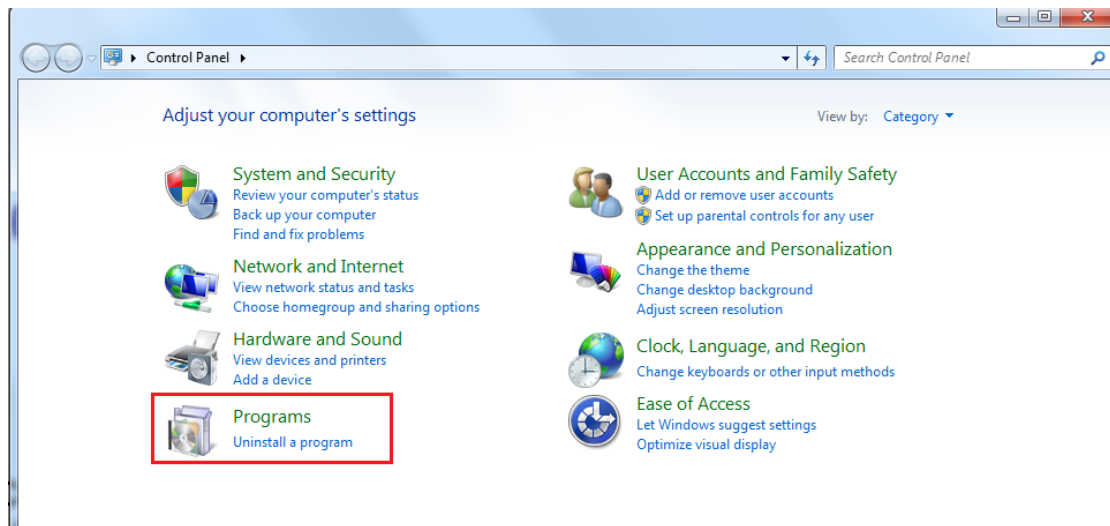


After you click "Uninstall a program", a page with a list of all your installed programs will be shown. Select "NCOM Virtual Serial Port Manager" and click on "Uninstall" to uninstall NCOM Virtual Serial Port Manager and virtual serial port driver.

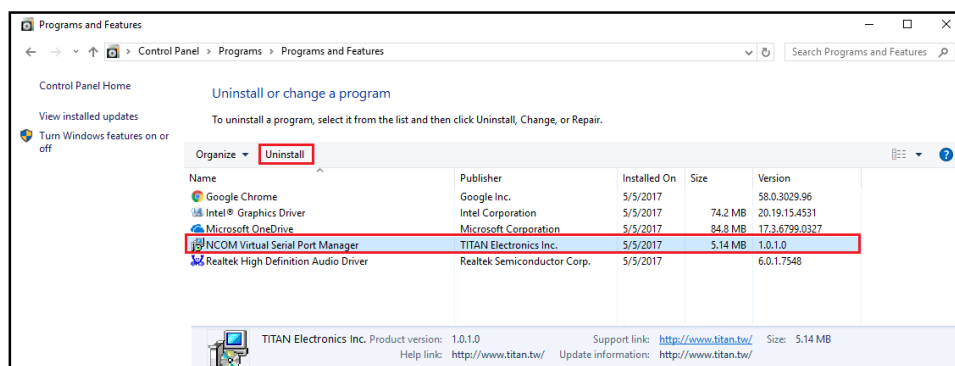


When you click on “Uninstall”, a message will ask “Are you sure you want to completely remove NCOM Virtual Serial Port Manager and all of its components?”. Confirm by click “Yes”.

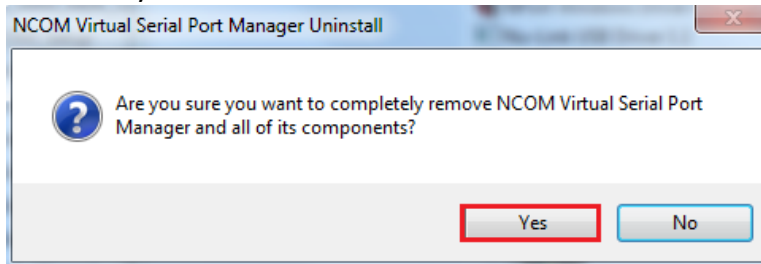

When uninstalling NCOM Virtual Serial Manager Port and virtual serial port driver in, you will find the following message.

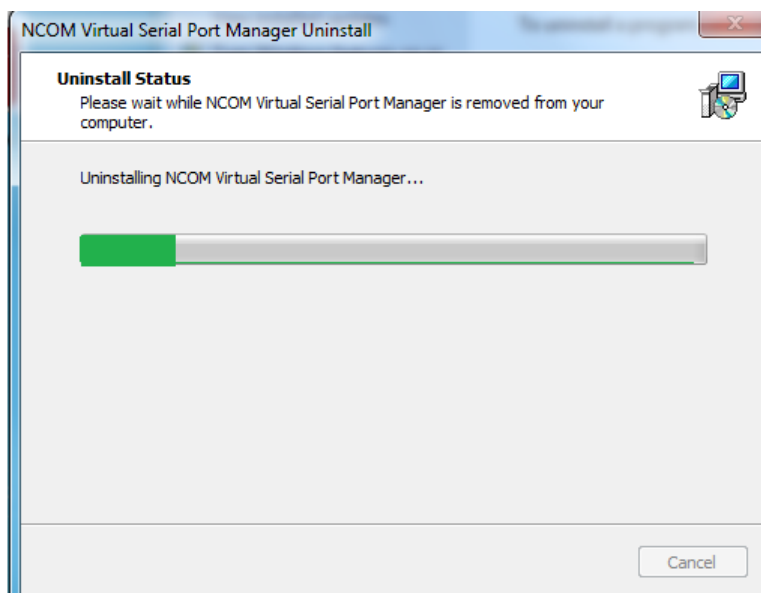

After successfully removing NCOM Virtual Serial Port Manager and virtual serial port driver, a message stating that “NCOM Virtual Serial Port Manager was successfully removed from your computer” will be shown.

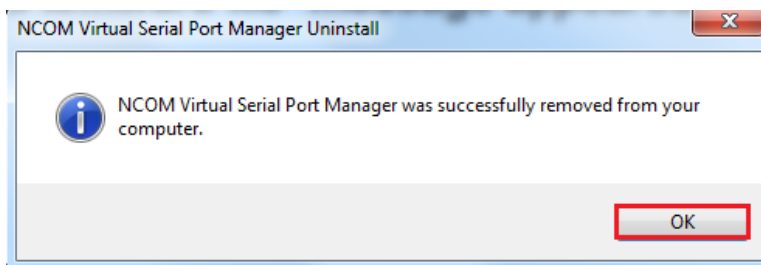

Click on “OK” to finish removing NCOM Virtual Serial Port Manager and virtual serial port driver.

10. FUNCTION DESCRIPTION

10.1 LED Indicators

The ETHERNET to CAN adapter has two LEDs (green LED & red LED) to indicate CAN bus status for monitoring CAN bus channel status. The green LED indicates CAN bus data activity while the red LED indicates a CAN bus error. Following are the definition of different LED combinations:

A: CAN bus channel open/close

When CAN bus channel opens, the green LED will turn on to indicate that the CAN bus channel is open; When CAN bus channel closes, the green LED will turn off to indicate that the CAN bus channel is closed.

B: CAN Bus Data Activity

When CAN data frame is sent or received, the green LED flashes continuously to indicate CAN bus data I/O activity.

C: CAN Bus Error

When an error occurs on the CAN bus, the red LED flashes continuously to indicate CAN bus error.

10.2 ASCII Command Set

The USB CAN adapter can be registered as a virtual serial port on the host computer. With simple ASCII commands the USB CAN adapter can be controlled over this serial port. User can send/receive commands from any simple serial terminal program.

Example: Set bitrate to 500Kbps, open CAN channel, send CAN frame (ID = 002h, DLC = 3, Data = 11 22 33), close CAN:

Command	Response	Function
S6[CR]	[CR]	Set bitrate of USB CAN adapter to 500Kbps
O[CR]	[CR]	Open CAN channel
t0023112233[CR]	z[CR]	Send CAN message (ID = 002h, DLC = 3, Data = 11 22 33)
C[CR]	[CR]	Close CAN channel

10.2.1 Command list

The commands are line based and terminated with newline character CR (0xD). On error the response will be 0x7 (BELL).

The “help” command (**‘H’, ‘h’ or ‘?’**) will list supported commands.

Command	Response	Function
H[CR]	[CR]	List all supported commands
h[CR]	[CR]	
?[CR]	[CR]	

Example: H[CR]

Return Code

List of Supported Commands:

- ‘O’ – Open the channel in Normal mode
- ‘L’ – Open the channel in Listen Only mode
- ‘Y’ – Open the channel in Loopback mode
- ‘C’ – Close CAN Channel
- ‘S’ – Set standard CAN bitrate
- ‘s’ – Set non-standard CAN bitrate
- ‘t’ – Transmit a standard frame
- ‘T’ – Transmit an extended frame
- ‘r’ – Transmit a standard remote request frame
- ‘R’ – Transmit an extended remote request frame
- ‘Z’ – Set timestamp on/off
- ‘m’ – Set acceptance mask
- ‘M’ – Set acceptance filter
- ‘F’ – Read status flag
- ‘V’ – Check software version
- ‘N’ – Check serial number
- ‘m’ – Set acceptance mask
- ‘M’ – Set acceptance filter
- ‘RST’ – Reset USB CAN Adapter
- ‘H’, ‘h’ or ‘?’ – List supported commands

10.2.1.1 *Opening the CAN Bus Channel*

The CAN bus channel will be opened with the command O[CR], L[CR] or Y[CR]. The command O[CR] will open the CAN bus channel in normal operation mode, the command L[CR] will open the CAN bus channel in listen only mode, in which no bus interaction will be done from the controller. the command Y[CR] will open the CAN bus channel in a loop-back mode, in which the USB to CAN adapter will also receive the frames that it sends. Before you use one of the commands, you should set a bitrate with the commands S or s.

Command	Response	Function
O[CR]	[CR]	Open the channel in Normal mode
L[CR]	[CR]	Open the channel in Listen Only mode
Y[CR]	[CR]	Open the channel in Loopback mode

10.2.1.2 *Closing the CAN Bus Channel*

The CAN bus channel will be closed with the command C[CR]. The command can only be used if the CAN bus channel is open.

Command	Response	Function
C[CR]	[CR]	Close the CAN channel if it is opened

10.2.1.3 Setting CAN Bitrate (Standard)

The CAN bus bitrate can be set with the command SX[CR]. The command can only be used if the CAN bus channel is closed.

Command	Response	Function
S00[CR]	[CR]	Set the CAN bus bitrate to 5K
S0[CR]	[CR]	Set the CAN bus bitrate to 10K
S1[CR]	[CR]	Set the CAN bus bitrate to 20K
S2[CR]	[CR]	Set the CAN bus bitrate to 50K
S3[CR]	[CR]	Set the CAN bus bitrate to 100K
S4[CR]	[CR]	Set the CAN bus bitrate to 125K
S5[CR]	[CR]	Set the CAN bus bitrate to 250K
S6[CR]	[CR]	Set the CAN bus bitrate to 500K
S7[CR]	[CR]	Set the CAN bus bitrate to 800K
S8[CR]	[CR]	Set the CAN bus bitrate to 1M

Example: S6[CR] will be set USB CAN adapter to 500K bps CAN Bitrates.

Note: The USB-CAN-SI-M only supports 20 K bits to 1 M bits.


10.2.1.4 Setting CAN Bitrate (Advanced)

A more user defined bus bitrate can be configured with the command sXXXXXXXX[CR]. As with the standard bus timing command above, you can only use this command when the CAN bus channel is closed.

sXXXXXXXX [CR] sets the bitrate registers of the CAN controller. Users can set **non-standard bitrates** which are not supported by the "SX" command.

The USB to CAN adapter provides a CAN Bitrate Calculator program to calculate the value of CAN bitrate registers for setting **non-standard bitrates**. Follow these steps to calculate and set **non-standard bitrates** for the USB to CAN adapter:

1. Open the CAN Bitrate Calculator program.
2. Enter CAN Bitrate ("150" for 150Kbps CAN Bitrate) in the field "Desired bitrate:".
3. Click "Calculate" to calculate the value of CAN bitrate registers.
4. Remember the topmost value of CAN bitrate registers.
5. **e.g. Command: s013070603** for 150 kbps CAN Bitrate.
6. Click "Quit" to exit the CAN Bitrate Calculator program.

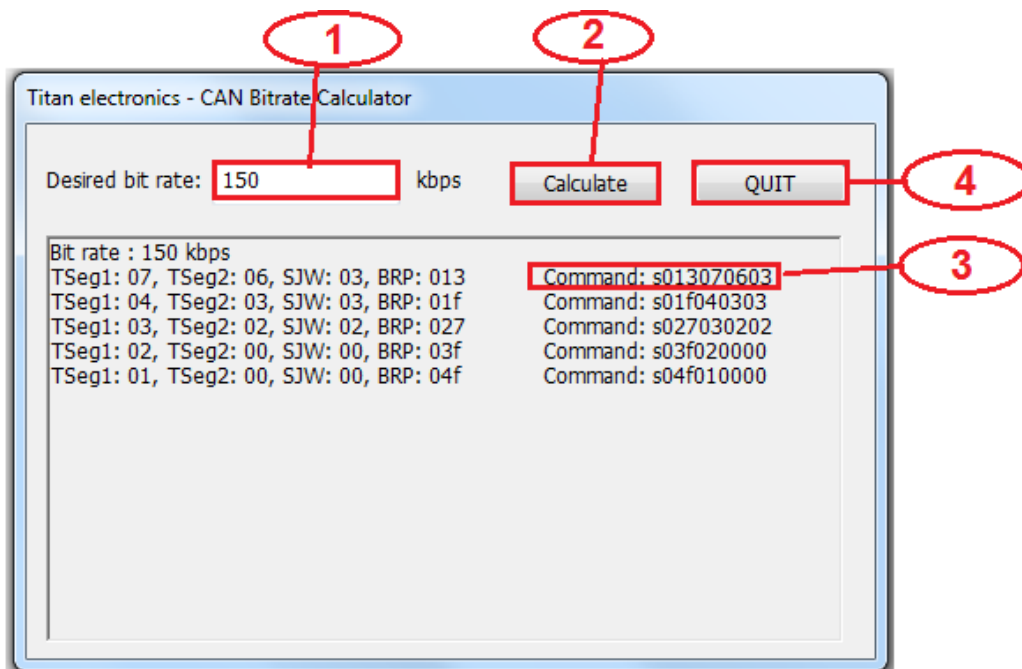

Example: s013070603[CR] will be set the bitrate to 150Kbps.

10.2.1.5 Transmitting a Standard CAN Frame

Transmitting a standard CAN frame (ID: 11 bit) over a CAN bus can be done with the command `tiiidddd...dd[CR]`. The return value will be `z[CR]` or the normal error byte (BELL). The command is only available when the CAN bus channel is open.

Command	Response	Function
<code>tiiidddd...dd[CR]</code>	<code>z[CR]</code>	Transmits a standard CAN message (11 bit) over the CAN bus

iii: Standard CAN frame (11 bit) identifier in hexadecimal format (000-7FF).

l: CAN data length (0-8) DLC, with the maximum value being 8 (8 bytes).

dd: Data byte value in hexadecimal format (00-FF). The number of bytes must be equal to the data length field.

Example: `t00231199FF[CR]` will send a standard CAN frame with ID = 002h, DLC = 3, Data = 11 99 FF.

10.2.1.6 Transmitting a Standard Remote Request CAN Frame

Transmitting a standard remote request CAN frame (ID: 11 bit) over a CAN bus can be done with the command `riiil[CR]`. The return value will be `z[CR]` or the normal error byte (BELL). The command is only available when the CAN bus channel is open.

Command	Response	Function
<code>riiil[CR]</code>	<code>z[CR]</code>	Transmits a standard remote request (11 bit) over the CAN bus

iii: Standard remote request CAN frame (11 bit) identifier in hexadecimal format (000-7FF).

l: CAN data length to request (0-8) DLC, with the maximum value being 8 (8 bytes).

Example: `r0023[CR]` will send a standard remote request CAN frame with ID = 002h, DLC = 3 and request 3 data bytes.

10.2.1.7 Transmitting an Extended CAN Frame

Transmitting an extended CAN frame (ID: 29 bit) over a CAN bus can be done with the command `TiiiiiiiIdddd...dd[CR]`. The return value will be `Z[CR]` or the normal error byte (BELL). The command is only available when the CAN bus channel is open.

Command	Response	Function
<code>TiiiiiiiIdddd...dd[CR]</code>	<code>Z[CR]</code>	Transmits an extended CAN frame (11 bit) over the CAN bus

`iiiiiiiI`: Extended CAN frame (29 bit) identifier in hexadecimal format (00000000-1FFFFFFF).

`I`: CAN data length (0-8) DLC, with the maximum value being 8 (8 bytes).

`dd`: Data byte value in hexadecimal format (00-FF). The number of bytes must be equal to the data length field.

Example: `T1FFFFFFF3112233[CR]` will send an extended CAN frame with ID = 1FFFFFFFh, DLC = 3, data = 11 22 33.

10.2.2 Transmitting an Extended Remote Request CAN Frame

Transmitting an extended remote request CAN frame (ID: 29 bit) over a CAN bus can be done with the command `RiiiiiiiI[CR]`. The return value will be `Z[CR]` or the normal error byte (BELL). The command is only available when the CAN bus channel is open.

Command	Response	Function
<code>RiiiiiiiI[CR]</code>	<code>Z[CR]</code>	Transmits an extended remote request (29 bit) over the CAN bus

`iiiiiiiI`: Extended remote request CAN frame (29 bit) identifier in hexadecimal format (00000000-1FFFFFFF).

`I`: CAN data length to request (0-8) DLC, with the DLC maximum value being 8 (8 bytes).

Example: `R100000023[CR]` will send an extended remote request CAN frame with ID = 10000002h, DLC = 3 and request 3 data bytes.

10.2.2.1 *Setting Timestamps ON/OFF*

The timestamp command will set the timestamp functionality of received frames ON or OFF. This command is only available when the CAN channel is closed.

Command	Response	Function
Z1[CR]	[CR]	Set the timestamp functionality on received frames ON
Z0[CR]	[CR]	Set the timestamp functionality on received frames OFF

10.2.2.2 Setting Acceptance Mask

The acceptance mask, in conjunction with the acceptance code (M), defines which CAN message frames (i.e. of a specific ID or range of CAN IDs) will be passed to the serial interface. The acceptance mask value corresponds to bits within a range of valid CAN IDs for either standard or extended CAN frames. This command is only active if the CAN channel is initiated and not opened.

Set Acceptance Mask (m) command should be executed *prior* to Set Acceptance Code (M).

Note: The CAN channel will revert to its prior state after execution. For example, if the channel is open when this command is executed, the channel will update the setting and return to the open state.

Command	Response	Function
miii[CR]	[CR]	Set acceptance mask for standard CAN frame (11 bit) identifier
miiiiiii[CR]	[CR]	Set acceptance mask for extended CAN frame (29 bit) identifier

iii = standard 11-bit CAN mask (0x000 through 0x7FF)

iiiiiii = extended 29-bit CAN mask (0x00000000 through 0x1FFFFFFF)

A value of "0" in a bit location indicates that the bit location ID value is to be *ignored* when filtering messages.

Default is to pass all frames (acceptance mask = 0x000 for standard messages and 0x00000000 for extended messages)

Example: m700[CR] set acceptance mask to check bits 10, 9 and 8 against the filter. Bits 7 through 0 are ignored as "don't care". Use the acceptance mask in conjunction with the acceptance code, which is explained next.

10.2.2.3 Setting Acceptance Code

The acceptance code/filter, in conjunction with the acceptance mask (m), defines which CAN message frames (i.e. of a specific ID or range of CAN IDs) will be passed to the serial interface. The acceptance code value corresponds to a valid CAN IDs for either standard or extended CAN frames. This command is only active if the CAN channel is initiated and not opened.

The Set Acceptance Mask (m) command should be executed *prior* to the Set Acceptance Code (M) command.

Note: The CAN channel will revert to its prior state after execution. For example, if the channel is open when this command is executed, the channel will update the setting and return to the open state.

Command	Response	Function
Miii[CR]	[CR]	Set acceptance code for standard CAN frame (11 bit) identifier
Miiiiiii[CR]	[CR]	Set acceptance code for extended CAN frame (29 bit) identifier

iii = standard 11-bit CAN mask (0x000 through 0x7FF)

iiiiiii = extended 29-bit CAN mask (0x00000000 through 0x1FFFFFFF)

Default is to pass all frames (acceptance code = 0x7FF for standard messages and 0x1FFFFFFF for extended messages)

Example: m1FF[CR] sets acceptance code to receive standard messages with the CAN ID of 0x1FF. If used in conjunction with the acceptance mask example above, frames of the range 0x100 through 0x1FF will be passed, and all other CAN IDs will be blocked.

10.2.2.4 Getting Status Flags

User can use the command F[CR] to get the status bits when an error occurs. A two-byte BCD number is returned to correspond to the 8-bits of the internal register of the CAN controller.

Command	Response	Function
F[CR]	XX[CR]	Get CAN bus status

Return Codes

XX[CR]

XX = CAN bus status (A bit set to “1” indicates a true condition):

Bits 2, 1, 0: Last Error Code(LEC), The LEC field holds a code, which indicates the type of the last error to occur on the CAN bus.

LEC	Meaning
Bits 2, 1, 0	
Error Code 0 0, 0, 0	No error.
Error Code 1 0, 0, 1	Stuff error: more than 5 equal bits in a sequence have occurred in a part of a received message where this is not allowed.
Error Code 2 0, 1, 0	Form error: a fixed format part of a received frame has the wrong format.
Error Code 3 0, 1, 1	ACK Error: the message this CAN core transmitted was not acknowledged by another node.
Error Code 4 1, 0, 0	Bit 1 error: during the transmission of a message (with the exception of the arbitration field), the device wanted to send a recessive level (bit of logical value “1”), but the monitored bus value was dominant. Bit 0 error: Bit 1 error: during the transmission of a message (or acknowledged bit, or active error flag, or overload flag), the device wanted to send a dominant level (bit of logical value “0”), but the monitored bus value was recessive.
Error Code 5 1, 0, 1	During the bus-off recovery, this status is set each time a sequence of 11 recessive bits have been monitored. This enables the CPU to monitor the proceedings of the bus-off recovery sequence (indicating the bus is not stuck at dominant or continuously disturbed).
Error Code 6 1, 1, 0	CRC error: the CRC checksum was incorrect in the message received, the CRC received for an incoming message does not match with the calculated CRC for the received data.
Error Code 7 1, 1, 1	Unused: no CAN bus event was detected since the CPU wrote this value to the LEC.

Bit 3: Transmitted a message successfully

1 = Since this bit was last reset by CPU, a message has been successfully (error-free and acknowledged by at least one other node) transmitted.

0 = Since this bit was last reset by CPU, no message has been transmitted.

Bit 4: Received a message successfully

1 = A message has been successfully received since this bit was last reset by CPU (independent of the result of acceptance filtering).

0 = No message has been successfully received since this bit was last reset by CPU

Bit 5: Error Passive (Read only)

1 = The CAN core is in the error passive state as defined in the CAN specification.

0 = The CAN core is in the error active.

Bit 6: Error Warning Status (Read only)

1 = At least one of the error counters in the EML (Error Management Logic) has reached the error warning limit of 96.

= Both error counters are below the error warning limit of 96.

Bit 7: Bus-off Status (Read only)

1 = The CAN Module is in bus-off state.

0 = The CAN Module is not in bus-off state.

<BELL> = ERROR

Bit 0 ~ Bit 7 returned to correspond to the 8-bits of the internal register of the CAN controller.

10.2.2.5 Getting Version Information

The command V[CR] to retrieve the current firmware version of the USB CAN adapter.

Command	Response	Function
V[CR]	VXXXX[CR]	Get the current firmware version of the USB CAN adapter

This command is always available and will return the version information formatted like this: VXXXX[CR].

10.2.2.6 Getting Serial Number

The command N[CR] will retrieve the serial number of the USB CAN adapter.

Command	Response	Function
N[CR]	TXXXXXXXX[CR]	Get the serial number of the USB CAN adapter

This command is always available and will return the decimal serial number like this: TXXXXXXXX[CR].

10.2.2.7 Resetting the USB CAN adapter


The command RST[CR] will reset the USB CAN adapter.

Command	Response	Function
RST[CR]	-	Reset the USB CAN adapter


This command is always available.

Settings procedure for selecting and configuring the USB to CAN adapter


1. Open CANHacker and click “Settings” under the menu.

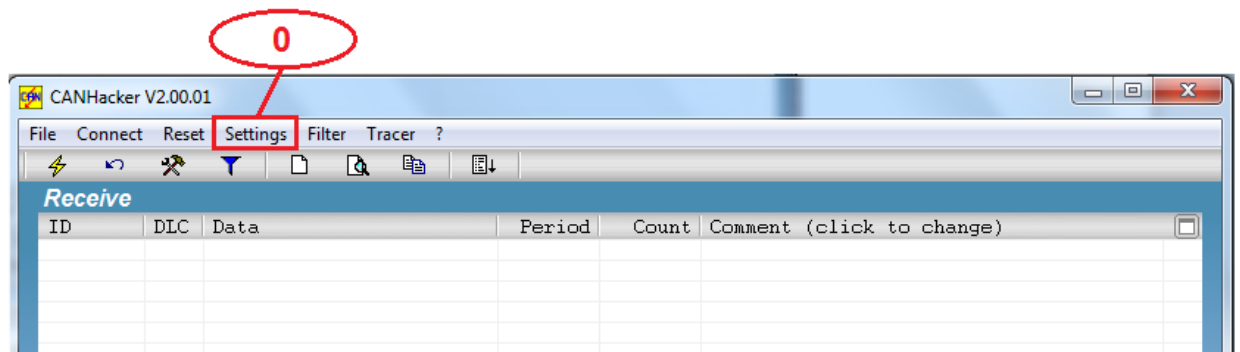

2. Select COM port of the USB to CAN adapter.
3. Check “RTS HS” to enable RTS handshake function.
4. Check “Time Stamp” to enable timestamp function.
5. Select CAN Baudrate for the CAN bus operating speed.
6. Finally, click “OK” to finish the settings and return to the main panel.

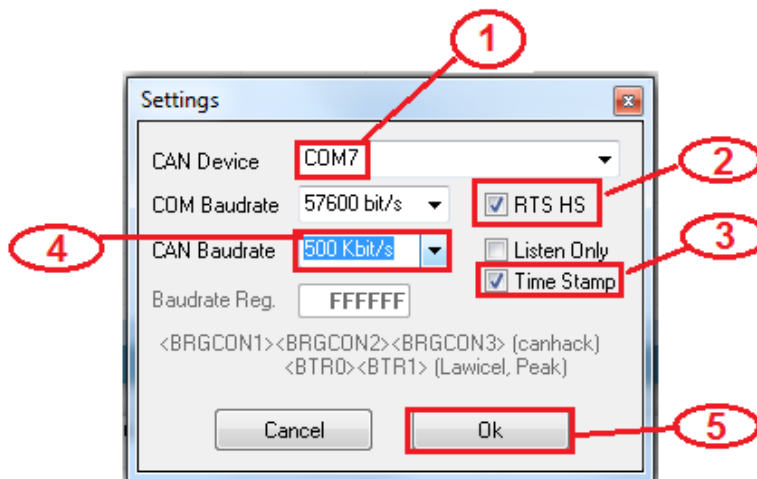

You may connect the USB to CAN adapter after configuration. Click “Connect”, as shown in the figure, to start the CANHacker software operation.

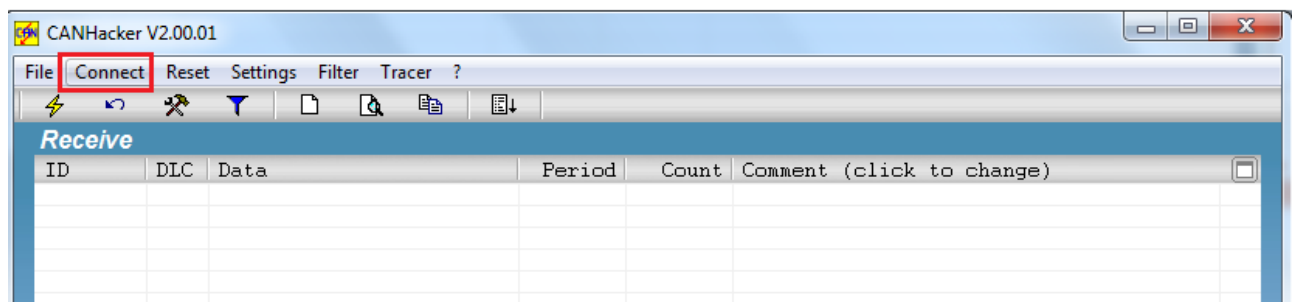

When USB to CAN adapter successfully connects, you will find the message “Connected to XXX kbits/s”, firmware version VXXXX and operation mode at the

bottom of the main panel.

The screenshot shows a software interface for configuring a CAN bus. The main panel contains the following fields and controls:


- ID:** 12345688
- DLC:** 8
- Data:** AA CC DD EE FF 66 77 88
- Comment:** (empty)
- 29 Bit Id
- RTR
- Period (ms):** 100
- TX Mode:** Periodic
- Trigger ID:** (empty)
- Trigger Data:** (empty)
- Buttons:** Single Shot, Copy, Send All, Add, Stop All, Delete

The status bar at the bottom of the main panel is highlighted with red boxes and contains the following information:

- Connected to 100 kbit/s
- Firmware: V0.73
- Filter: Off
- Normal Mode

Receiving CAN frames


When CANHacker receives CAN frames from another CAN node, it will show all CAN frame messages in the middle of main panel. The CAN frame messages includes ID, DLC, Data, Period, Count.

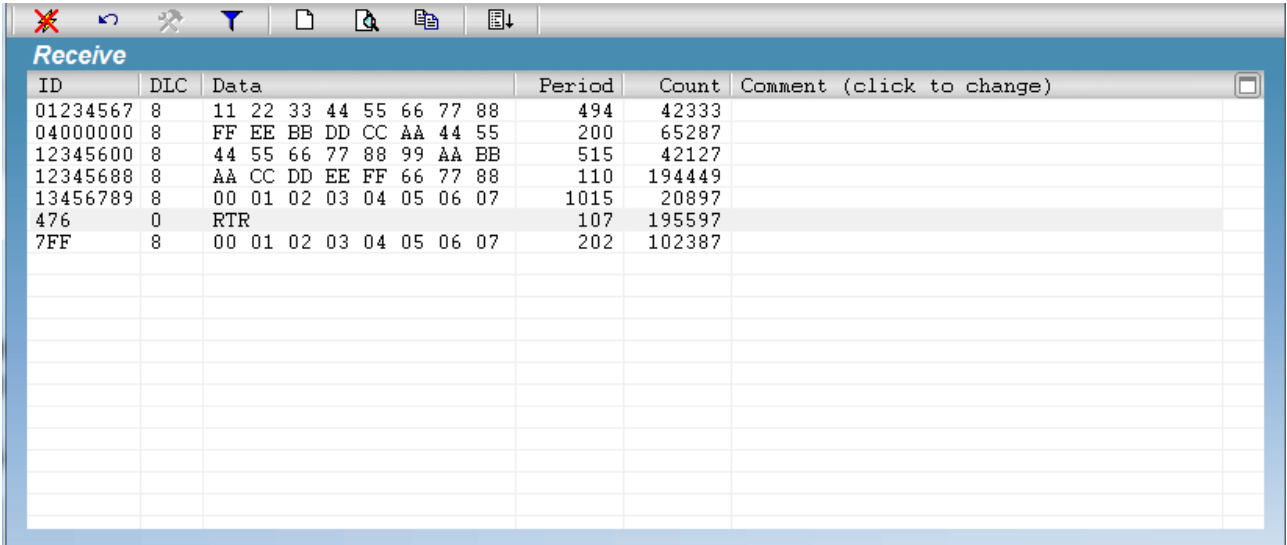

ID	DLC	Data	Period	Count	Comment (click to change)
01234567	8	11 22 33 44 55 66 77 88	494	42333	
04000000	8	FF EE BB DD CC AA 44 55	200	65287	
12345600	8	44 55 66 77 88 99 AA BB	515	42127	
12345688	8	AA CC DD EE FF 66 77 88	110	194449	
13456789	8	00 01 02 03 04 05 06 07	1015	20897	
476	0	RTR	107	195597	
7FF	8	00 01 02 03 04 05 06 07	202	102387	

Sending CAN frames

CANHacker provides many parameters for sending CAN frames to another CAN node, you can set the following parameters on the bottom of the main panel for CAN data transmission:

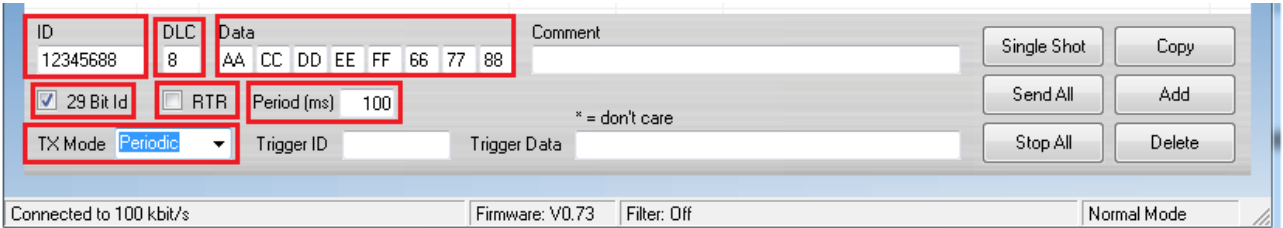

The screenshot shows the transmission control panel with the following fields and controls:

- ID: 12345688
- DLC: 8
- Data: AA CC DD EE FF 66 77 88
- Comment: (empty)
- 29 Bit Id
- RTR
- Period (ms): 100
- TX Mode: Periodic
- Trigger ID: (empty)
- Trigger Data: (empty)
- Buttons: Single Shot, Copy, Send All, Add, Stop All, Delete
- Status: Connected to 100 kbit/s, Firmware: V0.73, Filter: Off, Normal Mode

Select transmit an extended CAN Frame (29 bits ID) or a standard CAN frame (11 bits ID).

Check "29 Bit Id" 29 Bit Id to transmit an extended CAN Frame (29 bits ID) and uncheck "29 Bit Id" 29 Bit Id to transmit a standard CAN frame (11 bits ID).

Select remote request frame mode or transmit CAN frame mode.

Check "RTR" RTR for a remote request frame mode or uncheck "RTR" RTR for transmit CAN frame mode.

Enter CAN frame messages in the respective fields, including ID, DLC, Data.

ID	DLC	Data							
12345688	8	AA	CC	DD	EE	FF	66	77	88

In "TX Mode" dialog box, you can select "off", "Periodic", "RTR", "Trigger" modes.

TX Mode	Periodic
	off
	Periodic
nnected to	RTR
	Trigger

When "Periodic" mode is selected, you can enter "Period(ms)" to send CAN frames message repeatedly (enter "500" to send CAN messages every 500ms).

Period (ms)	500
-------------	-----


To send a single CAN frame message, click "Single Shot". Click "Send All" to send CAN frames message repeatedly.

To stop sending CAN frame messages, click "Stop All".

Single Shot
Send All
Stop All


Assistant features

There are many assistant features included in CANHacker, as shown in the figure below:

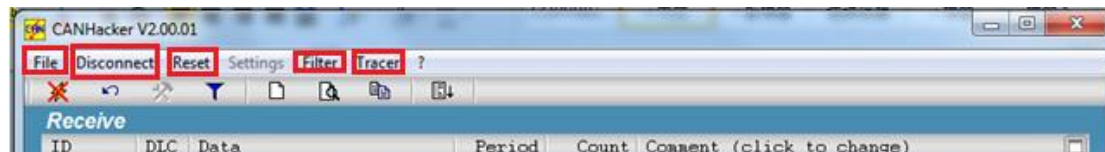


Saving data to file or loading data from file:


Select "File" option to save Rx List, Trace, Tx List, Command List and Load Trace, Tx List, Command List.

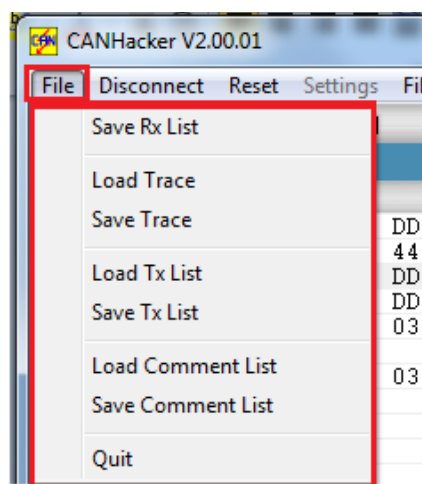


Click "Disconnect" to stop CANHacker.

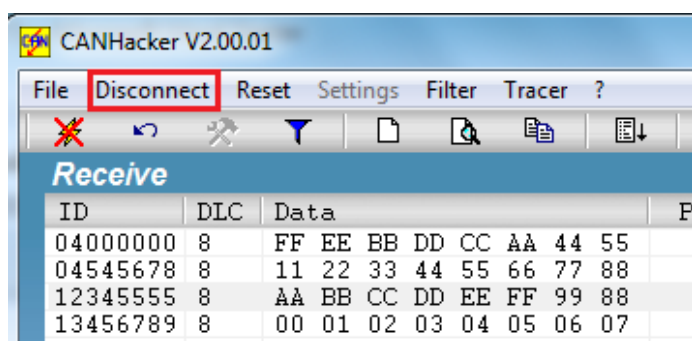



Click "Reset" to renew the received CAN frame messages and reset the transmission (received) count.

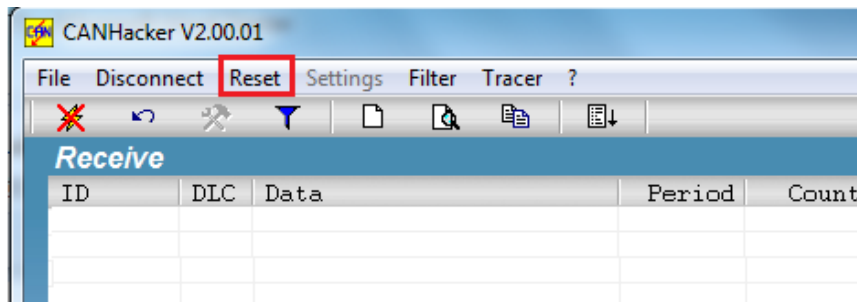

Select "Filter" to set mask filter and range filter.

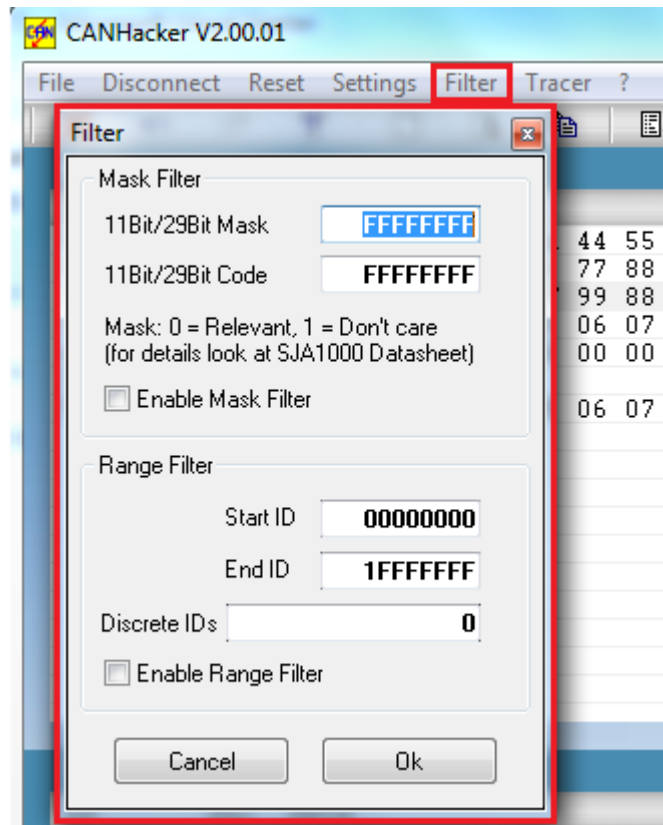


Select "Tracer" or "Monitor" to trace or monitor the CAN frame messages.

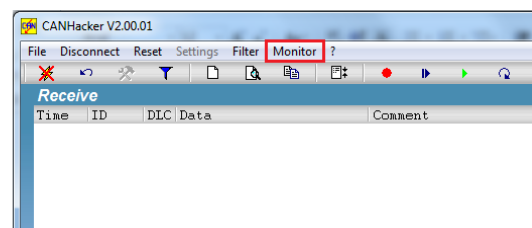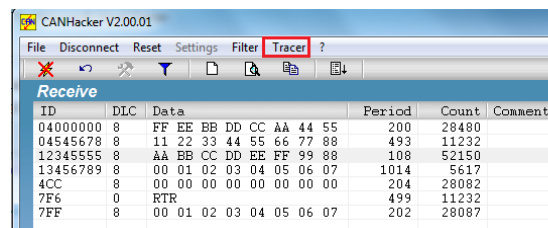

11.2 Titan CAN Test Program

Titan CAN test program is a Windows application software for testing and transmitting/receiving CAN frames. The Titan CAN test program is an easy to use software. Through the software users can easily test and analyze the CAN frames.


Following shows its main panel:

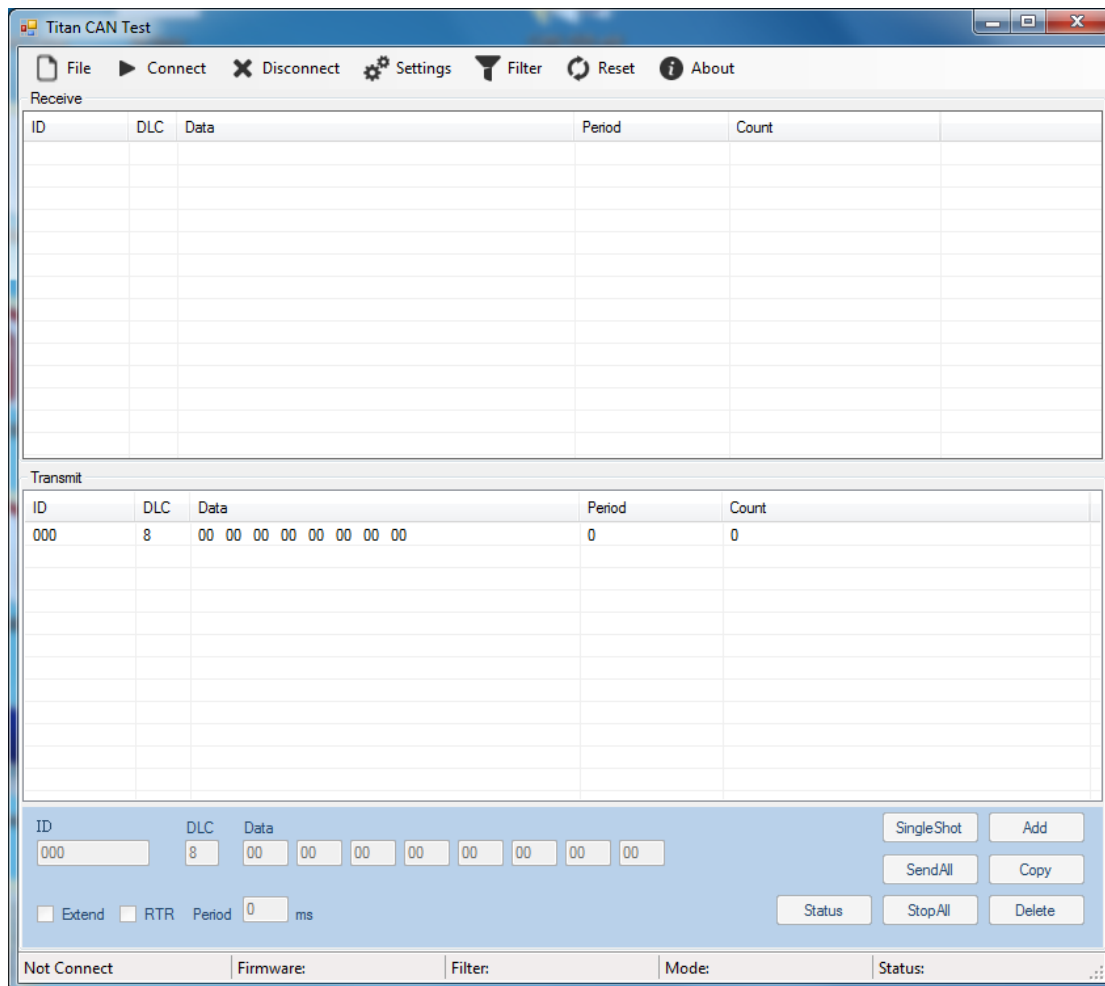


The following section will briefly introduce the necessary steps on how to use the Titan CAN test program.

Settings procedure for selecting and configuring the USB to CAN adapter


1. Open Titan CAN test program and click “Settings” under the menu.

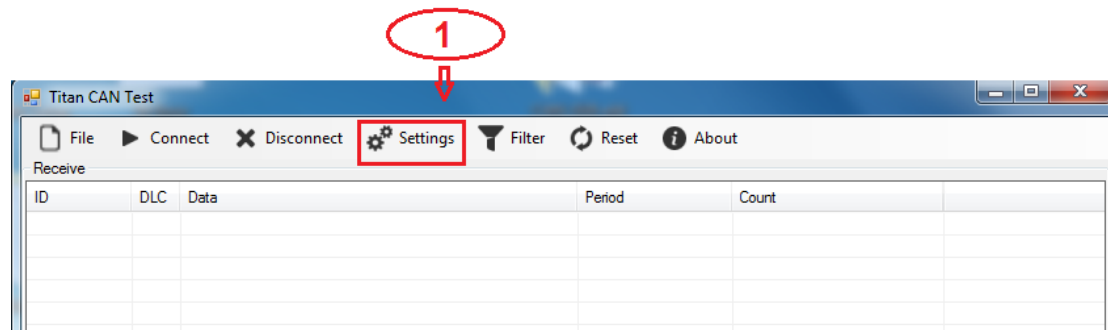

2. Select COM port of the USB to CAN adapter.
3. Select CAN Baudrate for the CAN bus operating speed.
4. Check “Time Stamp” to enable timestamp function.
5. Check “LoopBack” or “ListenOnly” to open the CAN bus adapter in loopback or listen only operation mode, otherwise the CAN bus adapter will open in normal operation mode.
6. Finally, click “OK” to finish the settings and return to the main panel.

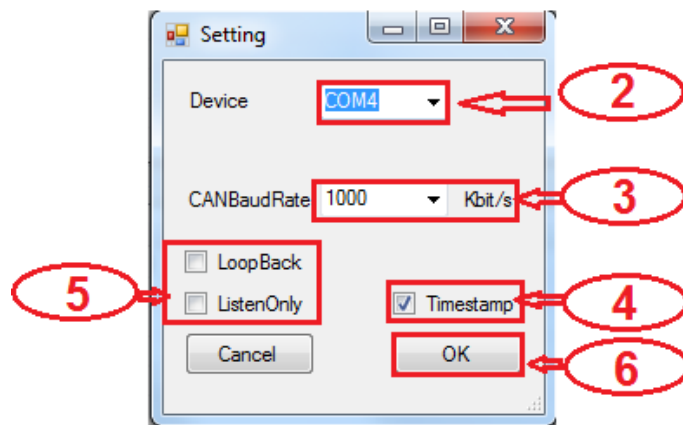

You may connect the USB to CAN adapter after configuration. Click “Connect”, as shown in the figure, to start the Titan CAN test program operation.

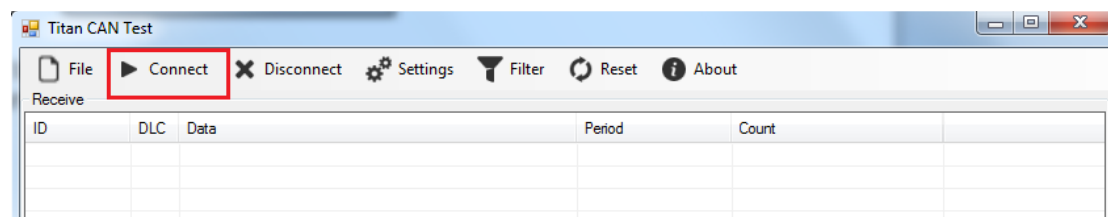

When USB to CAN adapter successfully connects, you will find the message “Connected to XXX kbits/s”, firmware version VXXXX and operation mode at the bottom of the main panel.

ID	DLC	Data			
000	8	00 00 00 00 00 00 00 00	SingleShot	Add	
<input type="checkbox"/> Extend <input type="checkbox"/> RTR Period 0 ms			SendAll	Copy	
			Status	StopAll	Delete
Connected to 1000Kbit/s		Firmware:V1.00	Filter:Off	Mode:Normal	Status: ...

Receiving CAN frames

When Titan CAN test program receives CAN frames from another CAN node, it will show all CAN frame messages in middle of main panel. The CAN frame messages includes ID, DLC, Data, Period, Count.

ID	DLC	Data	Period	Count
12345678	8	44 55 66 77 78 88 88 88	110	58
01234568	8	44 55 66 77 78 88 88 88	111	10
12345698	8	44 55 66 77 78 88 88 88	114	503397
1FF	8	66 55 44 33 22 77 88 88	111	60
1FF	0	RTR	108	49
000001FF	0	RTR	109	56
000001FF	8	55 66 77 88 99 DD CC FF	114	502829

Sending CAN frames

Titan CAN test program provides many parameters for sending CAN frames to another CAN node, you can set the following parameters on the bottom of the main panel for CAN data transmission:

ID	DLC	Data	Period	Count
12345655	8	DD AA 33 44 45 55 66 77	100	502082
1234DDDD	7	88 77 99 56 65 66 FF	100	500005

ID: 12345655, DLC: 8, Data: DD AA 33 44 45 55 66 77, Period: 100 ms

Extend RTR

Buttons: SingleShot, Add, SendAll, Copy, Status, StopAll, Delete

Connected to 1000Kbit/s, Firmware:V0.73, Filter:Off, Mode:Normal, Status:

Select transmit an extended CAN frame (29 bits ID) or a standard CAN frame (11 bits ID).

Check "Extend" Extend to transmit an extended CAN Frame (29 bits ID) and uncheck "Extend" Extend to transmit a standard CAN frame (11 bits ID).

Select remote request frame mode or transmit CAN frame mode.

Check "RTR" RTR for a remote request frame mode or uncheck "RTR" RTR for transmit CAN frame mode.

Enter CAN frame messages in the respective fields, including ID, DLC, Data.

ID	DLC	Data							
12345655	8	DD	AA	33	44	45	55	66	77

When "Periodic" mode is selected, you can enter "Period(ms)" to send CAN frames message repeatedly (enter "100" to send CAN messages every 100ms).

Period	100	ms
--------	-----	----

To send a single CAN frame message, click "Single Shot". Click "Send All" to send CAN frames message repeatedly.

To stop sending CAN frame messages, click "Stop All".

SingleShot
SendAll
StopAll


To add a new send CAN frame message, click "Add" to add new send CAN frame message and click "Copy" to copy a send CAN frame message repeatedly.

To delete a send CAN frame message, click "Delete" to delete send CAN frame message.


Add
Copy
Delete

Assistant features


There are many assistant features included in Titan CAN test program, as shown in the figure below:

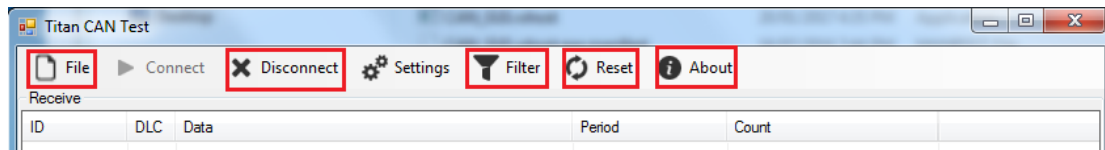


Select **"File"** option to save Rx List, Tx List and Load Tx List.

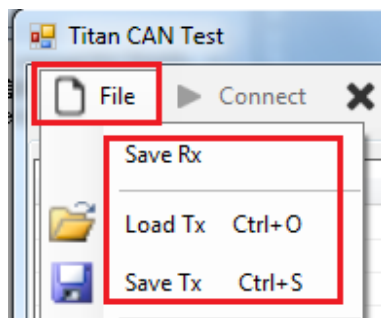

Click **"Disconnect"** to stop Titan CAN test program.

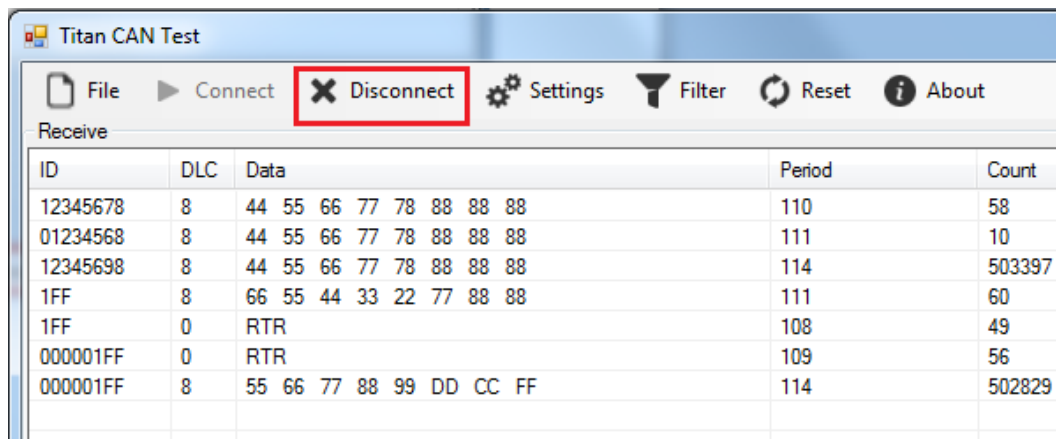


Select **"Filter"** to set mask filter and range filter.

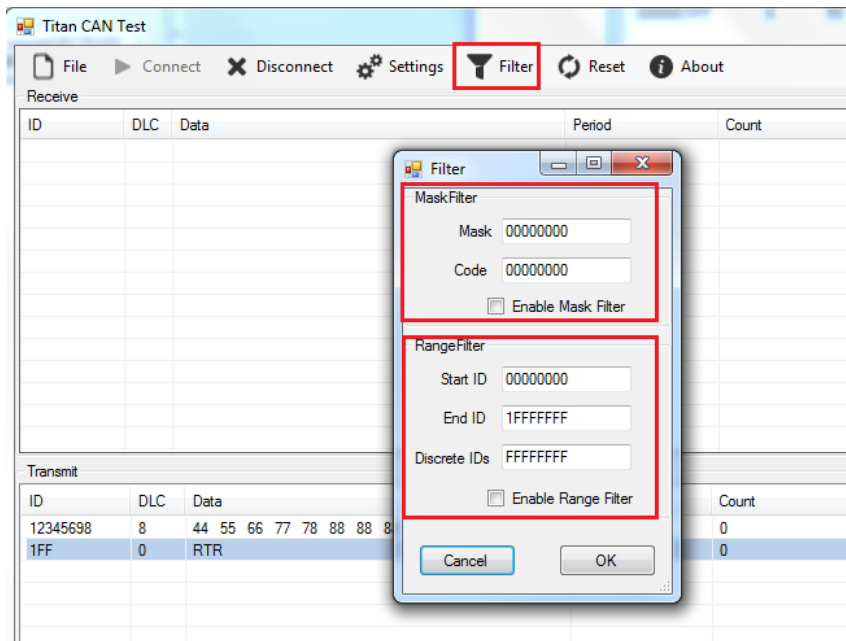

Mask Filter: Set “Acceptance Code Register” and “Acceptance Mask Register” for CAN bus controller to specify the CAN IDs that are passed or blocked; after setting “Mask” and “Code”, check “Enable Mask Filter” then click “OK” to finish the Mask Filter settings and return to the main panel.


Note: Before you set the “Mask Filter” function, you need to disconnect the USB adapter. After setting the value of “Mask” + “Code”, connect the USB adapter again to enable the “Mask Filter” function, because the “Mask Filter” function is only available if the CAN adapter is initiated and not opened.

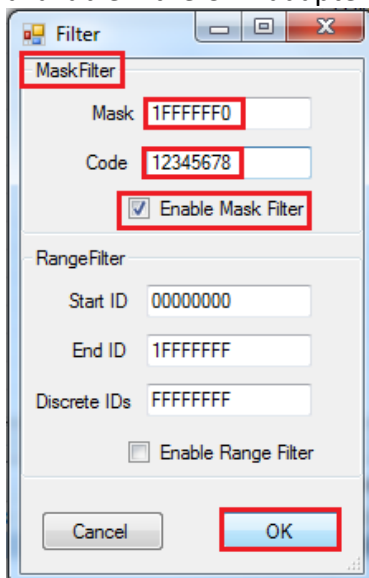

Mask Filter example: After setting “Mask” to 1FFFFFF0 and “Code” to 12345678, CAN message frames of the range 0x12345670 through 0x1234567F will be passed and all other CAN IDs will be blocked.


Range Filter: Set “Start ID” and “Stop ID” for USB CAN adapter to specify a range of

CAN IDs that are to be passed; after setting “Start ID” and “Stop ID”, check “Enable Range Filter” then click “OK” to finish the Ranger Filter settings and return to the main panel.

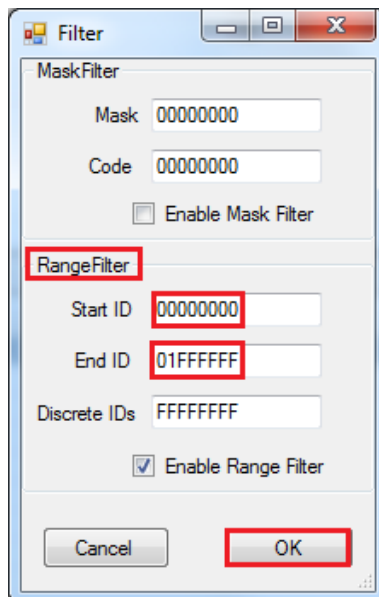

Range Filter example: After setting “Start ID” to 00000000 and “End ID” to 01FFFFFF, The CAN message frames of the range 0x00000000 through 0x01FFFFFF will be passed and all other CAN IDs will be blocked.


The Range Filter can also set “Discrete IDs” to block a unique CAN ID.

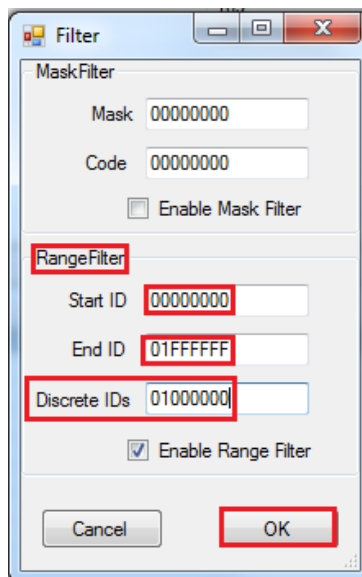


Discrete IDs Filter example: After setting “Start ID” to 00000000, “End ID” to 01FFFFFF and setting “Discrete IDs” to 01000000; The CAN ID range 0x00000000 through 0x01FFFFFF will be passed but only CAN ID 0x01000000 will be blocked.

Click “Reset” option to renew the received CAN frame message and reset the

transmitted (received) count.

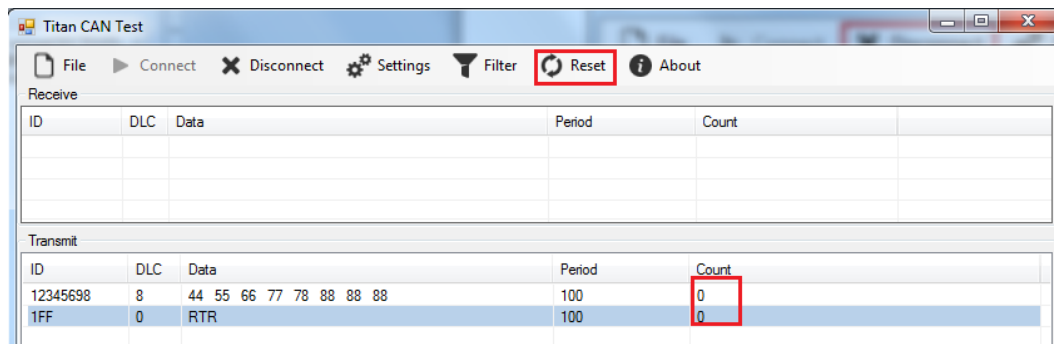

Click “**About**” option to show the version information of Titan CAN test program.

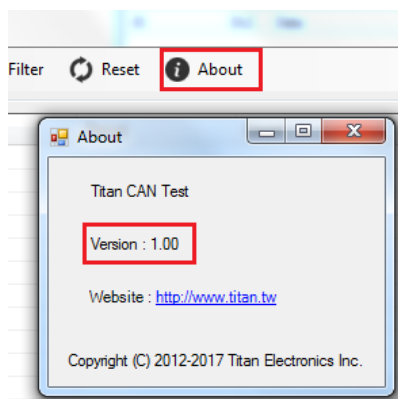

11.3 Using Cyclades-Serial-Client with NCAN devices on Linux

First, set the mode to RFC2217 server mode.

Install the Cyclades-Serial-Client.

Cyclades-Serial-Client can be downloaded and installed from most Linux software repositories using the following command:

```
$ sudo apt-get install cyclades-serial-client
```

Configuring Cyclades-Serial-Client:

Once installed, you can optionally edit the configuration file, `cyclades-devices`, using a text editor.

To view the help file, use: `man cyclades-devices`.

The configuration file is usually located in `/etc/`, so to edit the file using `vi`, you could use this command line:

```
sudo vi /etc/cyclades-devices.
```

The `cyclades-devices` configuration file uses the following format:

```
device: rastype: rasname: physport: type: options
```

device: The local device name, starting with a '/dev/' prefix.

rastype = "prts" or "path"

rasname = IP address of the server

physport = "1"

Type: must be 'rtelnet' for remote Telnet.

Options can be left blank.

Here is an example of a Cyclades Devices configuration file:

```
/dev/ptyp0:prts:192.168.1.100:1:
```

The configuration file can also contain comments, which are lines beginning with a `#` character.

Pseudo device names work best: `/dev/ptypX`, where `X` is a value between 0 and 9, or A and Z.

While any non-standard pseudo device name, such as `/dev/modem`, can be used with Minicom, such names may fail to be accessible by other serial communication applications. Therefore, we recommend using a valid pseudo-device name, such as `/dev/ptyp0`.

The client includes two executables:

`cyclades-serial-cli`: the virtual COM port redirector client.

`cyclades-serial-client`: the client status/management tool.

The cyclades-serial-cli program is designed to be run from init, so that is loaded during boot up. However, doing so will cause it to continuously hold one of the COM port open in NCOM or NCAN device, so it is recommended to run this from a terminal console instead where it can easily be controlled (ie: stopped by pressing Ctrl-C). This is done using the -x command line parameter from a Terminal.

Open a Terminal and type the following command line:

```
sudo cyclades-ser-cli -p 1999 -m 1 -x /dev/ptyp0 192.168.1.100 1
```

Replace the IP address in the command line with the actual IP address (or hostname) of the NCOM or NCAN device.

The most used parameters are defined below:

-p 1999: This must be one less than the NCOM or NCAN device TCP port.

-m 1: Causes the client to ignore the carrier detection signal.

*-x [causes the client to run in foreground console mode when started from a terminal]
/dev/ptyp0: overrides the device name in the configuration file.*

- 192.168.1.100: The IP address (or hostname) of the NCOM or NCAN device.

1 [This should always be 1; a setting of 0 will select TCP port 23].

The client is now running and redirecting data between the pseudo-TTY named /dev/ptyp0 on the Linux box and NCOM or NCAN device.

It is important to use the -p parameter to specify a value that is one less than the TCP port on the NCOM or NCAN device. If NCOM or NCAN device is using TCP port 2000, for example, then the client's command line should always use -p 1999.

The -m 1 parameter should also be used to instruct the client to ignore the Device Carrier Detection (commonly called the CD or DCD line). This is due to a bug in Cyclades-Ser-Cli that causes it to detach the pseudo-TTY from the Telnet/socket connection as soon as the modem server reports that the DCD line is low (set to zero).

This prevents applications from 'hanging up' or knowing when the modem has been disconnected; however, Minicom will still show the user a 'NO CARRIER' message to indicate disconnection. A hang-up can be achieved by closing and restarting cyclades-ser-cli.

11.4 CANopen

CANopen is a CAN-based communication system. It comprises higher-layer protocols and profile specifications. CANopen has been developed as a standardized embedded network with highly flexible configuration capabilities. It was designed originally for motion-oriented machine control systems, such as handling systems. Today it is used in various application fields, such as medical equipment, off-road vehicles, maritime electronics, railway applications, or building automation.

CanFestival project is an open source CANopen multi-platform framework. (<http://www.canfestival.org/>) CanFestival focuses on providing an ANSI-C platform independent CANopen stack that can be implemented as master or slave nodes on PCs, Real-time IPCs, and Microcontrollers.

For detailed information about using CanFestival in your project see the "[The CanFestival CANopen stack manual](#)".

How to get CanFestival

You can get the CanFestival source code from [repository](#). Then get [TITAN CAN driver](#) for CanFestival. Or you can download the code with TITAN driver from [TITAN web site](#).

Linux Compilation and installation

Linux target is default configure target.

Call./configure -help to see all available compile time options.

After invoking ./configure with your platform specific switches, just type make.

./configure --can=titan

make

make install

Windows Compilation

CanFestival can be compiled and run on Windows platform. It is possible to use both Cygwin and win32 native runtime environment.

Minimal Cygwin installation is required at configuration time to create specific header files (config.h and cancfg.h). Once these files created, Cygwin is not necessary anymore. Project and solution files have been created and tested with Visual Studio Express 2005. Be sure to have installed Microsoft Platform SDK, as recommended at the end of Visual Studio installation.

Cygwin must be installed with those packages:

1. gcc
2. unzip
3. wget
4. make

Extract CanFestival source code into your Cygwin home. Then configure CanFestival.

```
cd CanFestival
```

```
./configure --can=titan
```

```
Make
```

Compilation with Visual Studio

You can either load independent “*.vcproj” project’ files along your own projects in your own solution or load the provided “CanFestival-3.vc8.sln” solution files directly. Build CanFestival-3 project first.

The “examples” directory contains some test program you can use as example you’re your own developments.

You'll find an example on the supplied CD showing the communication between master and slave nodes. Following baudrates are supported: 20K, 50K, 100K, 125K, 250K, 500K and 1M.

- CanFestival_example_win_x86.zip For Windows 32 bit
- CanFestival_example_win_x64.zip For Windows 64 bit
- CanFestival_example_linux_x86.tar.gz For Linux 32 bit
- CanFestival_example_linux_x64.tar.gz For Linux 64 bit

Under Windows connect two CAN devices, installed as COM3 and COM4. Open two command windows and change to the directory where examples were extracted to and execute

TestMasterSlave -s COM3 -S 125K -M none -l canfestival_titan.dll


in the first command window and

TestMasterSlave -m COM4 -M 125K -S none -l canfestival_titan.dll

in the second.


Following pictures shows the output messages of both nodes.

Master:

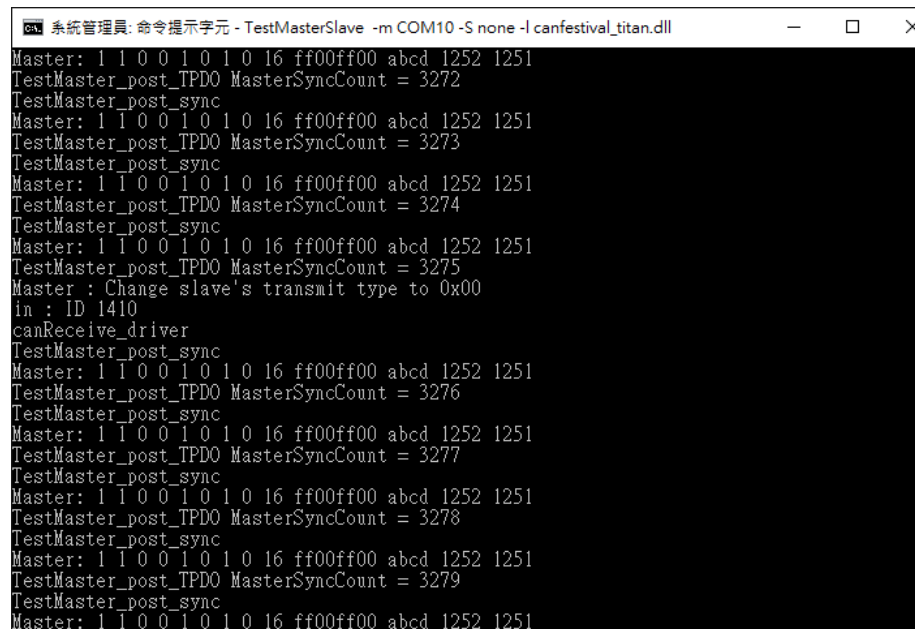

```
系統管理員: 命令提示字元 - TestMasterSlave -m COM10 -S none -l canfestival_titan.dll
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3272
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3273
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3274
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3275
Master : Change slave's transmit type to 0x00
in : ID 1410
canReceive_driver
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3276
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3277
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3278
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
TestMaster_post_TPDO MasterSyncCount = 3279
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 1252 1251
```

Slave:

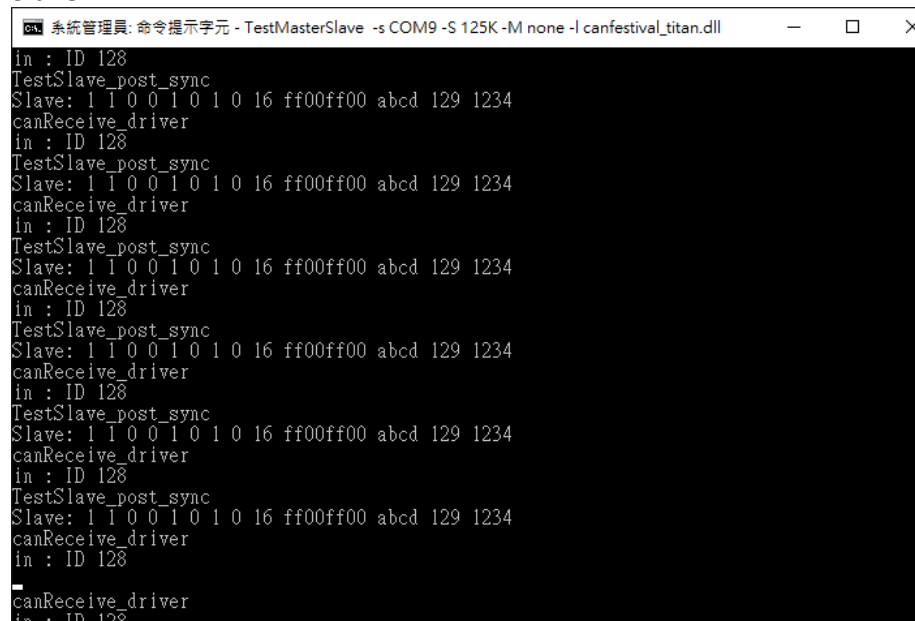

```
系統管理員: 命令提示字元 - TestMasterSlave -s COM9 -S 125K -M none -l canfestival_titan.dll
in : ID 128
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 1234
canReceive_driver
in : ID 128
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 1234
canReceive_driver
in : ID 128
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 1234
canReceive_driver
in : ID 128
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 1234
canReceive_driver
in : ID 128
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 1234
canReceive_driver
in : ID 128
canReceive_driver
in : ID 128
```

Under Linux connect two CAN devices, installed as /dev/ttyUSB0 and /dev/ttyUSB1. Open two terminal windows and change to the directory where examples were extracted to and execute

```
export LD_LIBRARY_PATH=.
```

```
./TestMasterSlave -s "/dev/ttyUSB0" -S 125K -M none -l ./libcanfestival_can_titan.so
```

in the first terminal window and


```
export LD_LIBRARY_PATH=.
```

```
./TestMasterSlave -m "/dev/ttyUSB1" -M 125K -S none- ./libcanfestival_can_titan.so
```

in the second.


Following pictures shows the output messages of both nodes.

Master:

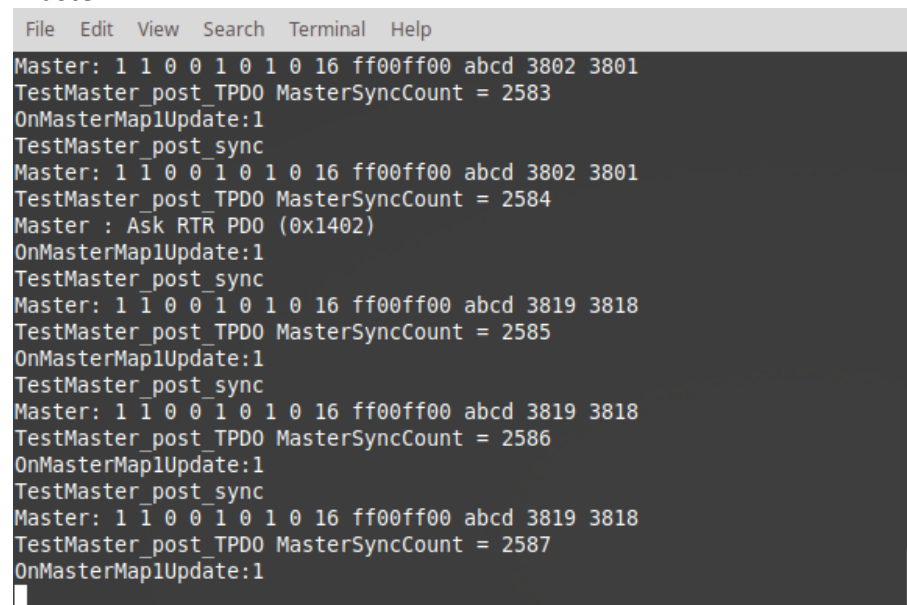

```
File Edit View Search Terminal Help
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 3802 3801
TestMaster_post_TPDO MasterSyncCount = 2583
OnMasterMap1Update:1
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 3802 3801
TestMaster_post_TPDO MasterSyncCount = 2584
Master : Ask RTR PDO (0x1402)
OnMasterMap1Update:1
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 3819 3818
TestMaster_post_TPDO MasterSyncCount = 2585
OnMasterMap1Update:1
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 3819 3818
TestMaster_post_TPDO MasterSyncCount = 2586
OnMasterMap1Update:1
TestMaster_post_sync
Master: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 3819 3818
TestMaster_post_TPDO MasterSyncCount = 2587
OnMasterMap1Update:1
```

Slave:

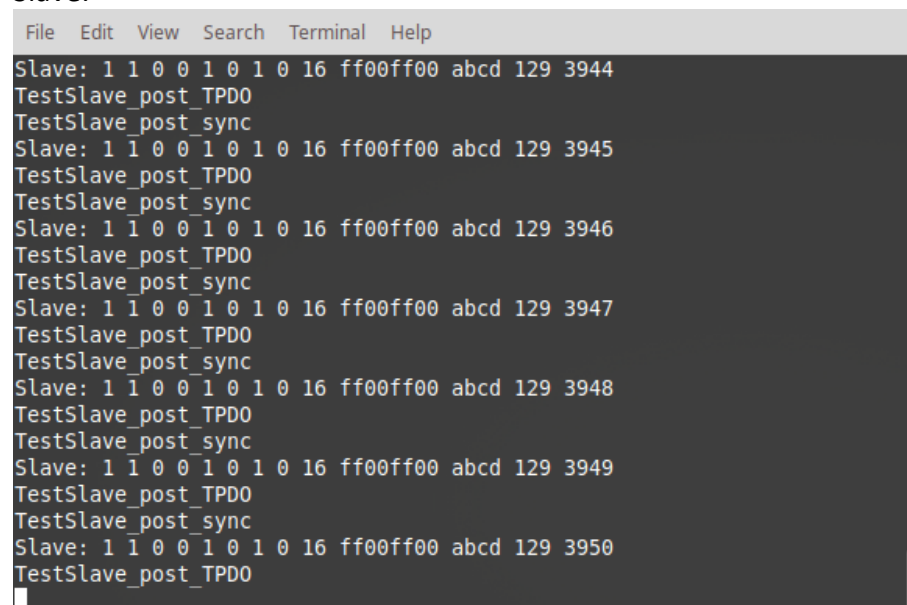

```
File Edit View Search Terminal Help
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3944
TestSlave_post_TPDO
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3945
TestSlave_post_TPDO
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3946
TestSlave_post_TPDO
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3947
TestSlave_post_TPDO
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3948
TestSlave_post_TPDO
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3949
TestSlave_post_TPDO
TestSlave_post_sync
Slave: 1 1 0 0 1 0 1 0 16 ff00ff00 abcd 129 3950
TestSlave_post_TPDO
```

11.5 python-can

The `python-can` library provides Controller Area Network support for Python, providing common abstractions to different hardware devices, and a suite of utilities for sending and receiving messages on a CAN bus.

More information you can find in:

<https://python-can.readthedocs.io/en/master/>

USB-2CAN-M is compatible to `slcan`-interfaces (slcan ASCII protocol)

<https://python-can.readthedocs.io/en/master/interfaces/slcan.html>

11.6 APPLICATION PROGRAMMING INTERFACE

The Application Programming Interface (API) gives the user tools to use all of the functions that the CAN adapter provides. It will make it much easier for users to build their own CAN controlling software with these functions, than to implement their application command by command on the ASCII protocol.

Users can use Windows-based API for use with high-level languages. Please refer to the following website for our GUI, sample codes and updates:

<https://www.titan.tw/drivers/can-api.html>

11.6.1 CAN_Open

CAN_Open(ComPort, szBitrate, acceptance_code, acceptance_mask, flags, Mode)

Function:

Opens a channel to the device.

Parameters:

- ComPort
 - Type: String
 - The COM port to be opened.
 - Format: "COMXXX"
 - Example: "COM1", "COM57", "COM118"

- szBitrate
 - Type: String
 - The bitrate to operate at. Can be one of the standard bitrates or a user-defined non-standard bitrate.
 - Format:
 - 10 = 10Kbps
 - 20 = 20Kbps
 - 50 = 50Kbps
 - 100 = 100Kbps
 - 125 = 125Kbps
 - 250 = 250Kbps
 - 500 = 500Kbps
 - 800 = 800Kbps
 - 1000 = 1000Kbps
 - XXXXXXXXX, non-standard bitrate
 - Example: "50", "1000", "000000150"

- acceptance_code
 - Type: String
 - Used in conjunction with the acceptance mask to filter CAN messages. Set to "00000000" for NULL to allow all messages. Also referred to as acceptance filter in other parts of the manual.
 - Format: "XXXXXXXX"
 - Example: "00000700"

- acceptance_mask
 - Type: String
 - Used in conjunction with the acceptance code to filter CAN messages. Set to "00000000" for NULL to allow all messages.
 - Format: "XXXXXXXX"
 - Example: "000001FF"

- flags
 - Type: IntPtr

- Determines whether or not the timestamp function should be enabled.
 - Format:
 - 1 = Timestamp will be enabled
 - 0 = Timestamp will be disabled
 - Example: 1
- Mode
 - Type: Integer
 - Determines the mode the USB CAN should operate at.
 - Format:
 - 0 = Normal, the device will operate under normal circumstances
 - 1 = Listen only, the device will passively receive CAN messages
 - 2 = Loopback, the device will also receive messages it transmits
 - Example: 2
- Return value:
 - Type: Integer
 - Handle to the device.
 - Result:
 - > 0, CAN_Open is successful
 - -1, error communicating with COM port
 - -2, error in opening channel, COM port may be already in use
 - -3, error in parameter settings
 - Example: 2508

Sample Command:

```
CAN_Open("COM3", "50", "00000000", "00000000", 1, 2)
```

Opens a channel to COM3 at 50kbps, with all messages allowed, timestamp enabled and operating in loopback mode.

11.6.2 CAN_Close

CAN_Close(Handle)

Function:

Closes the channel with the specified handle.

Parameters:

- Handle
 - Type: Integer
 - The handle of the CAN channel to be closed.
 - Format: A numeric value provided by the return value of CAN_Open
 - Example: 2508

- Return value:
 - Type: Integer
 - Code indicating result of CAN_Close.
 - Result:
 - 1, CAN_Close is successful
 - -1, error communicating with COM port
 - -4, error: CAN channel is not open

Sample Command:

CAN_Close(2508)

Closes device connected to channel with the handle 2508.

11.6.3 CAN_Write

CAN_Write(Handle, Buf)

Function:

Writes a message to the channel with the specified handle.

Parameters:

- Handle
 - Type: Integer
 - The handle of the CAN channel to write to.
 - Format: A numeric value provided by the return value of CAN_Open
 - Example: 2508

- Buf¹
 - Type: CAN_MSG structure
 - The standard structure of CAN frame messages.
 - Format: Name of an instance of the CAN_MSG structure
 - Example: myCANMsg

- Return value:
 - Type: Integer
 - Code indicating result of CAN_Write.
 - Result:
 - 1, CAN_Write is successful
 - -1, error communicating with COM port
 - -4, error: CAN channel is not open

Sample Command:

```
CAN_Write(2508, myCANMsg)
```

Writes the message contained in myCANMsg to device connected to channel with the handle 2508.

¹ Refer to the “CAN_MSG Structure” section for more information

11.6.4 CAN_Read

CAN_Read(Handle, Buf)

Function:

Reads a message from the channel with the specified handle.

Parameters:

- Handle
 - Type: Integer
 - The handle of the CAN channel to read from.
 - Format: A numeric value provided by the return value of CAN_Open
 - Example: 2508

- Buf²
 - Type: CAN_MSG structure
 - The standard structure of CAN frame messages.
 - Format: Name of an instance of the CAN_MSG structure
 - Example: myCANMsg

- Return value:
 - Type: Integer
 - Code indicating result of CAN_Read.
 - Result:
 - 1, CAN_Read is successful
 - -1, error communicating with COM port
 - -4, error: CAN channel is not open
 - -5, error: there are no messages

Sample Command:

```
CAN_Read(2508, myCANMsg)
```

Reads the message from device connected to channel with the handle 2508 and stores it into myCANMsg.

² Refer to the “CAN_MSG Structure” section for more information

11.6.5 CAN_Flush

CAN_Flush(Handle)

Function:

Clears the buffers of the channel with the specified handle.

Parameters:

- Handle
 - Type: Integer
 - The handle of the CAN channel whose buffers are to be cleared.
 - Format: A numeric value provided by the return value of CAN_Open
 - Example: 2508

- Return value:
 - Type: Integer
 - Code indicating result of CAN_Flush.
 - Result:
 - 1, CAN_Flush is successful
 - -1, error communicating with COM port
 - -4, error: CAN channel is not open

Sample Command:

CAN_Flush(2508)

Clears the buffers of device connected to channel with the handle 2508.

11.6.6 CAN_Status

CAN_Status(Handle)

Function:

Checks the status bits for more specific details when an error occurs.

Parameters:

- Handle
 - Type: Integer
 - The handle of the CAN channel whose status bits are to be inquired.
 - Format: A numeric value provided by the return value of CAN_Open
 - Example: 2508

- Return value:
 - Type: Integer
 - Code indicating result of CAN_Status.
 - Result:
 - Bit [2, 1, 0]
 - 0, 0, 0: no error
 - 0, 0, 1: stuff error
 - 0, 1, 0: form error
 - 0, 1, 1: ACK error
 - 1, 0, 0: Bit1Error
 - 1, 0, 1: Bit0Error
 - 1, 1, 0: CRCError
 - 1, 1, 1: unused
 - Bit [3]
 - 1: message successfully transmitted
 - 0: no message has been transmitted
 - Bit [4]
 - 1: message successfully received
 - 0: no message has been received
 - Bit [5]
 - 1: CAN core is in error passive state
 - 0: CAN core is in error active state
 - Bit [6]
 - 1: at least one error counter in EML has reached the warning limit of 96
 - 0: both error counters are below the warning limit of 96
 - Bit [7]
 - 1: CAN module is in bus-off state
 - 0: CAN module is not in bus-off state
 - <BELL> = ERROR

Sample Command:

CAN_Status(2508)

Checks the status bits of device connected to channel with the handle 2508.

11.6.7 CAN_Version

CAN_Version(Handle, buf)

Function:

Retrieves the firmware version of the device connected to channel with the specified handle.

Parameters:

- Handle
 - Type: Integer
 - The handle of the CAN channel whose version information is to be inquired.
 - Format: A numeric value provided by the return value of CAN_Open
 - Example: 2508

- buf
 - Type: Character array/string
 - Information about the firmware version will be stored into this array.
 - Format: Name of a character array
 - Example: myVersion

- Return value:
 - Type: Integer
 - Code indicating result of CAN_Version.
 - Result:
 - 1, CAN_Version is successful
 - -1, error communicating with COM port
 - -4, error: CAN channel is not open

Sample Command:

CAN_Version(2508)

Retrieves the firmware version of device connected to channel with the handle 2508.

CAN_MSG Structure

- Members:
 - Id
 - Type: Unsigned Integer
 - Message ID.
 - Format: XXX (standard), XXXXXXXX (extended)
 - Example: 1FF
 - Size
 - Type: Byte
 - Message size.
 - Format: A numeric value from 0~8
 - Example: 8
 - Data
 - Type: Byte array with 8 elements
 - Content of the data to be sent/received.
 - Format: XX
 - Example: 11
 - Flags
 - Type: Byte
 - Determines the message ID type and timestamp settings.
 - Format:
 - 1, timestamp off, standard
 - 2, timestamp off, extended
 - 9, timestamp on, standard
 - 10, timestamp on, extended
 - Example: 9
 - Timestamp
 - Type: Unsigned Short
 - Value of the timestamp.
 - Format: No input from the user is required
 - Example: 0
- Sample Message:
 - With a CAN_MSG structure instance declared as myCANMSG:
 - myCANMSG.ID = 1FF
 - myCANMSG.Size = 3
 - myCANMSG.Data(0) = 11
 - myCANMSG.Data(1) = 22
 - myCANMSG.Data(2) = 33
 - myCANMSG.Flags = 10

Example Code for C

```
#include <stdio.h>
#include <stdlib.h>
#include "CAN_API.h"

int main() {
    TCAN_HANDLE Handle;
    TCAN_STATUS Status;
    CHAR *ComPort = "COM23";
    CHAR *szBitrate = "800";
    CHAR *acceptance_code = "1FFFFFFF";
    CHAR *acceptance_mask = "00000000";
    VOID *flags = CAN_TIMESTAMP_OFF;
    DWORD Mode = LoopBack;

    char version[10];
    CAN_MSG SendMSG;
    CAN_MSG RecvMSG;
    Handle = -1;
    Status = 0;

    SendMSG.Flags = CAN_FLAGS_EXTENDED;
    SendMSG.Id = 0x12345678;
    SendMSG.Size = 8;
    SendMSG.Data[0] = 0x11;
    SendMSG.Data[1] = 0x22;
    SendMSG.Data[2] = 0x33;
    SendMSG.Data[3] = 0x44;
    SendMSG.Data[4] = 0x55;
    SendMSG.Data[5] = 0x66;
    SendMSG.Data[6] = 0x77;
    SendMSG.Data[7] = 0x88;

    Handle = CAN_Open ( ComPort, szBitrate, acceptance_code,
acceptance_mask, flags, Mode );

    printf ( "handle= %d\n", Handle );
    if ( Handle < 0 ) {
        return 0;
    }

    memset ( version, 0, sizeof ( char ) * 10 );
    Status = CAN_Flush ( Handle );
    Status = CAN_Version ( Handle, version );

    if ( Status == CAN_ERR_OK ) {
        printf ( "Version : %s\n", version );
    }
}
```

```

Status = CAN_Write ( Handle, &SendMSG );
if ( Status == CAN_ERR_OK ) {
    printf ( "Write Success\n" );
}

while ( 1 ) {
    Status = CAN_Read ( Handle, &RecvMSG );
    if ( Status == CAN_ERR_OK ) {
        printf ( "Read ID=0x%X, Type=%s, DLC=%d, FrameType=%s,
Data=",
RecvMSG.Id,( RecvMSG.Flags & CAN_FLAGS_STANDARD ) ?
"STD" : "EXT",
RecvMSG.Size,( RecvMSG.Flags & CAN_FLAGS_REMOTE ) ?
"REMOTE" : "DATA" );

        for ( int i = 0; i < RecvMSG.Size; i++ ) {
            printf ( "%X,", RecvMSG.Data[i] );
        }
        break;
    }
}

Status = CAN_Close ( Handle );
printf ( "Test finish\n" );
return 0;
}

```

11.7 Using the API in C#

1. Ensure that the DLL file is placed in the same folder as your application executable.
2. Import the functions you need from the DLL into your source code with the Declare statement:

```
[DllImport("can_api.dll", EntryPoint = "CAN_Open", CallingConvention = CallingConvention.Cdecl)]
```

```
    static extern Int32 CAN_Open(string SerialNrORComPortORNet, string szBitrate, string acceptance_code, string acceptance_mask, Int32 flags, UInt32 Mode);
```

3. Create a definition of the CAN_MSG structure for the CAN_Write and CAN_Read functions, if needed.

```
public struct CAN_MSG
{
    public UInt32 Id;
    public byte Size;
    [MarshalAs(UnmanagedType.ByValArray, SizeConst = 8)]
    public byte[] Data;
    public byte Flags;
    public UInt16 TimeStamp;
}
```

The keyword `MarshalAs` is used for all structure members to ensure that the structure size corresponds to what the DLL expects.

4. In order to communicate with the channel with other functions after opening it with `CAN_Open`, you need to create a variable to store the handle value.

```
Int myHandle;
myHandle = CAN_Open(("COM3", "50", "00000000", "00000000", 1, 2);
```

5. This concludes the basic setup process of using the DLL in C#. Imported functions can then be easily called from the DLL with the parameters created above.

11.8 Using the API in Visual Basic .NET

6. Ensure that the DLL file is placed in the same folder as your application executable.
7. Import the functions you need from the DLL into your source code with the Declare statement:

```
Private Declare Function CAN_Open Lib "CANDLL_STDCALL.dll" (ByVal ComPort As String, ByVal szBtrate As String, ByVal acceptance_code As String, ByVal acceptance_mask As String, ByVal Ref Flags As IntPtr, ByVal Mode As Integer) As Integer
```

8. Create a definition of the CAN_MSG structure for the CAN_Write and CAN_Read functions, if needed.

```
Imports System.Runtime.InteropServices
```

```
Public Structure CAN_MSG
    <MarshalAs(UnmanagedType.U4)>
    Public Id As UInteger
    <MarshalAs(UnmanagedType.U1)>
    Public Size As Byte
    <MarshalAs(UnmanagedType.ByValArray, SizeConst:=8,
ArraySubType:=UnmanagedType.U1)>
    Public Data As Byte()
    <MarshalAs(UnmanagedType.U1)>
    Public Flags As Byte
    <MarshalAs(UnmanagedType.U2)>
    Public Timestamp As UShort
End Structure
```

The keyword `MarshalAs` is used for all structure members to ensure that the structure size corresponds to what the DLL expects.

To use the `CAN_MSG` structure, you will need to create an instance of the structure you just defined.

```
Private myCANMSG As CAN_MSG
```

Before accessing this instance you just created for the first time, set the size for the `Data` member to avoid “array out of bounds” error. This can be done in your program’s constructor.

```
ReDim myCANMSG(7)
```

9. In order to communicate with the channel with other functions after opening it with `CAN_Open`, you need to create a variable to store the handle value.

Private myHandle As Integer

```
myHandle = CAN_Open(("COM3", "50", "00000000", "00000000", 1, 2)
```

10. This concludes the basic setup process of using the DLL in Visual Basic .NET. Imported functions can then be easily called from the DLL with the parameters created above.

11.9 Using the API in Visual Basic 6.0

1. Ensure that the DLL file is placed in the same folder as your application executable.
2. Import the functions you need from the DLL into your source code with the Declare statement:

```
Private Declare Function CAN_Open Lib "CANDLL_STDCALL.dll" (ByVal ComPort As String, ByVal szBaudrate As String, ByVal acceptance_code As String, ByVal acceptance_mask As String, ByVal Flags As Long, ByVal Mode As Long) As Long
```

3. Create a definition of the CAN_MSG structure for the CAN_Write and CAN_Read functions, if needed.

```
Private Type CAN_MSG  
    Id As Long  
    Size As Byte  
    Data(0 To 7) As Byte  
    Flags As Byte  
    Timestamp As Integer  
End Type
```

To use the CAN_MSG structure, you will need to create an instance of the structure you just defined.

```
Private myCANMSG As CAN_MSG
```

4. In order to communicate with the channel with other functions after opening it with CAN_Open, you need to create a variable to store the handle value.

```
Private myHandle As Long  
myHandle = CAN_Open(("COM3", "50", "00000000", "00000000", 1, 2)
```

5. This concludes the basic setup process of using the DLL in Visual Basic 6.0. Imported functions can then be easily called from the DLL with the parameters created above.

11.10 Using the API in Python

6. Ensure that the DLL file is placed in the same folder as your application executable.
7. Import the DLL using the ctypes library function LoadLibrary.

```
from ctypes import windll
```

```
DLL = windll.LoadLibrary("CANDLL_STDCALL.dll")
```

8. Create a definition of the CAN_MSG structure for the CAN_Write and CAN_Read functions, if needed.

```
from ctypes import Structure, c_uint, c_ubyte, c_ushort
```

```
class CAN_MSG(Structure):  
    _fields_ = [("Id", c_uint),  
                ("Size", c_ubyte),  
                ("Data", c_ubyte * 8),  
                ("Flags", c_ubyte),  
                ("Timestamp", c_ushort)]
```

To use the CAN_MSG structure, you will need to create an instance of the structure you just defined.

```
myCANMSG = CAN_MSG()
```

9. In order to communicate with the channel with other functions after opening it with CAN_Open, you need to create a variable to store the handle value.

```
myHandle = DLL.CAN_Open(b"COM3", b"50", b"00000000", b"00000000", 1, 2)
```

10. This concludes the basic setup process of using the DLL in Python. Imported functions can then be easily called from the DLL with the parameters created above.

11.11.2 CAN_Open.vi

Description


Opens a channel to the device.

Input

- ComPort: The COM port to establish a connection with.
- szBitrate: The speed at which the connection is to be made, with preset values of 10, 20, 50, 100, 125, 250, 500, 800, 100
- acceptance_code: Used for filtering CAN messages. To be used with the acceptance mask.
- acceptance_mask: Used for filtering CAN messages. To be used with the acceptance code.
- Flags: Whether or not the timestamp function should be enabled.
- Mode: The mode at which the device should operate at, with choices being Normal, Listen Only and Loopback

Output

- Return: Handle to the device. A positive value indicates success in opening the channel, while -2 represents error when opening channel and -3 represents error in input parameters

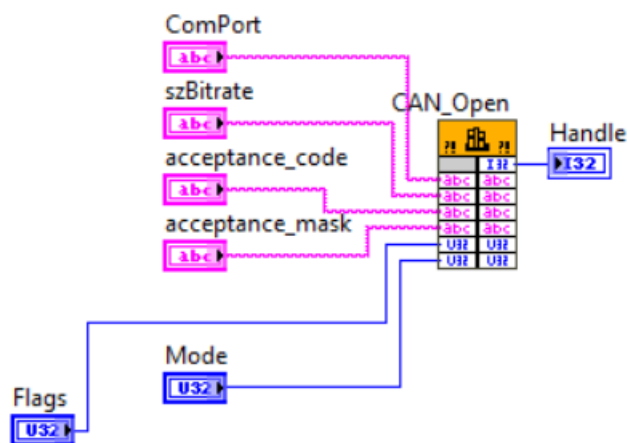

11.11.3 CAN_Close.vi

Description


Closes the CAN channel with the specified handle.

Input

- Handle: The handle of the CAN channel which is to be closed

Output

- Return: A positive value indicates success in closing the channel, whereas a negative value indicates an error in closing the channel.



11.11.4 CAN_Write.vi

Description


Writes a message to the CAN channel with the specified handle.

Input

- Handle: The handle of the CAN channel which the message is to be sent to.
- Id: Message ID.
- Size: Frame size (0~8).
- Data[8]: Data bytes 0~7.
- Flags: 1 (standard), 2 (extended), 9 (standard + timestamp), 10 (extended + timestamp)
- Timestamp: Timestamp (ms)

Output

- Return: A positive value indicates success in sending the message, whereas a negative value indicates an error in sending the message, with -4 representing that the channel is not open.

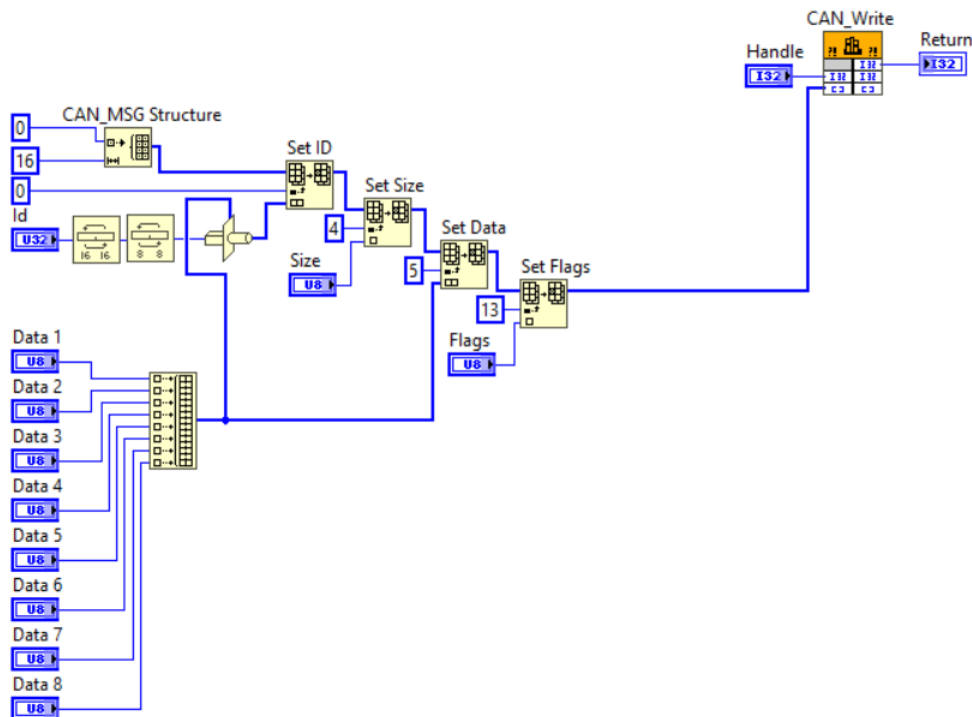

11.11.5 CAN_Read.vi

Description

Read a message from the CAN channel with the specified handle.

Input

- Handle: The handle of the CAN channel which the message is to be read from.

Output

- Return: A positive value indicates success in reading the message, whereas a negative value indicates an error in reading the message, with -4 representing that the channel is not open and -5 representing that there is no message to be read.
- Id: Message ID.
- Size: Frame size (0~8).
- Data[8]: Data bytes 0~7.
- Flags: 1 (standard), 2 (extended), 9 (standard + timestamp), 10 (extended + timestamp)

Timestamp: Timestamp (ms).

